 
 


DIMENSIONS WITH VALVE AND VACUUM SWITCH

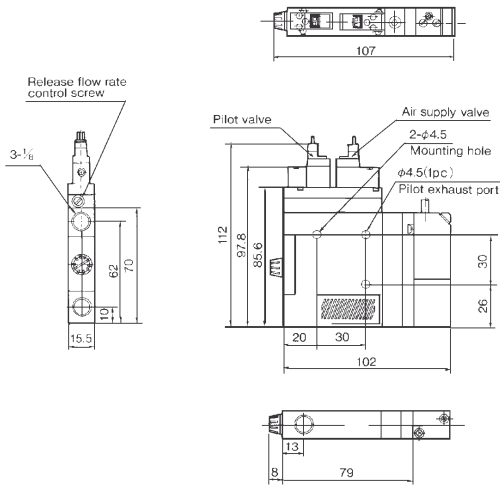

SYSTEM CIRCUIT

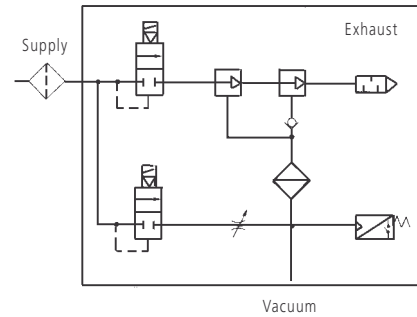

How To ORDER NZM VACUUM EJECTOR WITH VALVES AND SWITCH

(N)ZM — — — — — H-K5LZ — — — — —

 
VOLTAGE
524VDC
612VDC

VACUUM SWITCH
NilWithout
E15L Solid State (NPN)
E55L Solid State (PNP)
M21L Reed
M15L Non-Contact

PORT THREAD
NilPT* Remove (N) when
ordering
TNPTF

TYPE
1Body Ported
3Manifold Type - Common SUP
5Manifold Type - Individual SUP

DIMENSIONS NZM VACUUM EJECTOR MANIFOLD

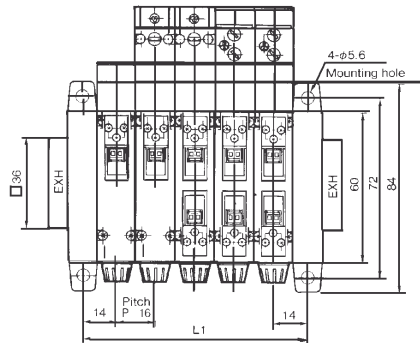

SERIES NZM VACUUM EJECTOR MANIFOLD

- ✓ 1 - 10 Stations
- ✓ Common supply and exhaust
- ✓ Maintenance and adjustment is possible without disassembly of the manifold



How To ORDER NZM VACUUM EJECTOR MANIFOLD

(N)ZM — — — — — B

NUMBER OF STATIONS
01 ... 1 Station
02 ... 2 Stations
to
10 ... 10 Stations

EXHAUST PORT
04 ... 1/2
06 ... 3/4

PORT THREAD
NilPT* Remove (N) when ordering
TNPTF

EXHAUST ADAPTOR LOCATION
BBoth Ends

Fitted with an Optional Silencer Series NAN:
see section Air Preparation Accessories

n	1	2	3	4	5	6	7	8	9	10
L1	28	44	60	76	92	108	124	140	156	172
L2	40	56	72	88	104	120	136	152	168	184
L3	50	72	88	104	120	136	152	168	184	200