
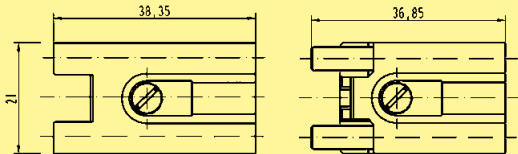
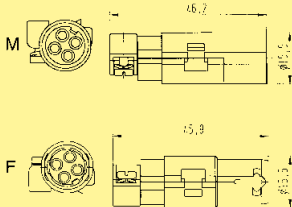


4 contacts + shielding
+ 2 power contacts
suitable in Han® 3 A metric
hoods and housings




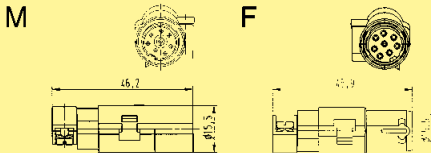


Identification	Part number		Drawing	Dimensions in mm
	Male insert (M)	Female insert (F)		
Quintax insert 	09 15 003 3001	09 15 003 3101		

Identification	Wire gauge (mm²)	Part number		Drawing	Dimensions in mm
		Male contact	Female contact		
Han-Quintax® contact 4 + shielding Han D® crimp contacts 		09 15 004 3013	09 15 004 3113		
Han D® Crimp contact gold plated 	0,14-0,37 0,5 0,75 1 1,5 2,5	09 15 000 6124 09 15 000 6123 09 15 000 6125 09 15 000 6122 09 15 000 6121 09 15 000 6126	09 15 000 6224 09 15 000 6223 09 15 000 6225 09 15 000 6222 09 15 000 6221 09 15 000 6226		

High Density Quintax contact 8 + shielding Han® D-Sub contacts 		09 15 008 3013	09 15 008 3113		
D-Sub crimp contact 	0,08-0,21 0,13-0,33 0,33-0,52	61 03 000 0078 61 03 000 0094 61 03 000 0073	61 03 000 0080 61 03 000 0096 61 03 000 0074		


Stock items in bold type

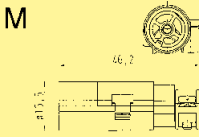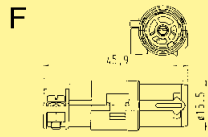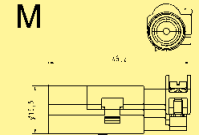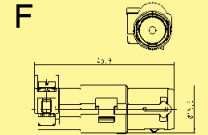Identification	Wire gauge (mm ²)	Part number Male contact	Part number Female contact	Drawing	Dimensions in mm
Han D® Coax contact 75 Ω 1 + shielding, 75 Ω Han D® crimp contacts 		09 15 001 3013	09 15 001 3113	M  F 	
Han D® Crimp contact gold plated 	0,14-0,37 0,5 0,75 1 1,5 2,5	09 15 000 6124 09 15 000 6123 09 15 000 6125 09 15 000 6122 09 15 000 6121 09 15 000 6126	09 15 000 6224 09 15 000 6223 09 15 000 6225 09 15 000 6222 09 15 000 6221 09 15 000 6226		
Han E® Coax contact 50 Ω 1 + shielding, 50 Ω Han E® crimp contacts 		09 15 001 3023	09 15 001 3123	M  F 	
Han E® contacts gold plated 	0,14-0,37 0,5 0,75 1 1,5 2,5 4 5,5	09 33 000 6117 09 33 000 6122 09 33 000 6115 09 33 000 6118 09 33 000 6116 09 33 000 6123 09 33 000 6119 09 33 000 6139	09 33 000 6217 09 33 000 6222 09 33 000 6215 09 33 000 6218 09 33 000 6216 09 33 000 6223 09 33 000 6221 09 33 000 6239		

Assembly instructions

Quintax-Z-contact

- Strip cable acc. to drawing 1 and fold the shielding over the cable.
- Crimp Han D® contacts onto the wires.

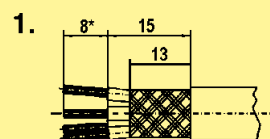

- Insert Han D® contacts into corresponding cavities of insulator until they are snapped in.
- Fit the insert including the cable into the opened shielded bushing. The coding pin of the shielded bushing has to meet the groove of the insulator.
- Clamp the tilt over the shielding onto the cable by means of the special clamp (small opening for cable diameter of 3 - 6 mm, large opening for cable diameter of 6 - 9.5 mm).
- Check the wiring.
- Close the shielded bushing with the cover and insert it into the corresponding cavity of the Quintax Module as usual.

