

Air Management System

CE UK
CA

cUL[®] US

Sustainability – Condition Based Maintenance - Digitalization

RoHS

*1 Refer to the "How to Order" page of each series for details on compliant models.

Monitors the machine standby conditions (when production stops) and automatically decreases the pressure. Reduces unnecessary air consumption



Standby regulator

Switch pressure between operation and standby

Air management hub

Flow rate, pressure, and temperature sensing
Communication function

**Air consumption:
Max. 62%*1 reduction**

p. 1

*1 In SMC conditions:
Maximum reduction ratio within product specifications
(at 0.7 MPa operating pressure and 0.2 MPa low pressure)

Compatible with  p. 2

Direct connection enables data communications.

Compatible with  EtherNet/IP[®] and EtherCAT[®]

Compatible with SMC wireless systems p. 3

- Communication cables not required
- High security using unique encryption
- Communication distance: Max. 100 m

New

- EtherCAT has been added as a communication protocol.
- Made to order added. p. 56-1
 - Without residual pressure relief 3-port solenoid valve specification (-X101)
 - Without standby regulator specification (-X102)



Video

AMS20/30/40/60 Series

 CAT.ES100-155B[®]

Why not reduce the wasted air generated by your factory equipment?




Blow and purge in equipment standby



Leakage from cylinder
due to worn seals


Reduce air consumption by lower pressure during equipment standby **Standby mode**

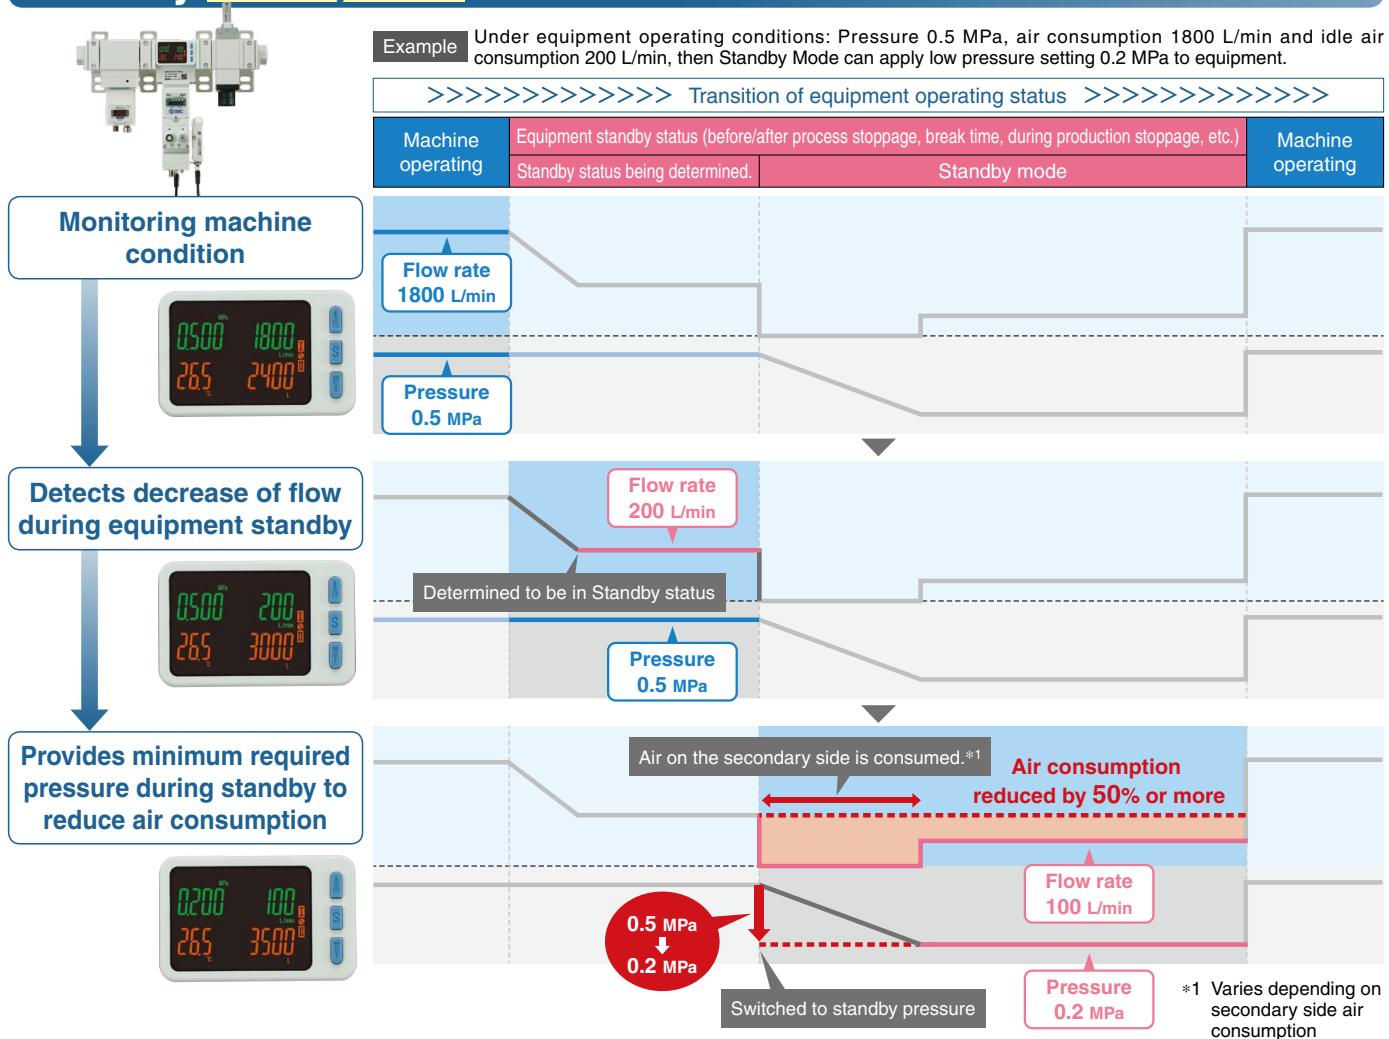

Reduce air consumption by shutting off valves depending on equipment shutdown conditions **Isolation mode**

Residual pressure exhaust valve allows further reduction of air consumption by shutting off the air supply.

Automatic isolation mode is also provided that can be turned off after a set time from standby mode.

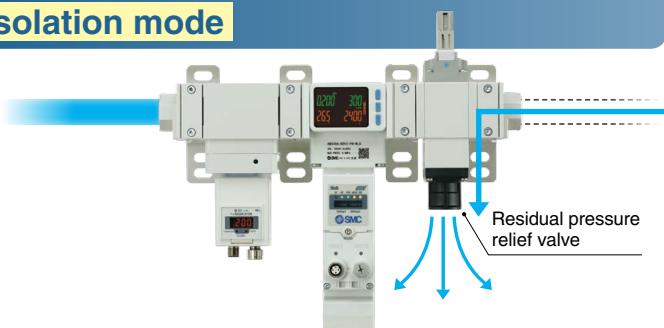


Visualization of production equipment status

Flow, pressure, temperature, and other sensor information can be communicated to the host system via Industrial Ethernet or the OPC UA data communication protocol.




Equipment status can be monitored from another location or from outside the office.

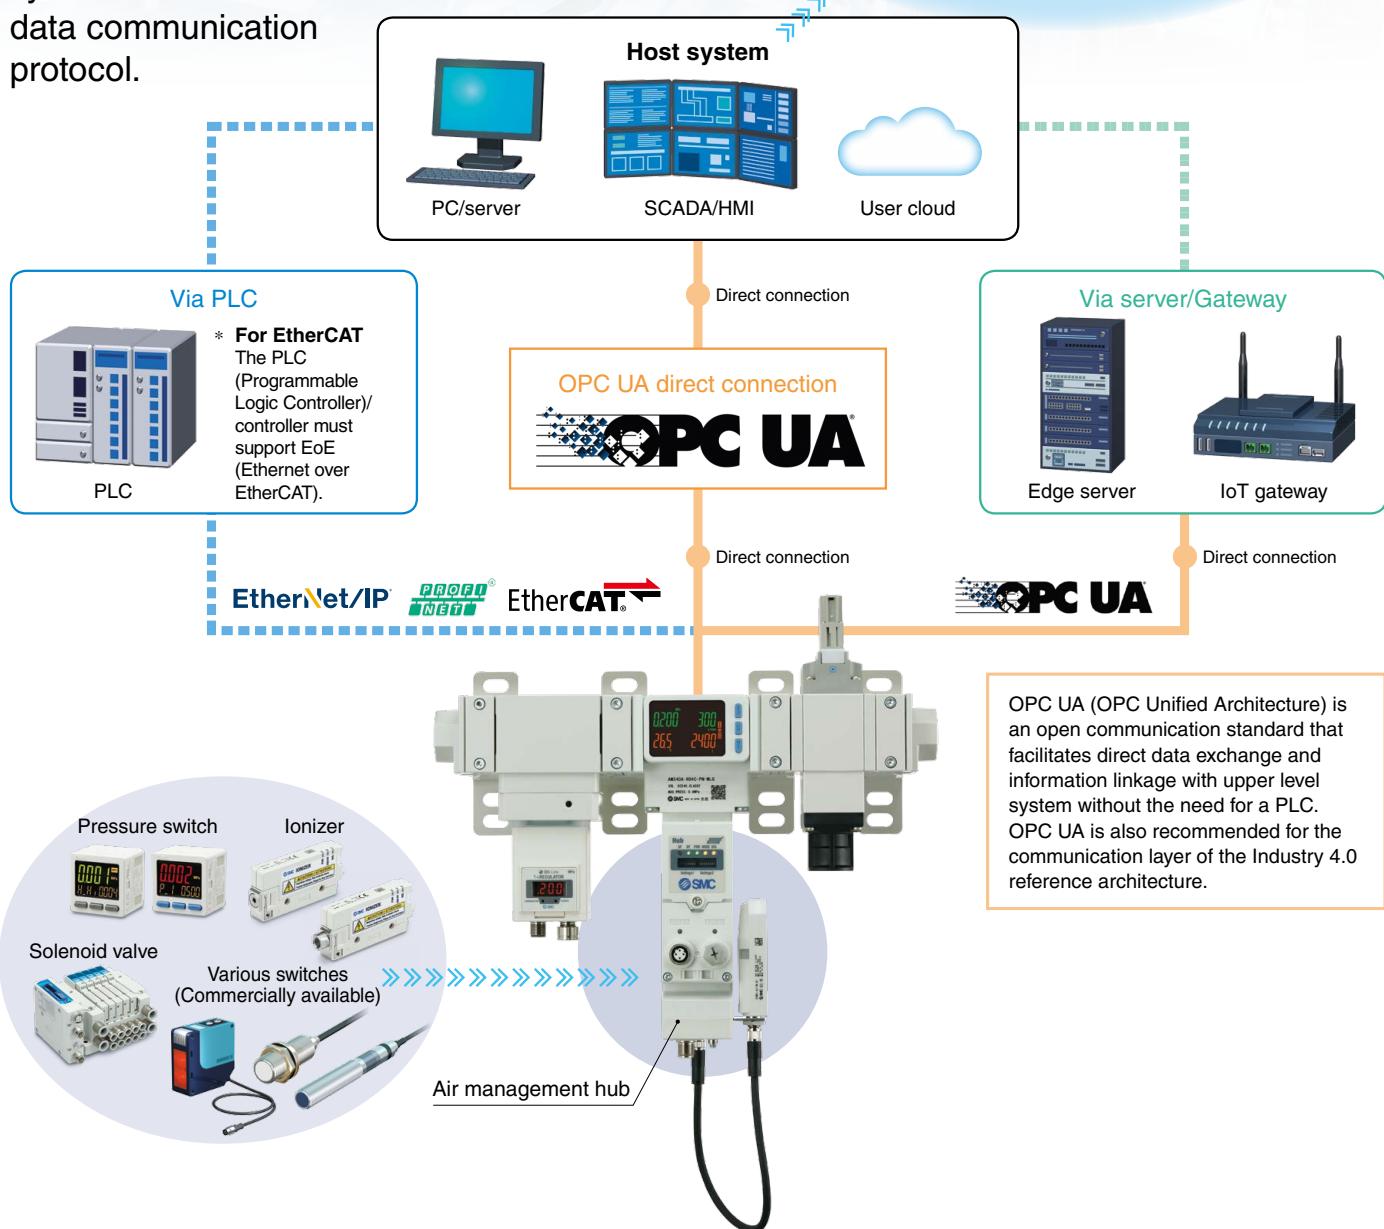


IO-Link compatible

IO-Link port on the back of the air management hub

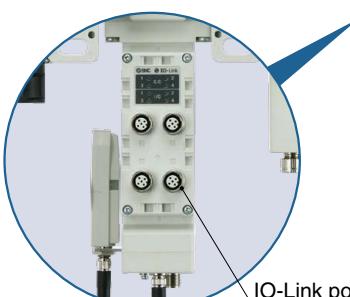

Examples of IoT applications with Air Management System

Remote monitoring and control is possible.

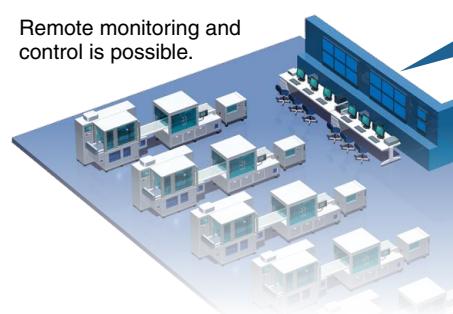


Transmission of "pressure," "flow rate," and "temperature" information possible

Pressure	0.450 [MPa]
Flow rate	1794 [L/min]
Temperature	24.9 [°C]

Compatible with SMC wireless systems*1


*1 When connecting a wireless adapter (sold separately)

- No communication cable required between the base and remote
 - Reduced wiring work, space, and cost
 - Minimized disconnection risk
- Connectivity to up to 10 remotes (AMS20/30/40/60 or compact wireless module)

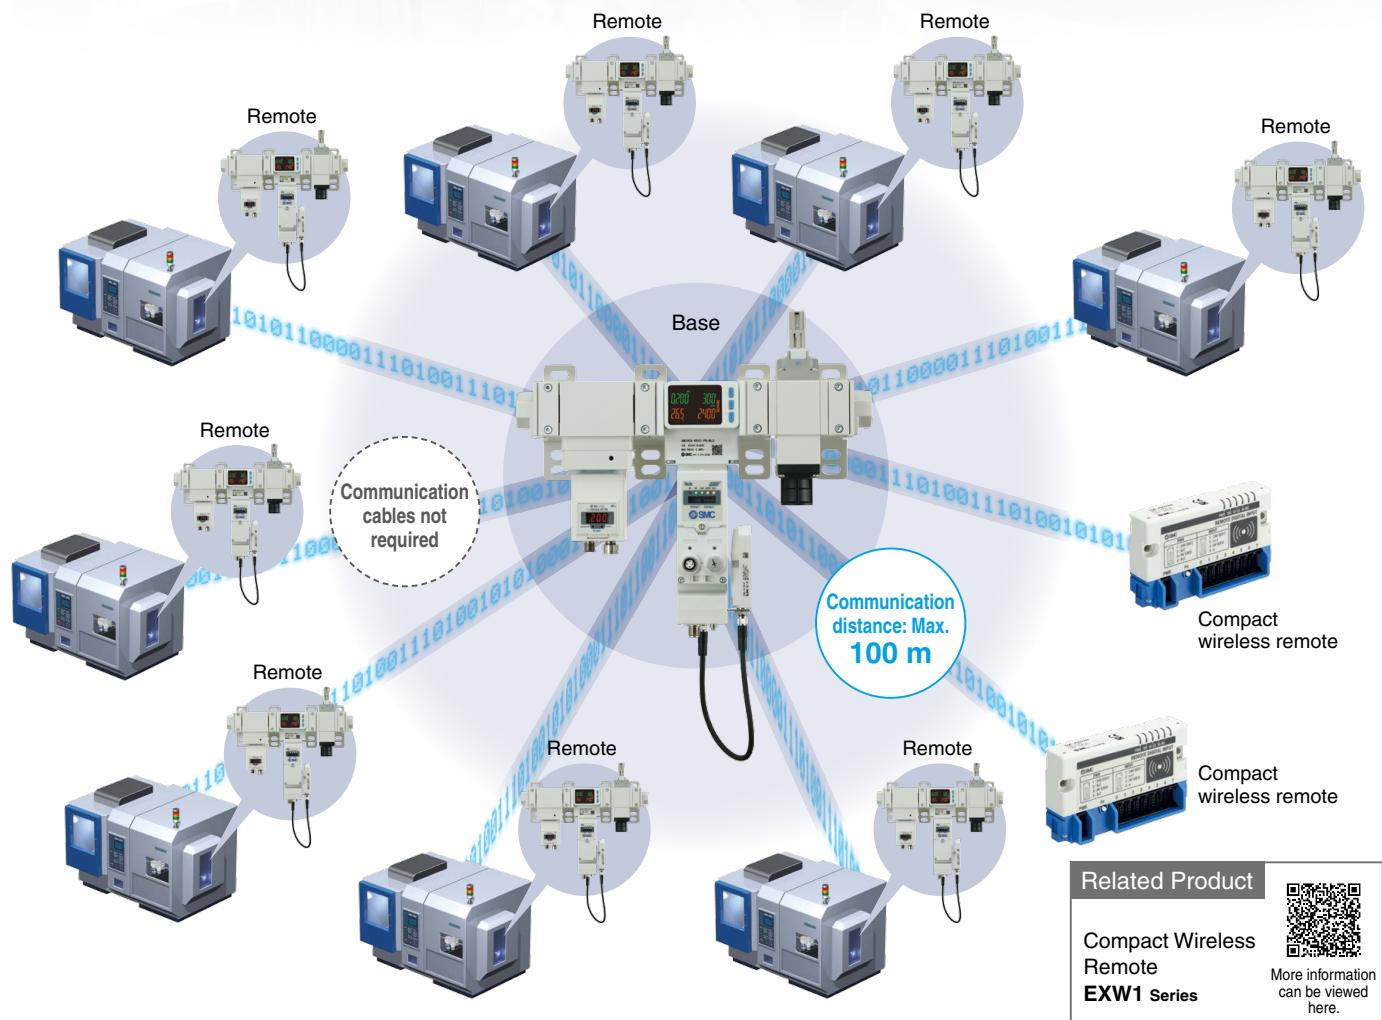


High security using encryption

Unauthorized access is prevented by using data encryption.

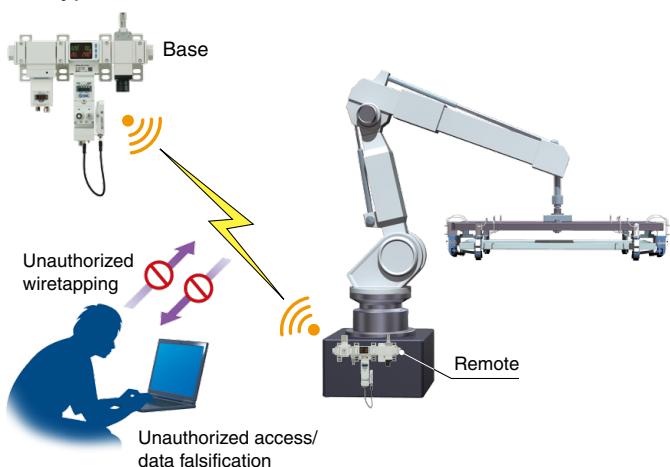

Retrofitted to existing equipment

Can be introduced by OPC UA or the wireless system without connecting to a PLC or changing the program. Modular type F.R.L combination can be connected.

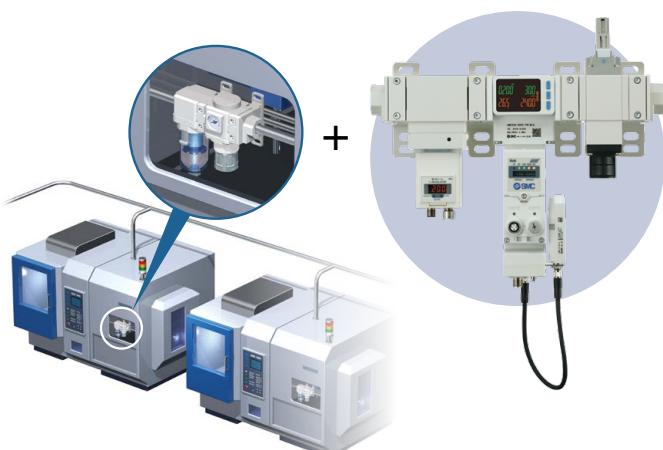

System Configuration

Series	Size	Port size					Flow capacity [L/min]							Communication protocol	Output data		
		1/8	1/4	3/8	1/2	3/4	1	5	10	20	40	500	1000	2000	4000		
Electro-Pneumatic Regulator Type AMS20A/30A/40A/60A Series	20	●	●													<ul style="list-style-type: none"> PROFINET EtherNet/IP™ EtherCAT OPC UA 	<ul style="list-style-type: none"> Instantaneous flow Accumulated flow Pressure Fluid temperature Various sensor information transmitted via IO-Link Diagnosis
	30	●	●	●													
	40		●	●													
	60			●	●												
Regulator Type AMS20B/30B/40B/60B Series	20	●	●														
	30	●	●	●													
	40		●	●													
	60			●	●												


Components

Air Management Hub

When connected to a wireless adapter, it has the ability to communicate with upper level system and wireless communication. Standby regulator and residual pressure exhaust valve are connected to control the air management system.



Upper Communication Type

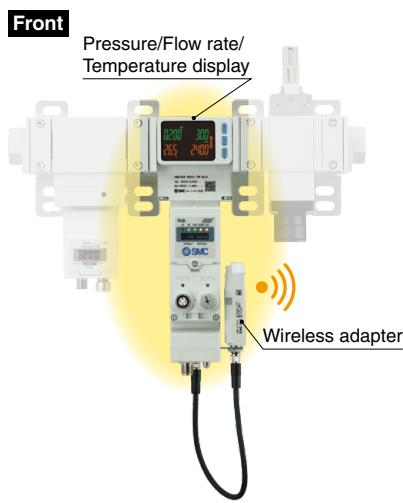

- Industrial Ethernet



- Data communication protocol




- * Not compatible with EtherCAT

- IO-Link master function



Back The back shape and dimensions are the same for both upper level communication and stand-alone operation types.

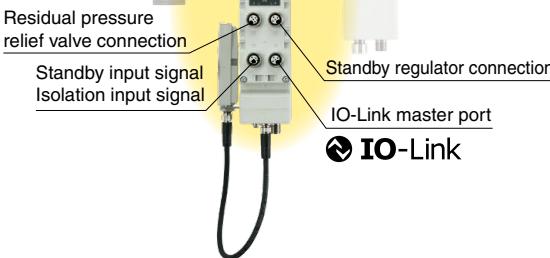

- Wireless base function
(When wireless adapter is connected)

Stand-alone Operation Type



- Wireless remote function
(When wireless adapter is connected)

EtherNet/IP



EtherCAT



Trademark

EtherNet/IP® is a registered trademark of ODVA, Inc.

EtherCAT® is registered trademark and patented technology, licensed by Beckhoff Automation GmbH, Germany.

Components

Standby Regulator

Based on the signal from the air management hub, the operating mode shifts to standby mode and regulates the pressure to the standby pressure.

The non-relief type allows efficient use of air by not exhausting secondary-side air during the standby mode transition.



Electro-Pneumatic Regulator Type

(ITV series/For the AMS20A/30A/40A/60A series)



Pressure display, etc.

- Remote pressure setting and switching during equipment startup/shutdown
- Select from normally closed or normally open.
- With backflow function
- With pressure ramp up duration setting function
- With a solenoid valve overdrive prevention time setting function

Regulator Type


(ARS series/For the AMS20B/30B/40B/60B series)



- Manual pressure setting and switching during equipment shutdown (Equipment operating pressure is not changed.)
- Normally open specification
- With backflow function

Residual Pressure Relief Valve

Based on the signal from the air management hub, the operating mode shifts to isolation mode.

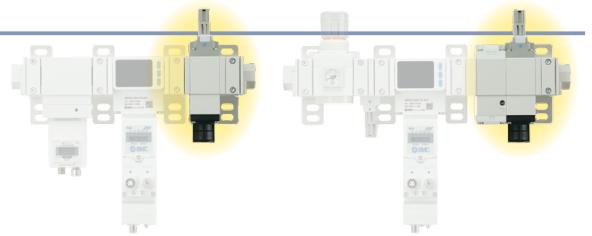

Without Soft Start-up Function

(For the AMS20A/30A/40A/60A series)



- Block the air supply to the secondary side.
- Select from normally closed or normally open.

With Soft Start-up Function

(For the AMS20B/30B/40B/60B series)



- Block the air supply to the secondary side.
- Slow air ramp-up when equipment is restarted
- Select from normally closed or normally open.

CONTENTS

Air Management System AMS20/30/40/60 Series



Accessories	p. 47
① Wireless Adapter	p. 48
② Power Supply Cable [M8 connector, For EXW1-A11N, With connectors on both sides (socket/plug)]	p. 48
③ Power Supply Cable (M12 connector, For EXA1)	p. 49
④ Connection Cable for Standby Regulator/Residual Pressure Relief Valve [With M12 angle connectors on both sides (male/female)]	p. 49
⑤ Communication Cable	p. 50

Related Products	p. 56
Specific Product Precautions	p. 57

Air Management System

Electro-Pneumatic Regulator Type

AMS20A/30A/40A/60A Series

How to Order	p. 7
Standard Specifications	p. 8

Air Management System

Regulator Type

AMS20B/30B/40B/60B Series

How to Order	p. 13
Standard Specifications	p. 14

Flow Rate Characteristics	p. 9, 15
---------------------------------	----------

Dimensions

Electro-Pneumatic Regulator Type	p. 17
Regulator Type	p. 19

Air Management Hub

EXA1 Series

How to Order	p. 21
Specifications	p. 22
Dimensions	p. 23

Standby Electro-Pneumatic Regulator

ITV2050 to 3050-X399

How to Order	p. 25
Specifications	p. 25
Dimensions	p. 26

Standby Regulator

AR20S to 50S Series

How to Order	p. 28
Specifications	p. 28
Dimensions	p. 29

Residual Pressure Relief 3-Port Solenoid Valve

VP346E/546E/746E/946E-X660/X661

How to Order	p. 30
Specifications	p. 30
Dimensions	p. 31

⑥ Connection cable and connector for connection component (Standby input signal/Isolation input signal/IO-Link device/ Input device/Output device) (M12)	p. 52
⑦ Seal Cap (10 pcs.)	p. 52
⑧ Piping Adapter	p. 53
⑨ Spacer with Bracket	p. 53
⑩ Silencer	p. 54
⑪ Marker (1 sheet, 88 pcs.)	p. 54
⑫ Wireless Adapter Mounting Bracket	p. 55
⑬ IO-Link Device Tool License Key	p. 55

AMS20A/30A/
40A/60AAMS20B/30B/
40B/60B

EXA1

ITV2050 to 3050
-X399

AR20S to 50S

VP346E/546E/746E/
946E-X660/X661

Accessories

Related
ProductsSpecific Product
Precautions

Air Management System


Electro-Pneumatic Regulator Type

AMS20A/30A/40A/60A Series





Symbol

N.C.

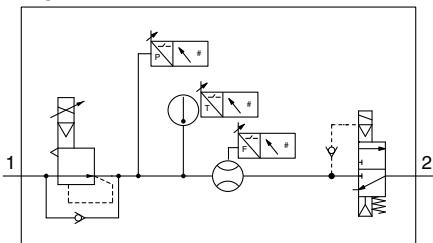

N.O.

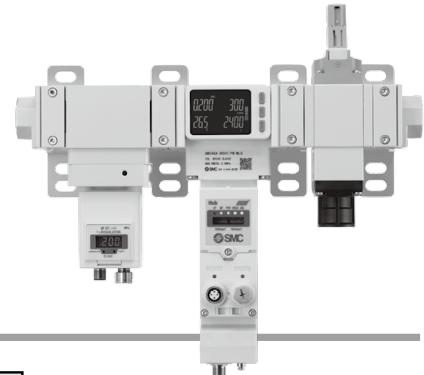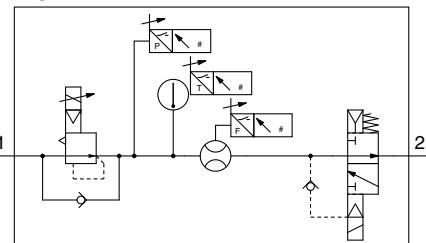

How to Order

AMS **40** A - **F** **04** **C** - **PN** - **M** **L** **G** -

1

2

3

4

5

6

7



Made to order
p. 56-1

X101	Without residual pressure relief 3-port solenoid valve
X102	Without standby regulator

		Symbol	Description		1	
					Body size	
			20	30	40	60
②	Pipe thread type	R	Rc			
		N	NPT			
		F	G			
		H	Without attachments			
+						
③	Port size	01	1/8	●	—	—
		02	1/4	●	●	—
		03	3/8	—	●	●
		04	1/2	—	—	●
		06	3/4	—	—	●
		10	1	—	—	●
		00	Without attachments	●	●	●
+						
④	Electro-Pneumatic regulator, Residual pressure relief 3-port solenoid valve	C	N.C. (Normally closed)	●	●	●
		D	N.O. (Normally open)	●	●	●
+						
⑤	Air management hub	Protocol	SA	Standalone (When wireless adapter is connected*3: Wireless remote)		
			PN	PROFINET, OPC UA (When wireless adapter is connected*3: Wireless base)		
			EN	EtherNet/IP™, OPC UA (When wireless adapter is connected*3: Wireless base)		
			EC	EtherCAT*4 (When wireless adapter is connected*3: Wireless base)		
+						
⑥	Electro-Pneumatic regulator, Air management hub	Unit	K*1	EXA1/ITV: Units selection function		
			M*2	EXA1/ITV: SI units only		
+						
⑦	Residual pressure relief 3-port solenoid valve	Manual override	G	Non-locking push type		
			E	Push-turn locking type (Manual)		

*1 Applies to overseas destinations only

*2 Fixed units Instantaneous flow: L/min

Accumulated flow : L

Pressure : kPa, MPa

Temperature : °C

*3 The wireless adapter is sold separately. (Refer to page 48.)

*4 EtherCAT is not compatible with OPC UA. In addition, the PLC (Programmable Logic Controller)/controller must support EoE (Ethernet over EtherCAT).

* The connection cable for the standby electro-pneumatic regulator/residual pressure relief valve is connected.

Standard Specifications: Electro-Pneumatic Regulator Type

Model	AMS20A	AMS30A	AMS40A	AMS60A
Component ^{*1}	Standby electro-pneumatic regulator	ITV2050-20	ITV2050-30	ITV3050-40
	Air management hub	EXA1-20	EXA1-30	EXA1-40
	Residual pressure relief 3-port solenoid valve	VP346E	VP546E	VP746E
Port size	1/8, 1/4	1/4, 3/8	3/8, 1/2	3/4, 1
Fluid	Air			
Rated flow range	5 to 500 L/min	10 to 1000 L/min	20 to 2000 L/min	40 to 4000 L/min
Ambient and fluid temperatures	0 to 50°C			
Proof pressure	1.0 MPa			
Max. operating pressure	0.8 MPa			
Supply pressure range	0.3 to 0.8 MPa			
Set pressure range	0.2 to 0.7 MPa			
Standby pressure range	0.2 to 0.4 MPa			
Power supply voltage	24 VDC ±10%			
Current consumption	500 mA or less			
Input/Output	DI x 2 DI, DO IO-Link, DI			
Enclosure	IP65 (Electrical equipment part only)			
Weight	2200 g	2500 g	3800 g	5800 g

*1 Refer to the table below for the single unit specifications of the components.

- Standby electro-pneumatic regulator p. 25
- Air management hub p. 21
- Residual pressure relief 3-port solenoid valve p. 30

AMS20A/30A/
40A/60A

AMS20B/30B/
40B/60B

EXA1

ITV2050 to 3050
-X399

AR20S to 50S

VP346E/546E/746E/
946E-X660/X661







Accessories

Related
Products







Specific Product
Precautions

AMS20A/30A/40A/60A Series

Flow Rate Characteristics (Representative values): AMS20A/Electro-Pneumatic Regulator Type

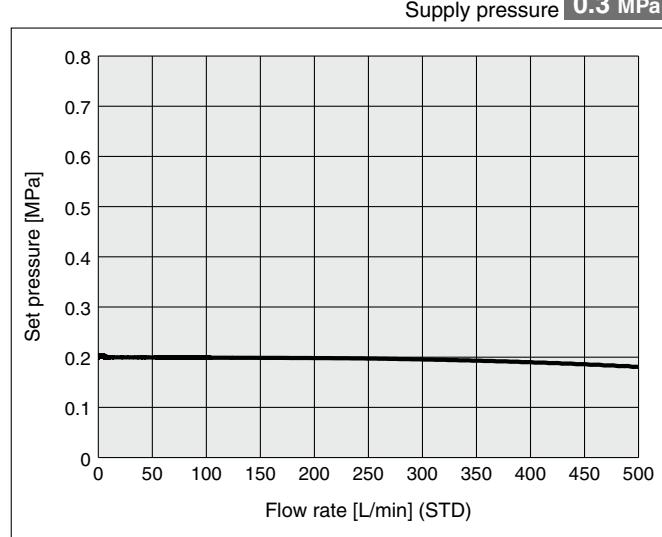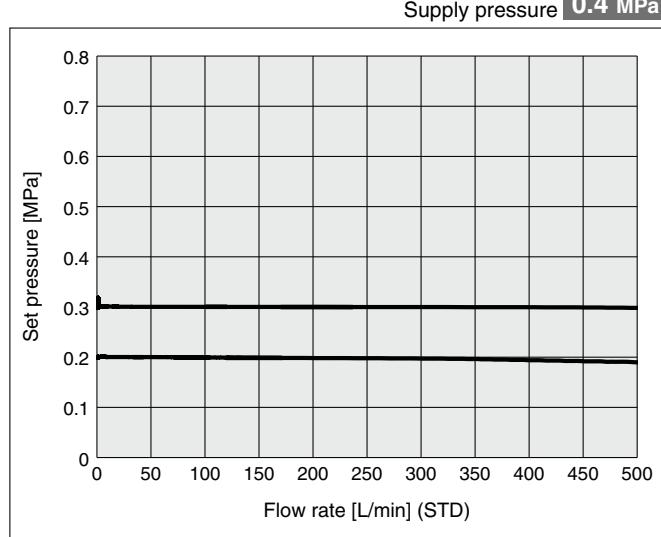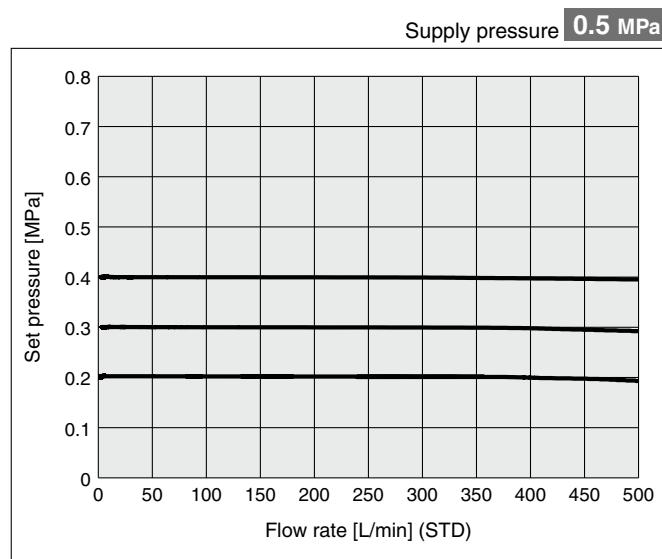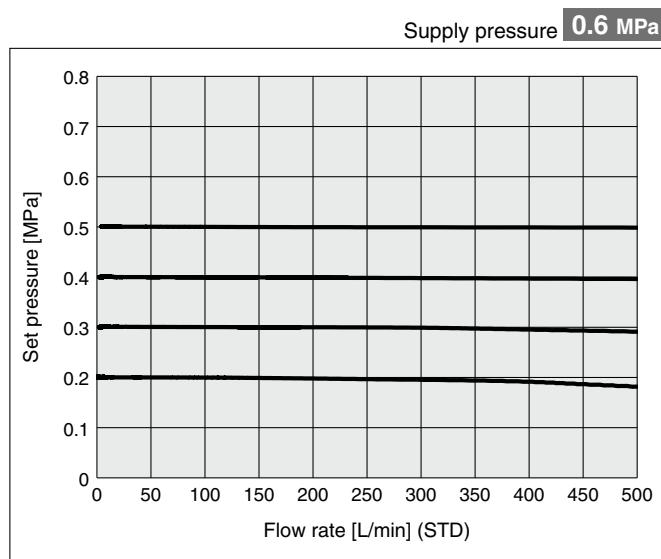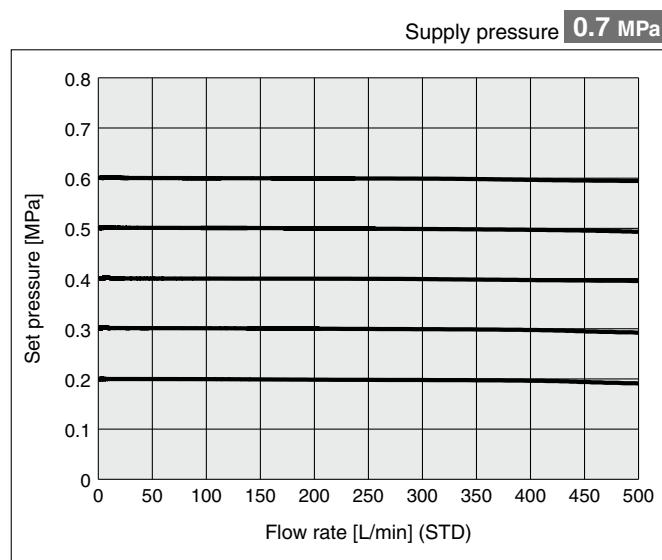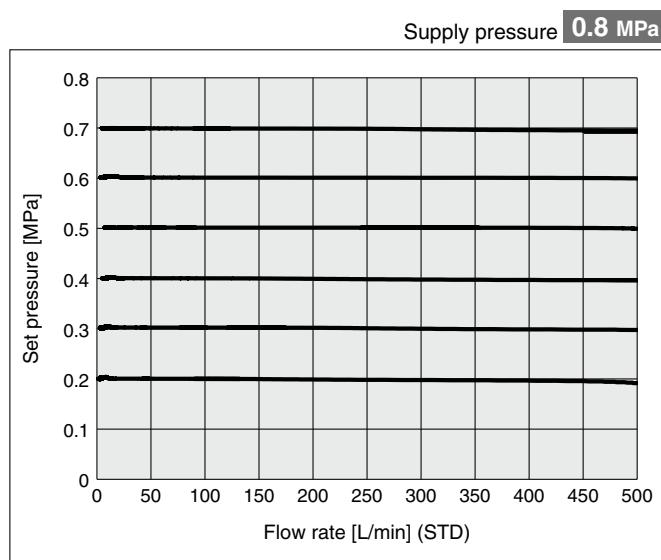

Flow Rate Characteristics (Representative values): **AMS30A/Electro-Pneumatic Regulator Type**

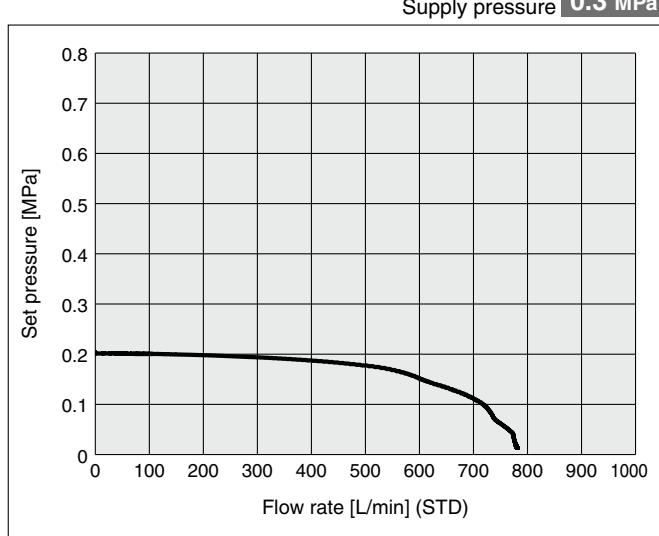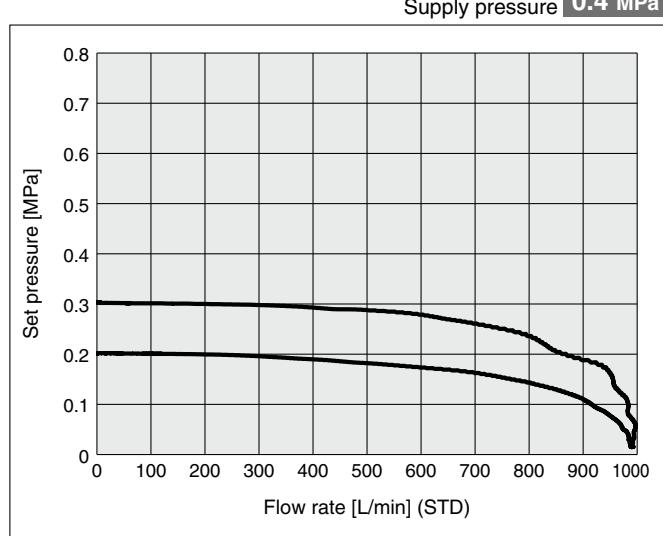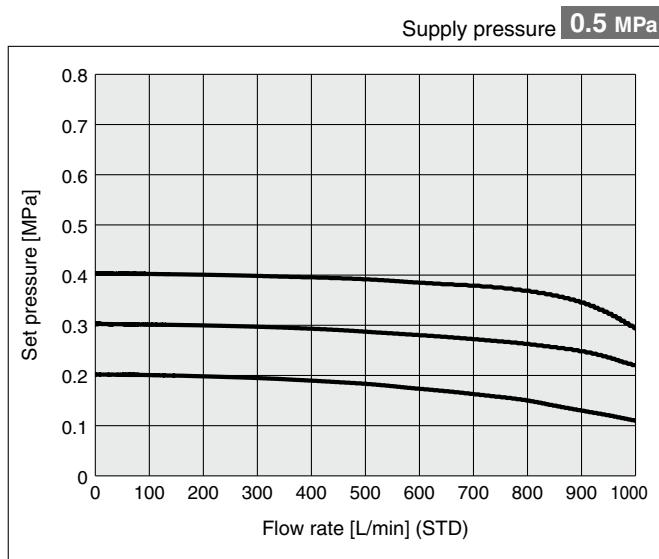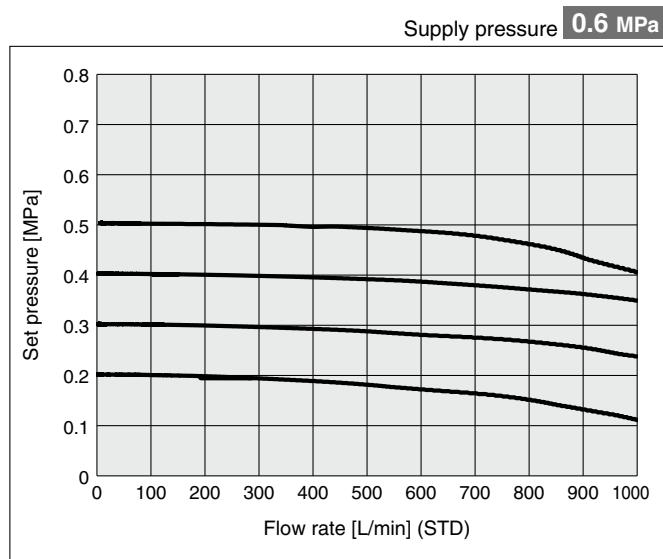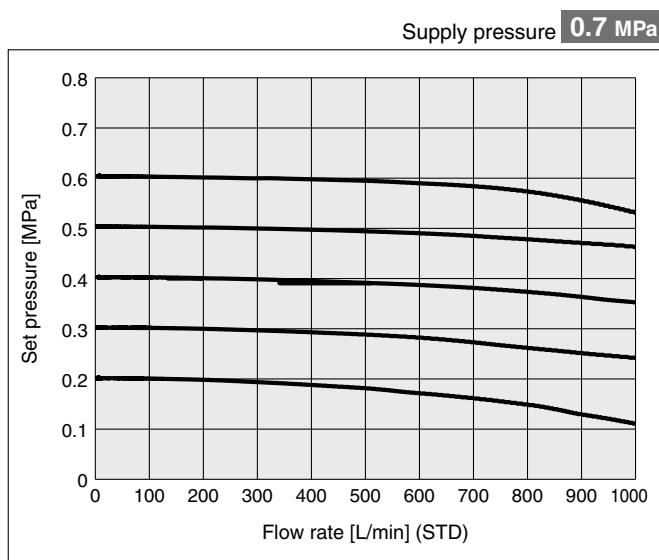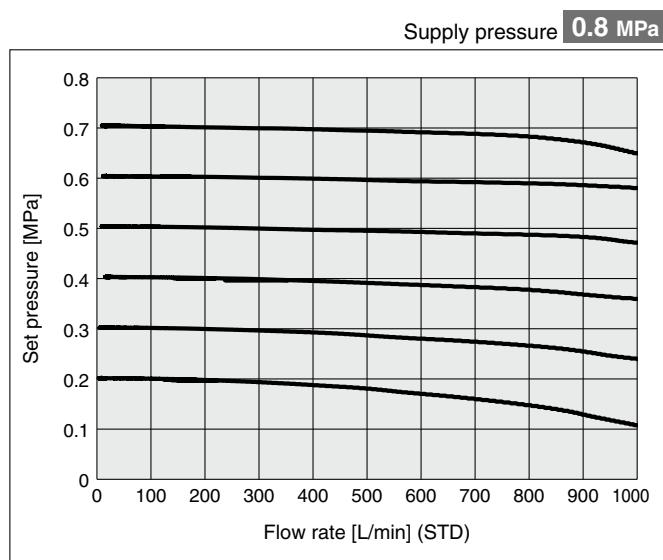

AMS20A/30A/
40A/60A

AMS20B/30B/
40B/60B

EXA1

ITV2050 to 3050
-X399

AR20S to 50S

VP346E/546E/746E/
946E-X660/X661







Accessories

Related
Products







Specific Product
Precautions

AMS20A/30A/40A/60A Series

Flow Rate Characteristics (Representative values): AMS40A/Electro-Pneumatic Regulator Type

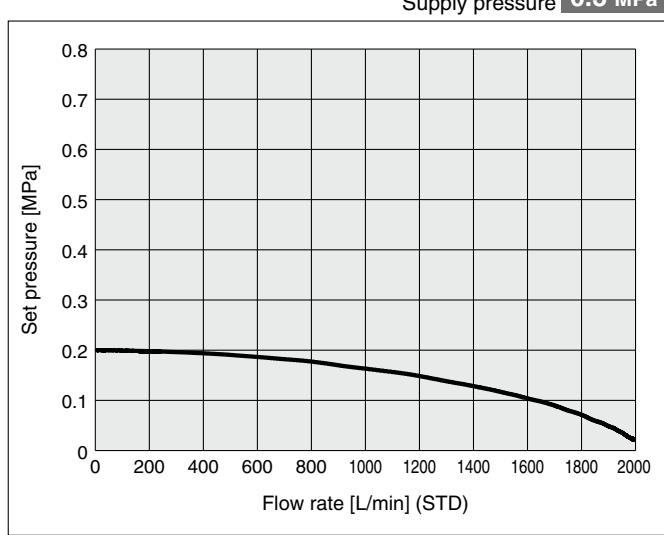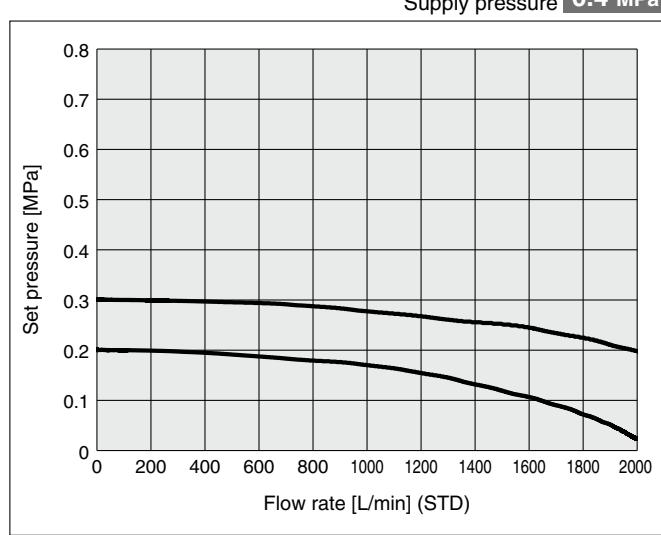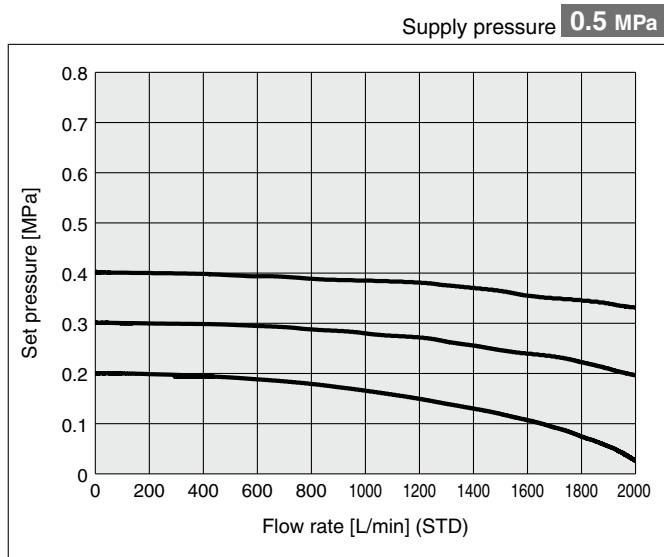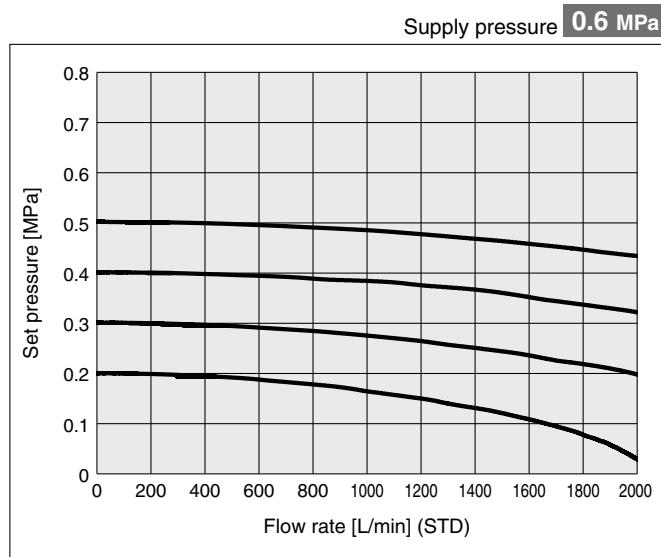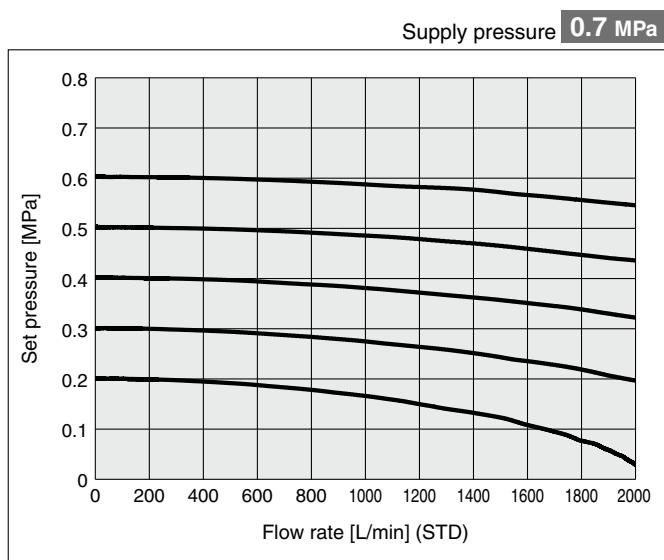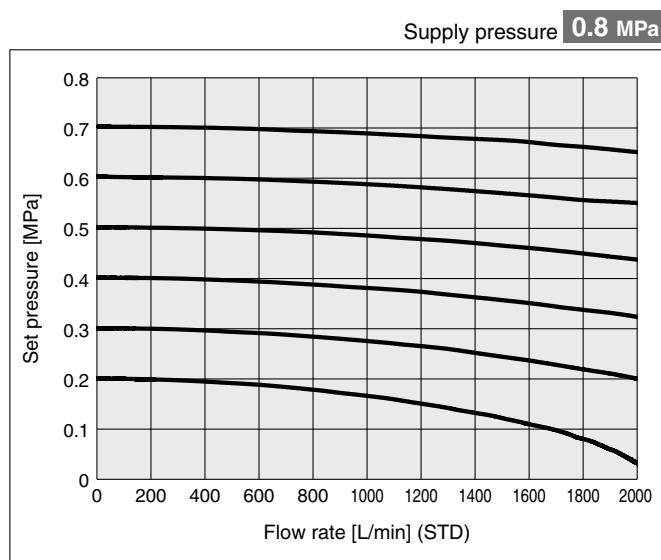

Flow Rate Characteristics (Representative values): **AMS60A/Electro-Pneumatic Regulator Type**

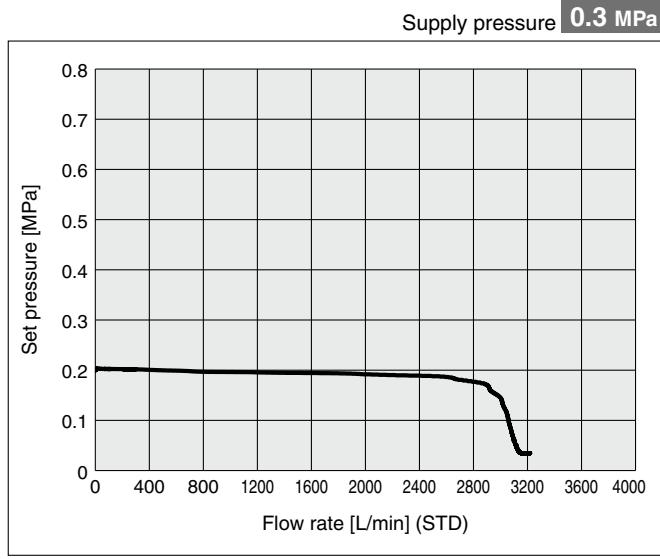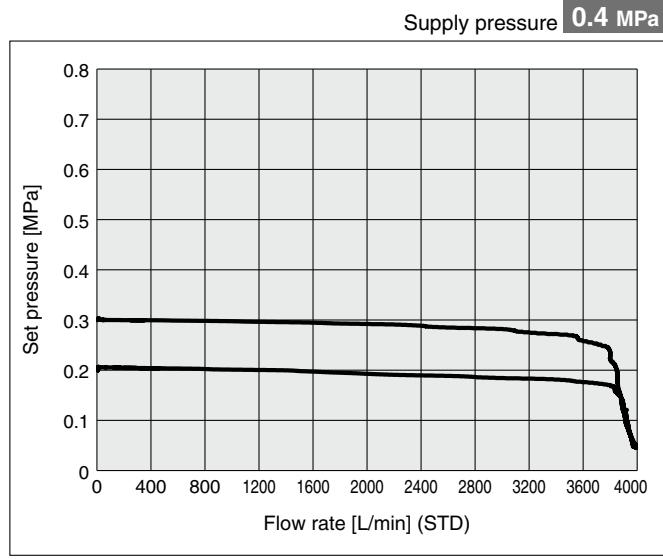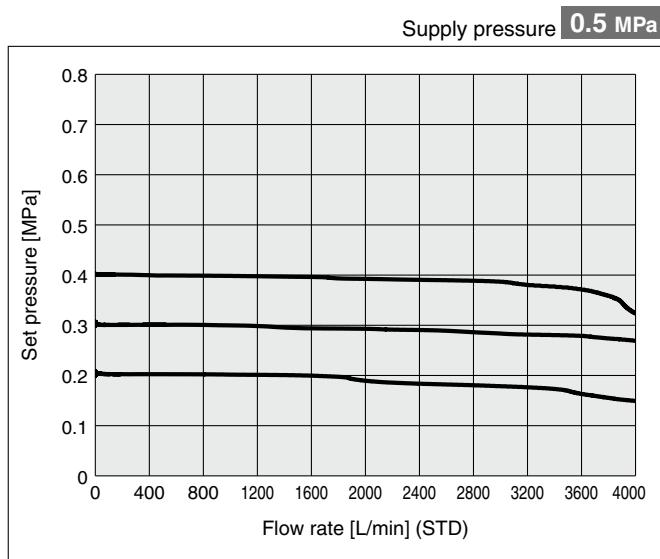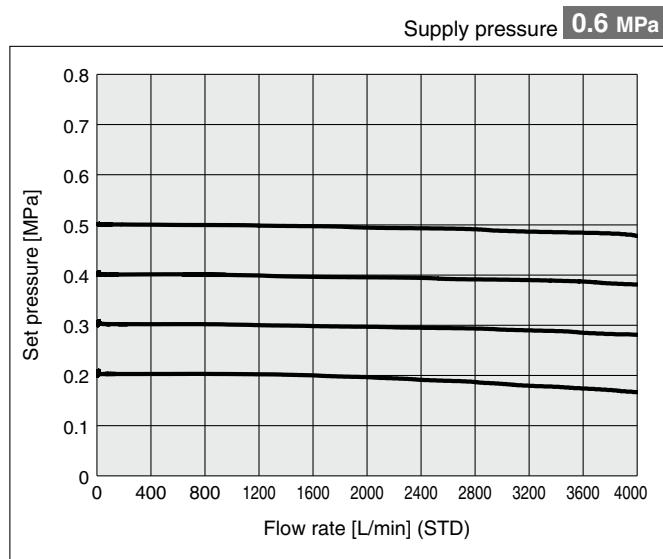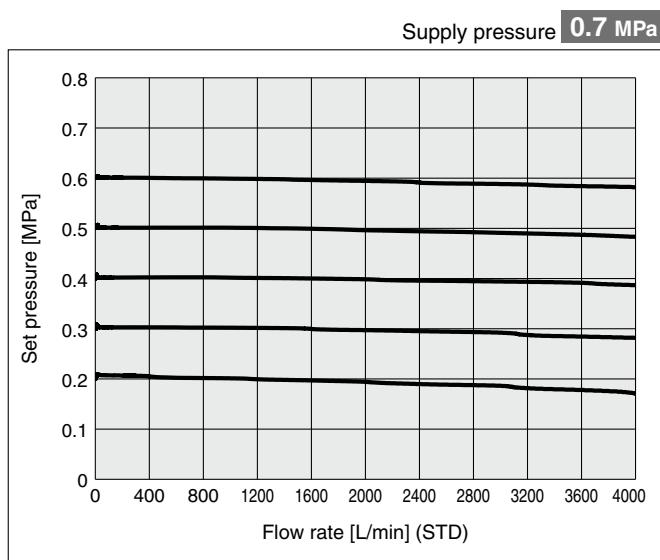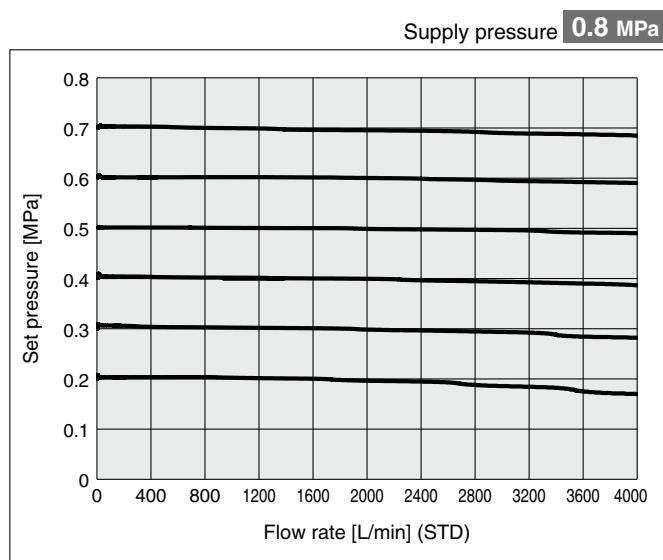

AMS20A/30A/
40A/60A

AMS20B/30B/
40B/60B

EXA1

ITV2050 to 3050
-X399

AR20S to 50S

VP346E/546E/746E/
946E-X660/X661

Accessories

Related
Products

Specific Product
Precautions


Air Management System Regulator Type

AMS20B/30B/40B/60B Series




Symbol

N.C.

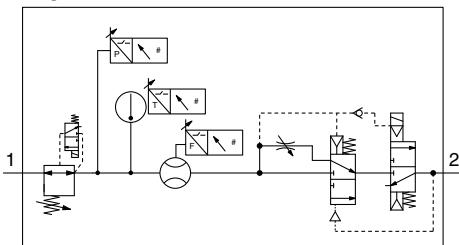

N.O.

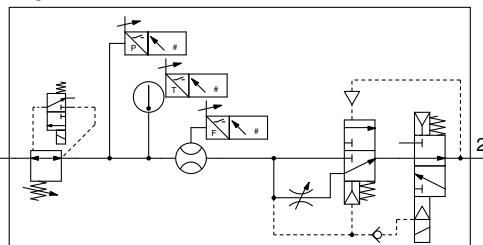

How to Order

AMS **40** B - **F** **04** **C** - **PN** - **M** **L** **G** -

1

2

3

4

5

6

7



Made to order
p. 56-1

X101	Without residual pressure relief 3-port solenoid valve
X102	Without standby electro-pneumatic regulator

		Symbol	Description		1	
					Body size	
			20	30	40	60
②	Pipe thread type* ¹	R	Rc	●	●	●
		N	NPT	●	●	●
		F	G	●	●	●
+						
③	Port size	01	1/8	●	—	—
		02	1/4	●	●	—
		03	3/8	—	●	●
		04	1/2	—	—	—
		06	3/4	—	—	●
		10	1	—	—	●
		00	Without attachments	●	●	●
+						
④	Regulator, Residual pressure relief 3-port solenoid valve	N.O./N.C.	C	N.C. (Normally closed)		
			D	N.O. (Normally open)		
+						
⑤	Air management hub	Protocol	SA	Standalone (When wireless adapter is connected* ⁴ : Wireless remote)		
			PN	PROFINET, OPC UA (When wireless adapter is connected* ⁴ : Wireless base)		
			EN	EtherNet/IP™, OPC UA (When wireless adapter is connected* ⁴ : Wireless base)		
			EC	EtherCAT* ⁵ (When wireless adapter is connected* ⁴ : Wireless base)		
+						
⑥	Regulator, Air management hub	Unit	K* ²	Pressure gauge: MPa/psi dual scale, EXA1: Units selection function		
			M	Pressure gauge in SI units: MPa, EXA1: SI units only* ³		
+						
⑦	Regulator/Residual pressure relief 3-port solenoid valve	Manual override	G	Non-locking push type		
			E	Push-turn locking type (Manual)		

*1 For port size "00", specify thread type of the standby regulator (ARS).

*2 Applies to overseas destinations only

*3 Fixed units Instantaneous flow: L/min

Accumulated flow : L

Pressure : kPa, MPa

Temperature : °C

*4 The wireless adapter is sold separately. (Refer to page 48.)

*5 EtherCAT is not compatible with OPC UA. In addition, the PLC (Programmable Logic Controller)/controller must support EoE (Ethernet over EtherCAT).

* The connection cable for the standby electro-pneumatic regulator/residual pressure relief valve is connected.

Standard Specifications: Regulator Type

Model	AMS20B	AMS30B	AMS40B	AMS60B
Component ^{*1}	Standby regulator	AR20S	AR30S	AR40S
	Air management hub	EXA1-20	EXA1-30	EXA1-40
	Residual pressure relief 3-port solenoid valve	VP346E	VP546E	VP746E
Port size	1/8, 1/4		1/4, 3/8	3/8, 1/2
Fluid	Air			
Rated flow range	5 to 500 L/min	10 to 1000 L/min	20 to 2000 L/min	40 to 4000 L/min
Ambient and fluid temperatures	0 to 50°C			
Proof pressure	1.0 MPa			
Max. operating pressure	0.7 MPa			
Supply pressure range	0.3 to 0.7 MPa			
Standby pressure range	0.2 to 0.4 MPa			
Power supply voltage	24 VDC ±10%			
Current consumption	400 mA or less			
Input/Output	DI x 2 DI, DO IO-Link, DI			
Enclosure	IP65 (Electrical equipment part only)			
Weight	1800 g	2500 g	3800 g	6500 g

*1 Refer to the table below for the single unit specifications of the components.

- Standby regulator p. 28
- Air management hub p. 21
- Residual pressure relief 3-port solenoid valve p. 30

AMS20A/30A/
40A/60AAMS20B/30B/
40B/60B

EXA1

ITV2050 to 3050
-X399

AR20S to 50S

VP346E/546E/746E/
946E-X660/X661

Accessories


Related
ProductsSpecific Product
Precautions

AMS20B/30B/40B/60B Series


Flow Rate Characteristics (Representative values): AMS20B/30B/40B/60B/Regulator Type

Conditions/Supply pressure: 0.3 to 0.7 MPa, Standby pressure: 0.2 MPa Operation mode


AMS20B

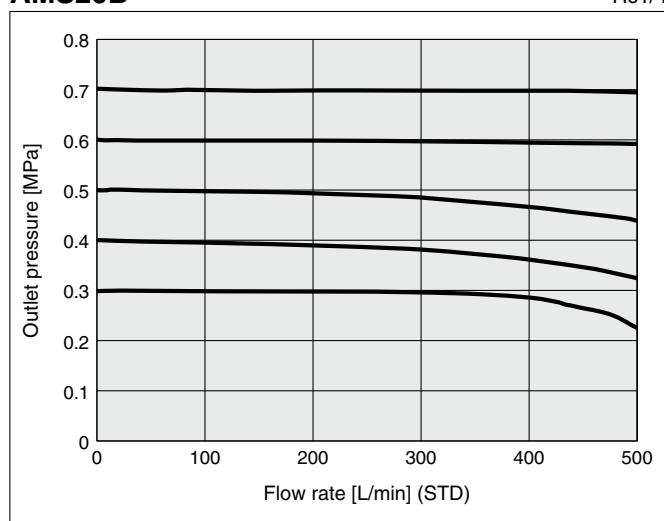


AMS30B

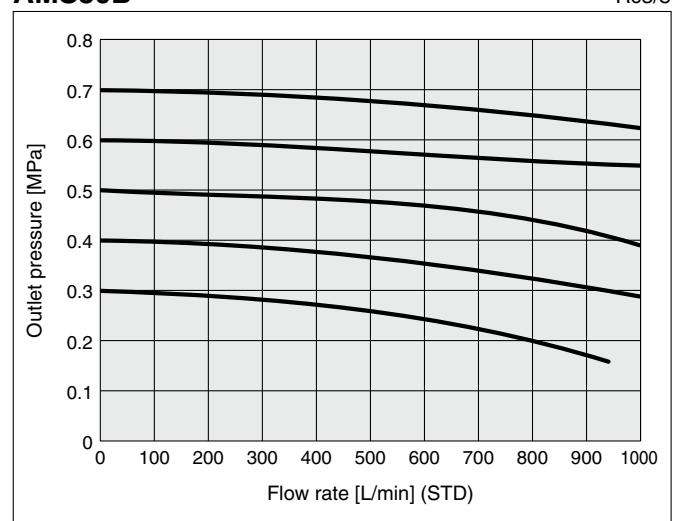

AMS40B

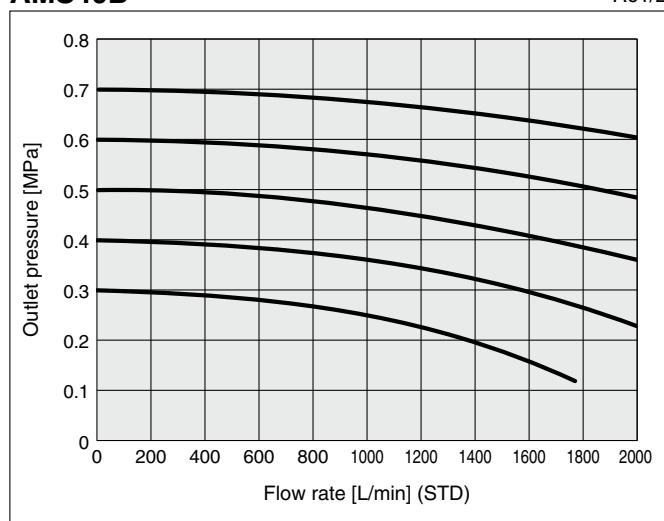


AMS60B

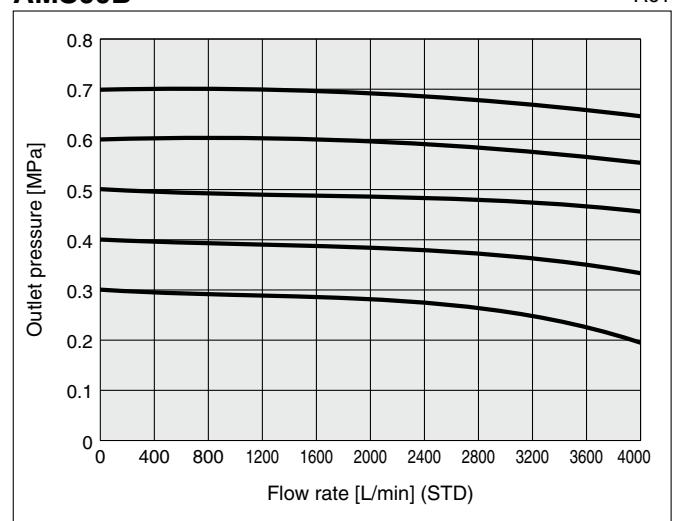


Flow Rate Characteristics (Representative values): **AMS20B/30B/40B/60B/Regulator Type**

Conditions/Supply pressure: 0.5 MPa, Standby pressure: 0.2 MPa **Standby mode**


AMS20B

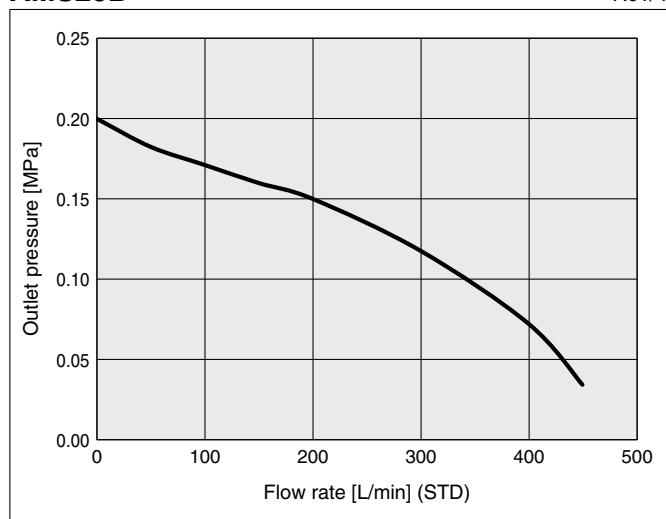


AMS30B

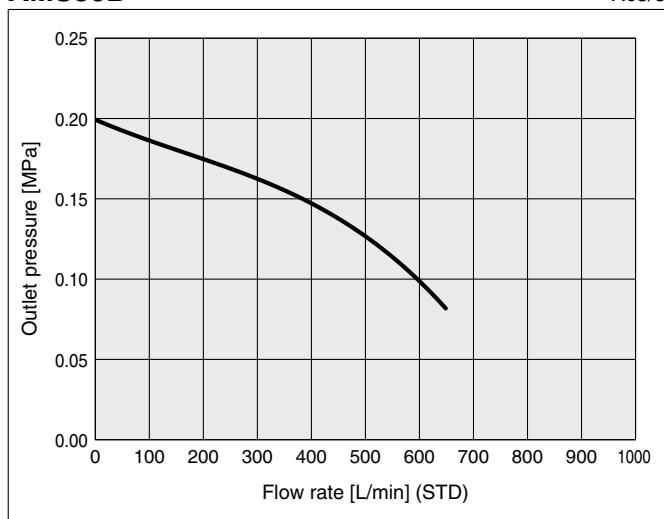

AMS40B

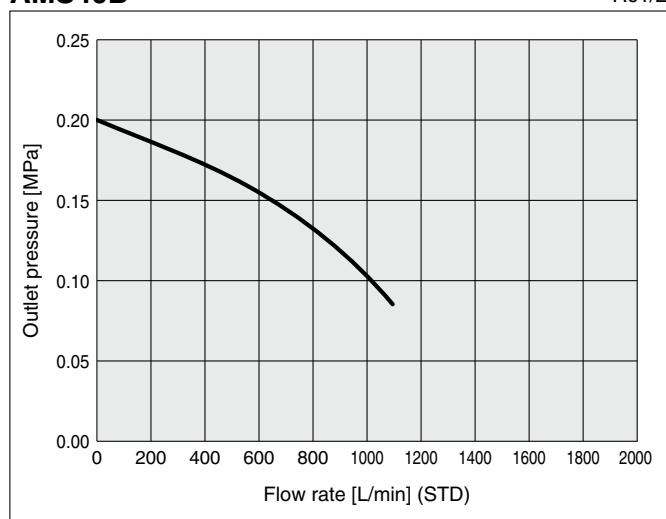

AMS60B

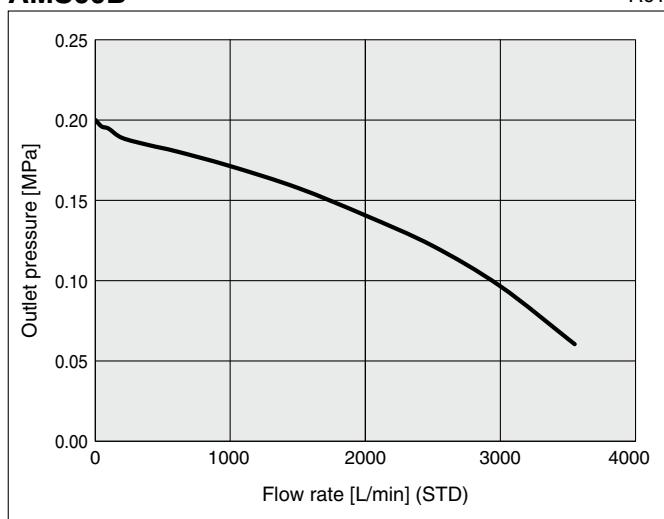

AMS20A/30A/
40A/60A

AMS20B/30B/
40B/60B

EXA1

ITV2050 to 3050
-X399

AR20S to 50S

VP346E/546E/746E/
946E-X660/X661

Accessories

Related
Products



Specific Product
Precautions

AMS20/30/40/60 Series


Dimensions: Electro-Pneumatic Regulator Type

N.C. (Normally closed)


AMS20/30/40/60A-R/N/F□C

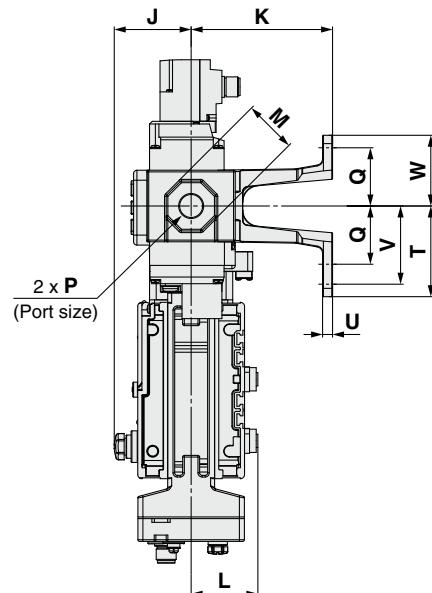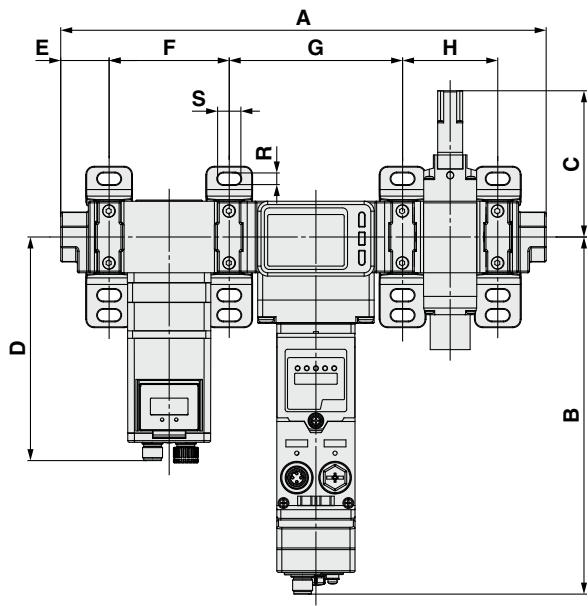


Back side

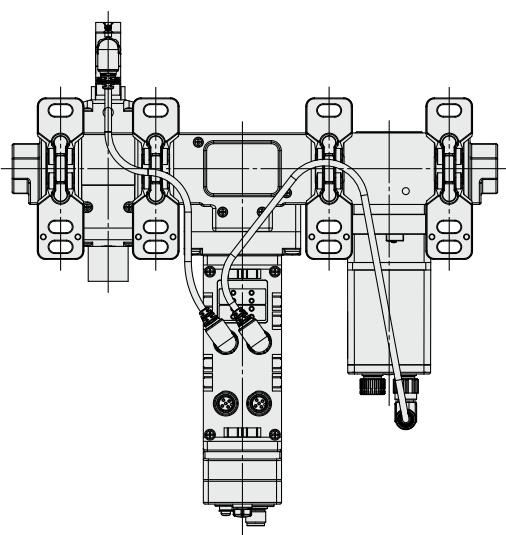

SA: Standalone
(Wireless remote)



AMS20/30/40/60A-H00C
(Without attachments)

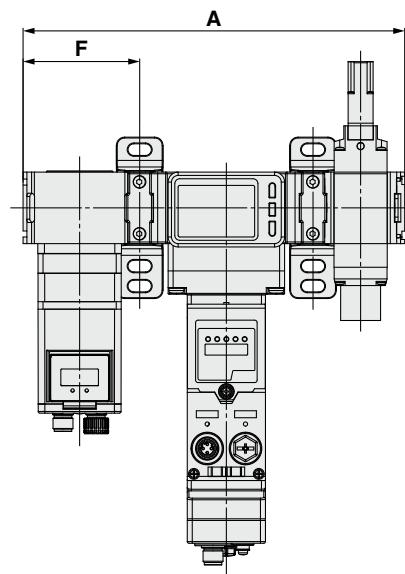

* With connection cable for standby regulator/
residual pressure relief valve


Model	P	A	B	C	D	E	J	M	L	Bracket dimensions										
										K	F	G	H	Q	R	S	T	U	V	W
AMS20A-□C	1/8, 1/4	274.3	214.7	81.7	134.4	25.6	46.2	24	40.1	85	70.2	103.2	49.7	35	7	14	54.5	6	47	42.5
AMS30A-□C	1/4, 3/8	291.8	214.7	87.9	134.4	29.1	46.2	30	40.1	85	72.2	104.2	57.2	35	7	14	54.5	6	47	42.5
AMS40A-□C	3/8, 1/2	334.8	214.9	92.4	151.6	32.6	46.2	36	40.1	85	89.2	105.2	75.2	40	9	18	65	7	55	50
AMS60A-□C	3/4, 1	401.8	214.8	93.7	151.6	42.1	46.2	46	40.1	100	90.2	126.2	101.2	50	11	20	80	8	70	60

Model	P	A	F
AMS20A-H00C	—	219.9	68.6
AMS30A-H00C	—	229.4	70.1
AMS40A-H00C	—	264.4	86.6
AMS60A-H00C	—	311.4	87.1


Dimensions: Electro-Pneumatic Regulator Type

N.O. (Normally open)


AMS20/30/40/60A-R/N/F□D

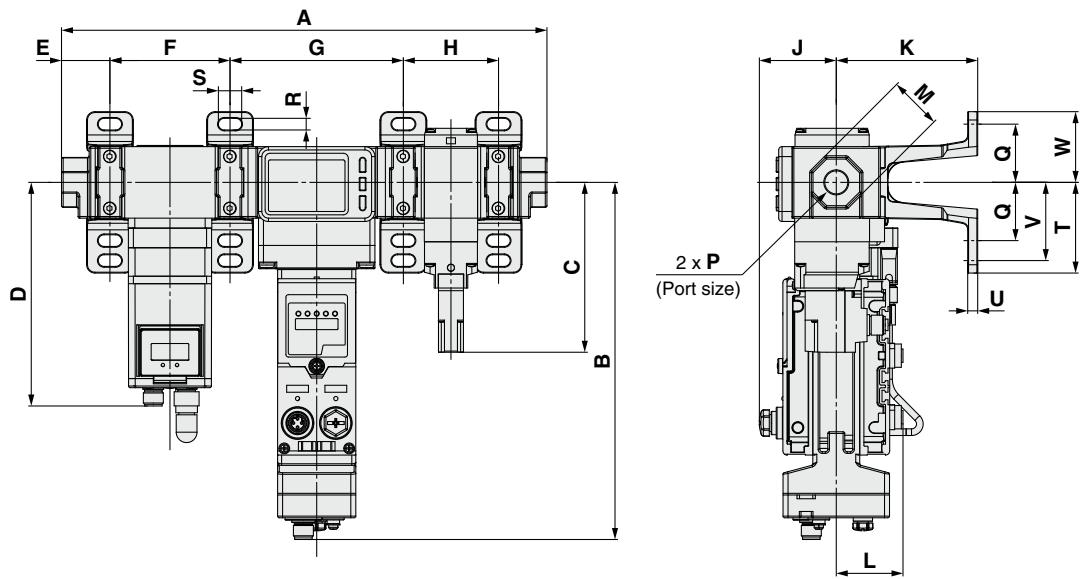

Back side

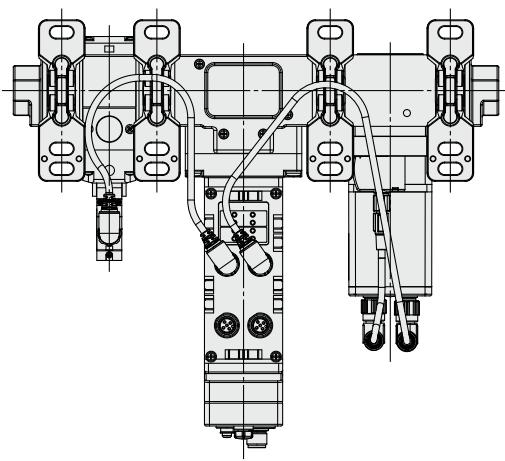

**SA: Standalone
(Wireless remote)**




E: Push-turn locking type



* With connection cable for standby regulator/
residual pressure relief valve

**AMS20/30/40/60A-H00D
(Without attachments)**

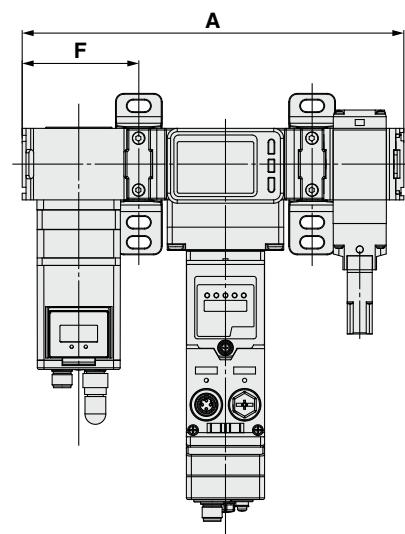

**AMS20A/30A/
40A/60A**

**AMS20B/30B/
40B/60B**

EXA1

**ITV2050 to 3050
-X399**

AR20S to 50S

**VP346E/546E/746E/
946E-X660/X661**

Accessories

**Related
Products**

**Specific Product
Precautions**

Model	P	A	B	C	D	E	J	M	L	Bracket dimensions										
										K	F	G	H	Q	R	S	T	U	V	W
AMS20A-□D	1/8, 1/4	274.3	214.7	85.1	134.4	25.6	46.2	24	40.1	85	70.2	103.2	49.7	35	7	14	54.5	6	47	42.5
AMS30A-□D	1/4, 3/8	291.8	214.7	102.1	134.4	29.1	46.2	30	40.1	85	72.2	104.2	57.2	35	7	14	54.5	6	47	42.5
AMS40A-□D	3/8, 1/2	334.8	214.9	119.4	151.6	32.6	46.2	36	40.1	85	89.2	105.2	75.2	40	9	18	65	7	55	50
AMS60A-□D	3/4, 1	401.8	214.8	117.7	151.6	42.1	46.2	46	40.1	100	90.2	126.2	101.2	50	11	20	80	8	70	60


Model	P	A	F
AMS20A-H00D	—	219.9	68.6
AMS30A-H00D	—	229.4	70.1
AMS40A-H00D	—	264.4	86.6
AMS60A-H00D	—	311.4	87.1

AMS20/30/40/60 Series


Dimensions: Regulator Type

N.C. (Normally closed)

AMS20/30/40/60B-R/N/F□C

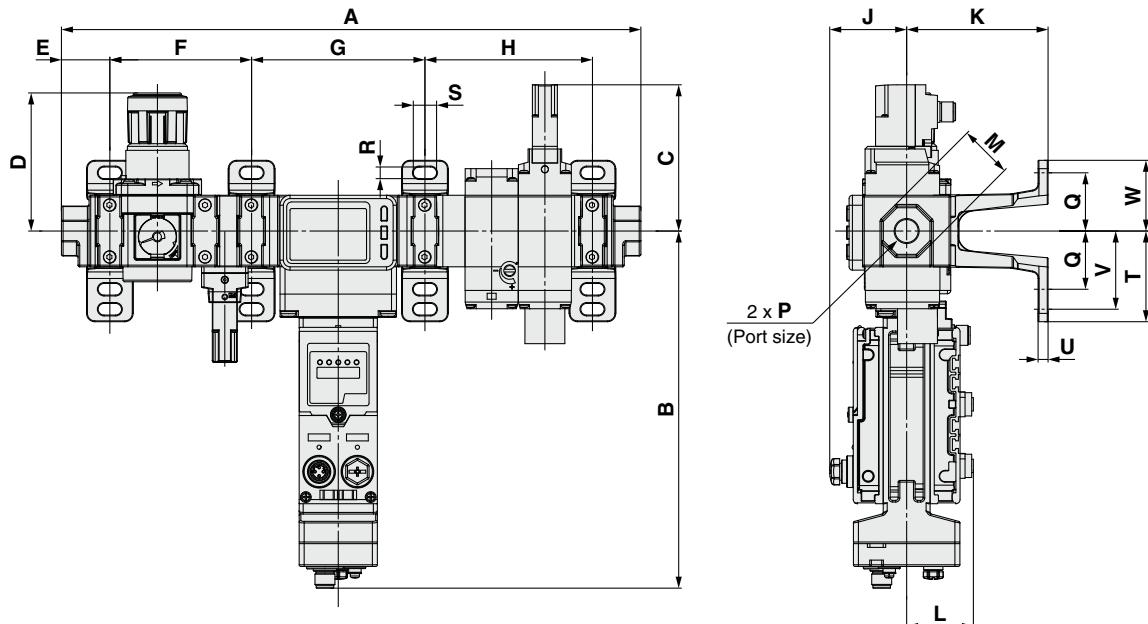


Back side

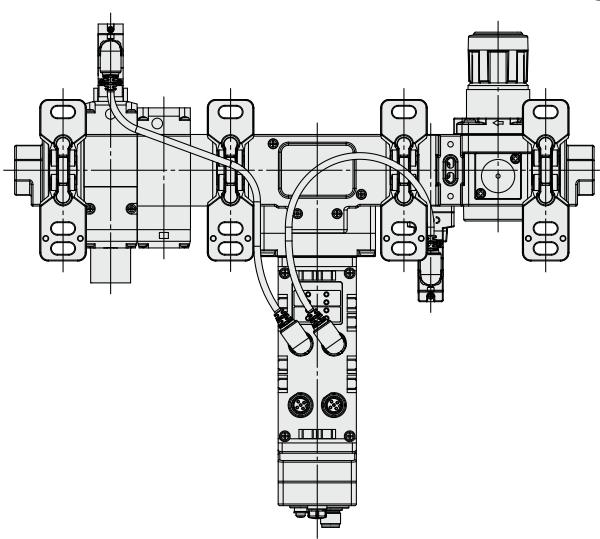

SA: Standalone
(Wireless remote)

E: Push-turn
locking type

AMS20/30/40/60B-□00C
(Without attachments)

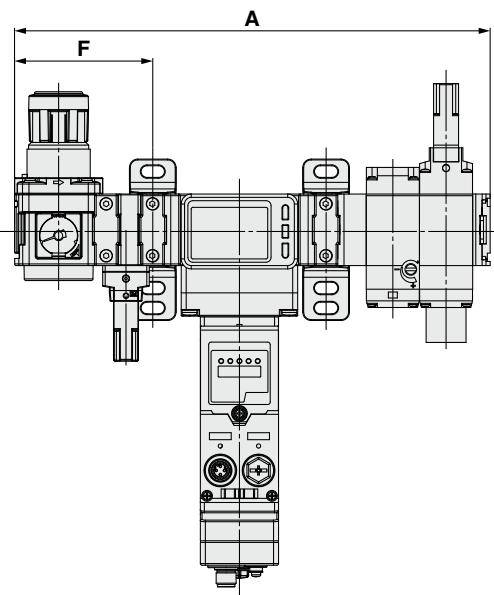

* With connection cable for standby regulator/
residual pressure relief valve

Model	P	A	B	C	D ^{*1}	E	J	M	L	Bracket dimensions											
										K	F	G	H	Q	R	S	T	U	V	W	
AMS20B-□C	1/8, 1/4	301.8	214.7	81.7	66.8	25.6	46.2	24	40.1	85	71.2	103.2	76.2	35	7	14	54.5	6	47	42.5	
AMS30B-□C	1/4, 3/8	348.3	214.7	87.9	86.5	29.1	46.2	30	40.1	85	85.2	104.2	100.7	35	7	14	54.5	6	47	42.5	
AMS40B-□C	3/8, 1/2	395.8	214.9	92.4	91.5	32.6	46.2	36	40.1	85	103.2	105.2	122.2	40	9	18	65	7	55	50	
AMS60B-□C	3/4, 1	491.8	214.8	93.4	125	42.1	46.2	46	40.1	100	124.2	126.2	157.2	50	11	20	80	8	70	60	



Model	P	A	F
AMS20B-□00C	—	247.4	69.6
AMS30B-□00C	—	285.9	83.1
AMS40B-□00C	—	325.4	100.6
AMS60B-□00C	—	401.4	121.1

*1 The dimension of D is the length when the regulator knob is unlocked.


Dimensions: Regulator Type

N.O. (Normally open)


AMS20/30/40/60B-□D

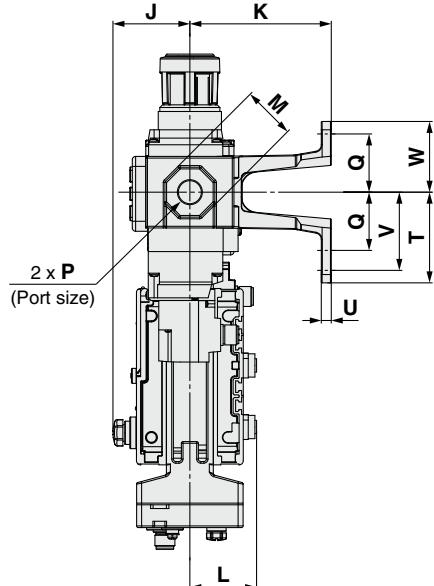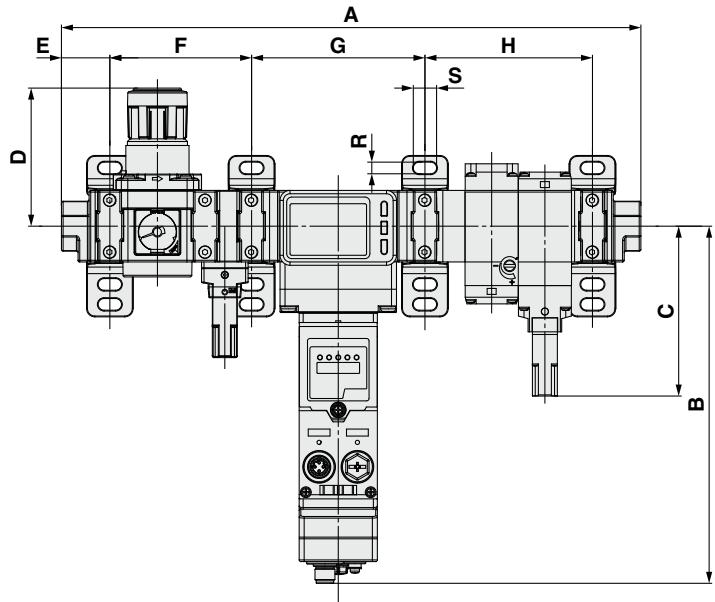


Back side

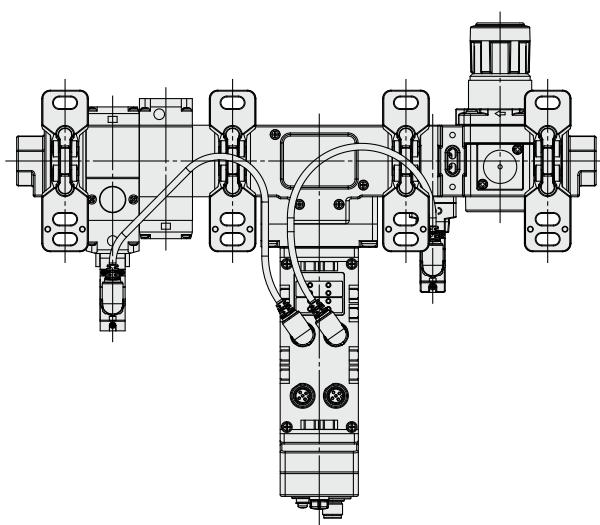


**SA: Standalone
(Wireless remote)**

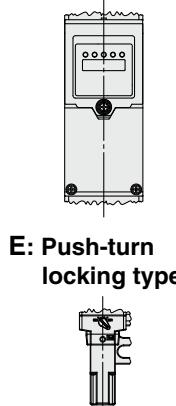

**E: Push-turn
locking type**



**AMS20/30/40/60B-□00D
(Without attachments)**

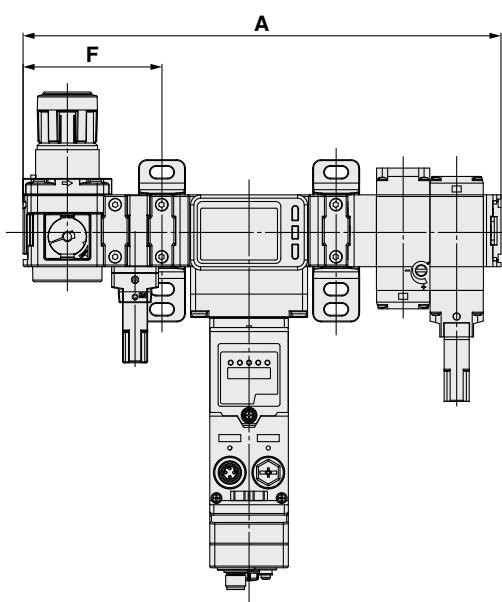

* With connection cable for standby regulator/
residual pressure relief valve

Model	P	A	B	C	D ^{*1}	E	J	M	L	Bracket dimensions										
										K	F	G	H	Q	R	S	T	U	V	W
AMS20B-□D	1/8, 1/4	301.8	214.7	85.1	66.8	25.6	46.2	24	40.1	85	71.2	103.2	76.2	35	7	14	54.5	6	47	42.5
AMS30B-□D	1/4, 3/8	348.3	214.7	102.1	86.5	29.1	46.2	30	40.1	85	85.2	104.2	100.7	35	7	14	54.5	6	47	42.5
AMS40B-□D	3/8, 1/2	395.8	214.9	119.4	91.5	32.6	46.2	36	40.1	85	103.2	105.2	122.2	40	9	18	65	7	55	50
AMS60B-□D	3/4, 1	491.8	214.8	118	125	42.1	46.2	46	40.1	100	124.2	126.2	157.2	50	11	20	80	8	70	60


Model	P	A	F
AMS20B-□00D	—	247.4	69.6
AMS30B-□00D	—	285.9	83.1
AMS40B-□00D	—	325.4	100.6
AMS60B-□00D	—	401.4	121.1

*1 The dimension of D is the length when the regulator knob is unlocked.

Air Management Hub

EXA1 Series

Symbol

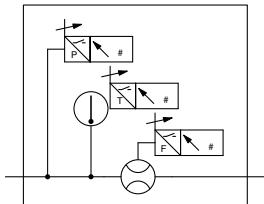

How to Order

EXA1-**40**-**SA**-**ML**

① ② ③

		Symbol	Description			
			① Body size			
			20	30	40	60
②	Protocol	SA	Standalone (When wireless adapter is connected ^{*3} : Wireless remote)	●	●	●
		PN	PROFINET, OPC UA (When wireless adapter is connected ^{*3} : Wireless base)	●	●	●
		EN	EtherNet/IP™, OPC UA (When wireless adapter is connected ^{*3} : Wireless base)	●	●	●
		EC	EtherCAT ^{*4} (When wireless adapter is connected ^{*3} : Wireless base)	●	●	●
+						
③	Unit	K^{*1}	Units selection function	●	●	●
		M^{*2}	SI units only	●	●	●

*1 Applies to overseas destinations only

*2 Fixed units Instantaneous flow: L/min, Accumulated flow: L, Pressure: kPa/MPa, Temperature: °C

*3 The wireless adapter is sold separately. (Refer to page 48.)

*4 EtherCAT is not compatible with OPC UA. In addition, the PLC (Programmable Logic Controller)/controller must support EoE (Ethernet over EtherCAT).

All Protocols Common Specifications

Model		EXA1-20	EXA1-30	EXA1-40	EXA1-60			
Electrical	Measured fluid ^{*1}		Air					
	Fluid temperature		0 to 50°C					
	Power supply voltage		24 VDC ±10%					
	Protection		Polarity protection, Over current protection					
	Current consumption		400 mA					
Environment	Indicator		LED & LCD					
	Operating temperature range	0 to 50°C (No freezing and condensation)						
	Storage temperature range	-10 to 60°C (No freezing and condensation)						
	Standards	CE/UKCA marking, UL (CSA)						
	Enclosure	IP65 (Electrical equipment part only) IEC60529 compliant						
	Ambient humidity	35 to 85% RH						
	Altitude	Up to 3000 m						
	Pollution Degree	3						
	Installation location	Indoor						
Flow	Rated flow range	5 to 500 L/min	10 to 1000 L/min	20 to 2000 L/min	40 to 4000 L/min			
	Accumulated flow range	0 to 9,999,999,990 L						
	Smallest settable increment	Instantaneous flow	1 L/min	2 L/min				
		Accumulated flow	10 L					
	Accuracy	±3.0% F.S.						
Pressure	Repeatability	±1.0% F.S.						
	Pressure characteristics	±5.0% F.S. (0 to 1.0 MPa, 0.5 MPa standard)						
	Temperature characteristics	±5.0% F.S. (0 to 50°C, 25°C standard)						
	Unit	L/min, CFM (ft ³ /min)						
	Rated pressure range	0 to 1.0 MPa						
Temperature	Proof pressure	1.5 MPa						
	Accuracy	±3.0% F.S.						
	Repeatability	±1.0% F.S.						
	Temperature characteristics	±5.0% F.S. (0 to 50°C, 25°C standard)						
	Unit	MPa, kPa, kgf/cm ² , bar, psi						
Input/Output	Rated temperature range	0 to 50°C						
	Accuracy ^{*2}	±2.5°C (Flow range: 10% to 100%)						
	Unit	°C, °F						
	Number of free ports	1						
	Configuration	Digital input (x 2), Digital input and output, IO-link and digital input						
User configurable port	IO-Link	Communication speed	COM1 (4.8 kbps) COM2 (38.4 kbps) COM3 (230.4 kbps)					
			Automatically switches depending on the connected device					
		Max. supply current	0.3 A					
		Max. process data size	Input: 16 bytes/Output: 16 bytes (per port)					
	Port specifications	IO-Link version	Version 1.1					
		IO-Link port class	Class A					
		Input type	PNP input					
		Rated input current	Pin 2: Typ. 2.5 mA, Pin 4: Typ. 5.8 mA					
		ON voltage	13 V or more					
Input/Output for Air Management System function	Input	OFF voltage	8 V or less					
		Output type	PNP output					
		Max. load current	0.25 A					
		Input/output for standby electro-pneumatic regulator	IO-Link					
		Output for standby regulator Output for residual pressure relief valve	PNP output					
	Input for standby Input for isolation	Input type	PNP input					
		Rated input current	Pin 2: Typ. 2.5 mA, Pin 4: Typ. 5.8 mA					
		ON voltage	13 V or more					
		OFF voltage	8 V or less					
		Max. supply current	0.3 A					
Weight		750 g	770 g	810 g	1140 g			

^{*1} Air quality grade is JIS B 8392-1:2012 [4:6:-] and ISO 8573-1:2010 [4:6:-].^{*2} When the flow range is less than 10%, temperature accuracy is -2.5 to 7.5°C.**Protocol specifications (EXA1-□-PN)**

Model		EXA1-□-PN
Communication	Number of communication ports	2
Protocol	PROFINET IO (Conformance Class C)	
Communication speed	100 Mbps	
Configuration file	GSDML file ^{*3}	
Occupation area (Number of inputs/outputs)	Max. (406 byte/198 byte)	
Web server	Supported	
OPC UA	Supported	
Input/Output	Output	Fail safe

^{*3} The configuration file can be downloaded from the SMC website.
<https://www.smeworld.com>**Protocol specifications (EXA1-□-EN)**

Model		EXA1-□-EN
Communication	Number of communication ports	2 port
Protocol	EtherNet/IP™ (Conformance version: Composite 11)	
Communication speed	100 Mbps	
Communication method	Full duplex/Half duplex	
Configuration file	EDS file ^{*4}	
Occupation area (Number of inputs/outputs)	Max. (406 byte/198 byte)	
IP address setting range	Through DHCP server: Optional address	
Device information	Vendor ID : 7(SMC Corporation) Device type : 12 (Communication Adapter) Product code : 263	
Web server	Supported	
OPC UA	Supported	
Input/Output	Output	Fail safe

^{*4} The configuration file can be downloaded from the SMC website.
<https://www.smeworld.com>**Protocol specifications (EXA1-□-EC)**


Model		EXA1-□-EC
Communication	Number of communication ports	2
Protocol	EtherCAT (Conformance Test Record V.2.3.0)	
Communication speed	100 Mbps	
Configuration file	ESI file ^{*5}	
Occupation area (Number of inputs/outputs)	Max. (406 byte/198 byte)	
Web server	Supported (When using EoE) ^{*6}	
OPC UA	Not supported	
Input/Output	Output	Fail safe

^{*5} The configuration file can be downloaded from the SMC website.
<https://www.smeworld.com>^{*6} The PLC (Programmable Logic Controller)/controller must support EoE (Ethernet over EtherCAT).AMS20A/30B/
40B/60BITV2050 to 3050
-X399AR20S to 50S
VP346E/546E/746E/
946E-X660/X661Related Products
Specific Product Precautions

EXA1 Series


Dimensions: Sizes 20, 30, 40

EXA1-20/30/40-PN/EN/EC-□

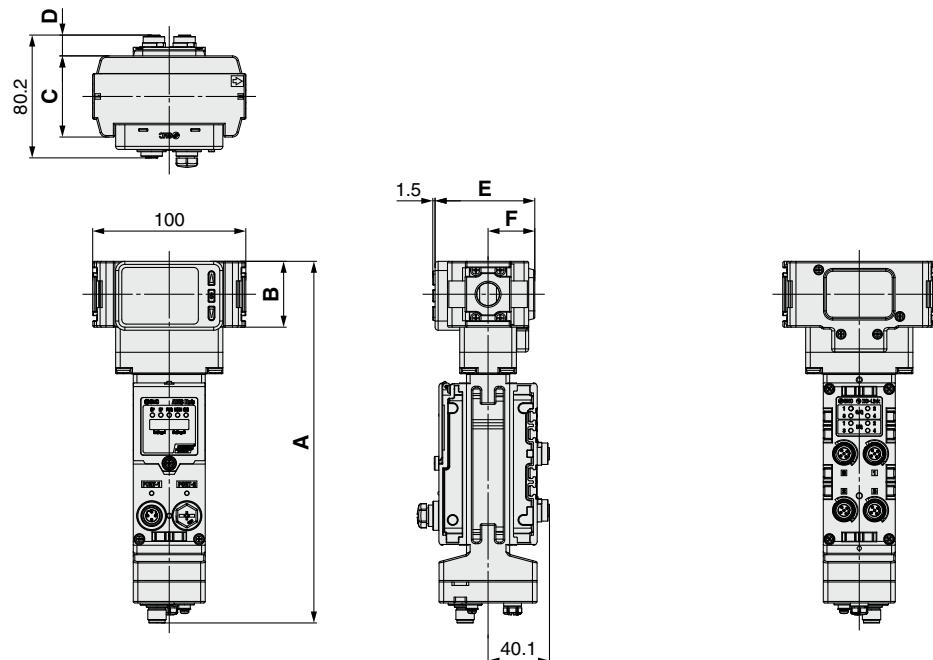

Model	A	B	C	D	E	F
EXA1-20	236.2	35	42	19.1	65.1	30.5
EXA1-30	236.2	43	53	13.6	65.1	30.5
EXA1-40	240.4	51	71	4.6	71	35.5


EXA1-20/30/40-SA-□

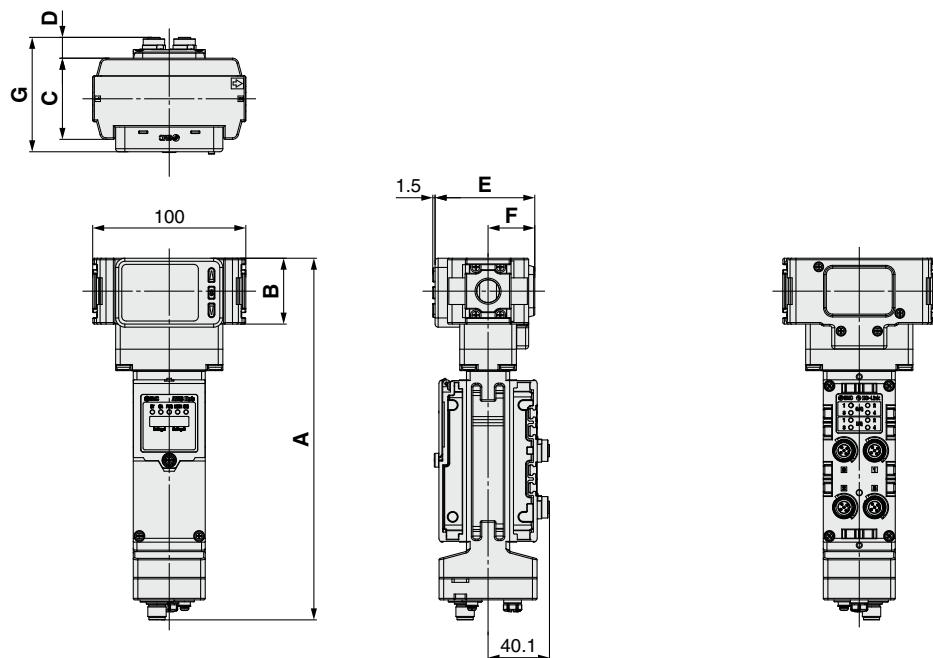


Model	A	B	C	D	E	F	G
EXA1-20	236.2	35	42	19.1	65.1	30.5	74.7
EXA1-30	236.2	43	53	13.6	65.1	30.5	74.7
EXA1-40	240.4	51	71	4.6	71	35.5	75.6

Dimensions: Size 60

EXA1-60-PN/EN/EC-□

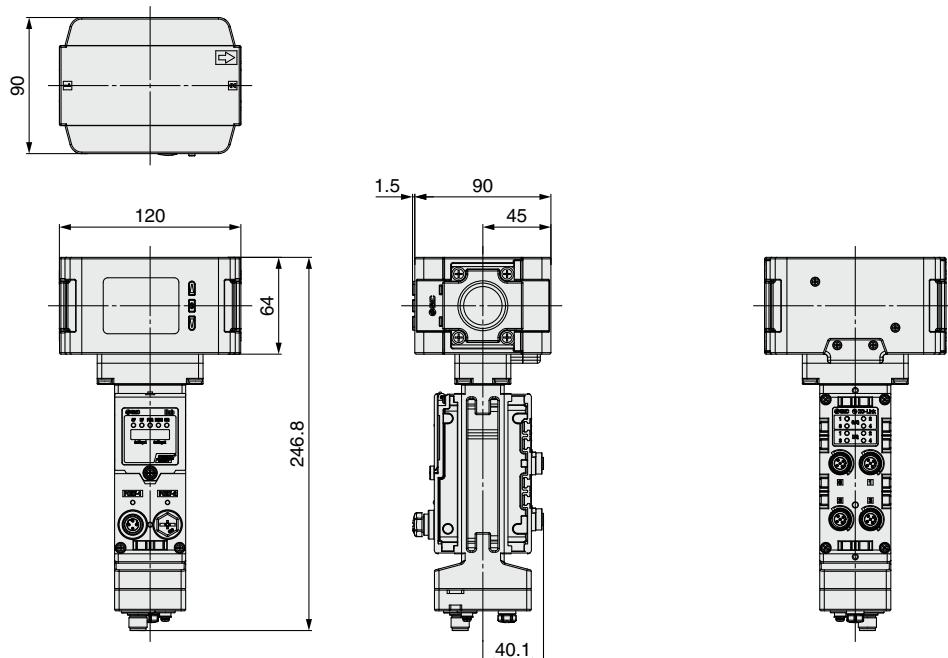

EXA1-60-SA-□

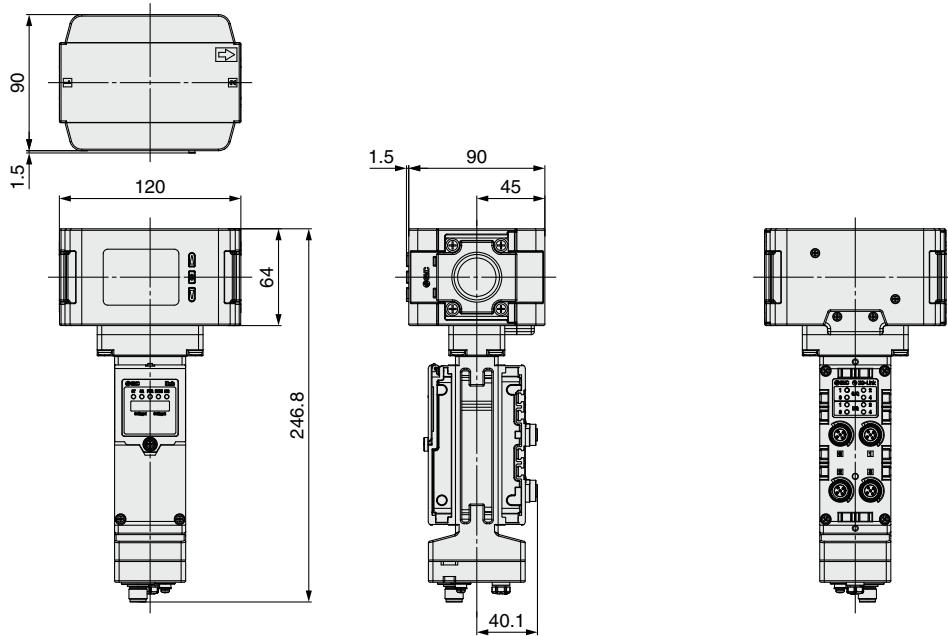

AMS20A/30A/
40A/60A

AMS20B/30B/
40B/60B

EXA1

ITV2050 to 3050
-X399

AR20S to 50S

VP346E/546E/746E/
946E-X660/X661

Accessories

Related
Products


Specific Product
Precautions

Standby Electro-Pneumatic Regulator

ITV2050 to 3050-X399

Symbol

N.C./N.O.

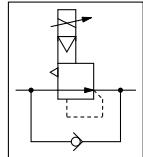

How to Order



For AMS20A **ITV2050-IL 20-1-K-X399**

For AMS30A **ITV2050-IL 30-1-K-X399**

For AMS40A **ITV3050-IL 40-1-K-X399**

For AMS60A **ITV3050-IL 60-1-K-X399**

1 2 3

① Applicable AMS□A size

20	For AMS20A
30	For AMS30A
40	For AMS40A
60	For AMS60A

② Type of actuation

1	Normally closed
2	Normally open*2

③ Pressure display unit

K	Units selection function
M	SI units only*6

Specifications

Applicable AMS series		AMS20A	AMS30A	AMS40A	AMS60A
Min. supply pressure		Set pressure +0.1 MPa			
Max. supply pressure		0.8 MPa			
Set pressure range (Rated)*1		0.005 to 0.7 MPa			
Power supply	Voltage	24 VDC $\pm 10\%$			
	Current consumption	0.12 A or less			
Communication	Protocol	IO-Link			
	Version	VERSION 1.1			
	Communication speed	230.4 kbps (COM3)			
	IO-Link port	CLASS A			
	IO-Link type	Device			
Linearity		$\pm 1\%$ F.S. or less*4			
Repeatability		$\pm 0.5\%$ F.S. or less			
Sensitivity		0.2% F.S. or less			
Temperature characteristics		$\pm 0.12\%$ F.S./°C or less			
Output pressure display	Accuracy	$\pm 2\%$ F.S. ± 1 digit or less			
	Min. unit*5	3 digits MPa: 0.001, 2 digits MPa: 0.01, kgf/cm ² : 0.01, bar: 0.01, psi: 1, kPa: 1			
Ambient and fluid temperatures		0 to 50°C (No condensation)			
Enclosure		IP65			
Weight (Without accessories)		727 g	780 g	1320 g	1640 g

*1 This product does not exhaust by itself. It is not possible to decrease the output pressure with this product alone. (Except when supply pressure is shut off)

*2 In the case of the normally open specification, the output pressure is the supply pressure minus 0.1 MPa or more when the product is turned off.

*3 This product will reduce output pressure to 0.005 MPa or less if the secondary side output is present when supply pressure is shut off.

*4 Since this product does not exhaust by itself, it does not meet product specifications if there is no pressure drop or overshoot.

*5 If the unit is fixed to SI, only MPa or kPa will be displayed.






*6 For use in Japan, the product fixed to SI unit must be used to comply with the new Measurement Act.

*7 This product is for AMS20A/30A/40A/60A only. Do not use for any other application.



Dimensions: Sizes 20, 30

N.C. (Normally closed)

ITV2050-□20/30-□-X399

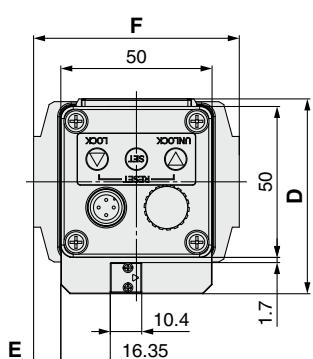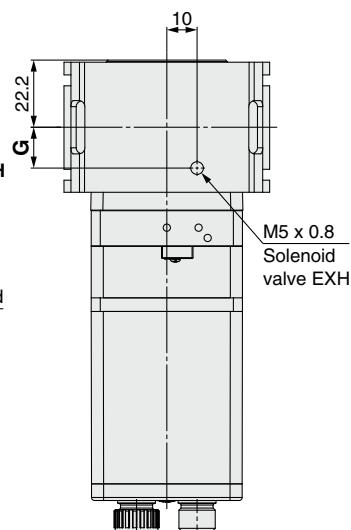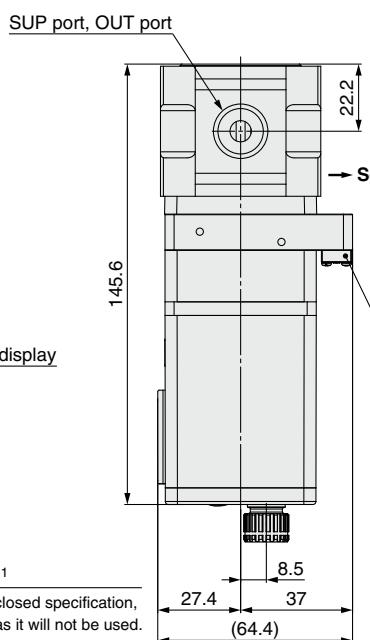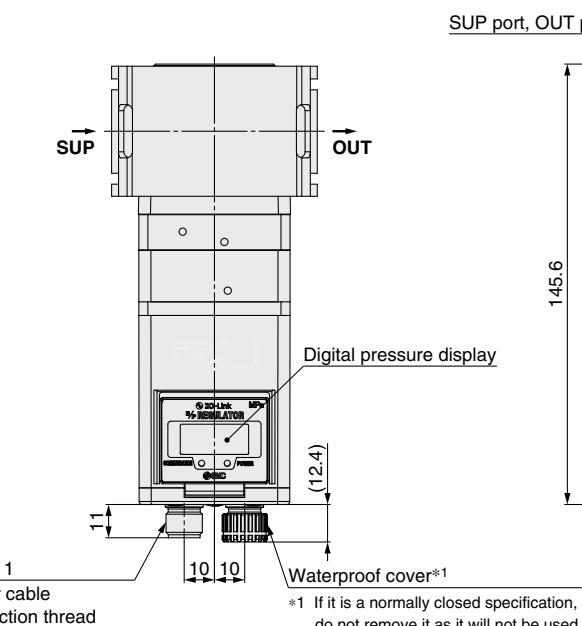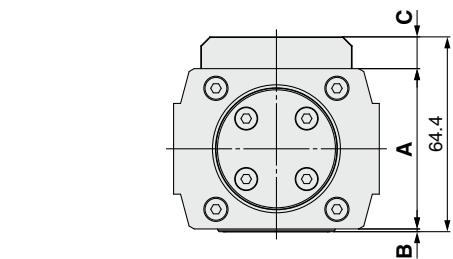

N.O. (Normally open)

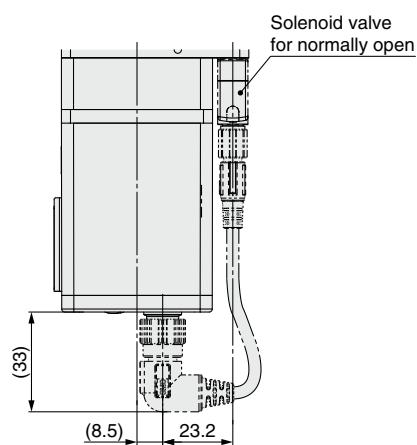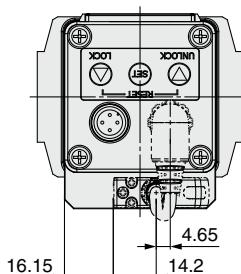

Model	A	B	C	D	E	F	G
ITV2050-20-□-X399	50	2.4	11.8	64.5	8.5	67	12.5
ITV2050-30-□-X399	53	0.9	10.5	64.4	9	68	13.5

AMS20A/30A/
40A/60A

AMS20B/30B/
40B/60B

EXA1

ITV2050 to 3050
-X399

AR20S to 50S

VP346E/546E/746E/
946E-X660/X661

Accessories

Related
Products

Specific Product
Precautions





ITV2050 to 3050-X399

Dimensions: Sizes 40, 60



N.C. (Normally closed)

ITV3050-□40/60-□-X399

ITV3050-60

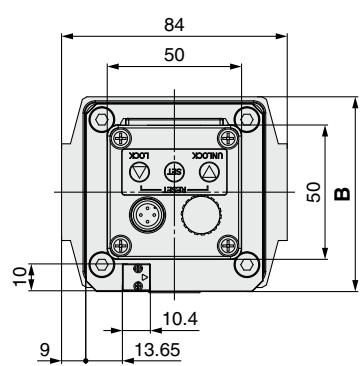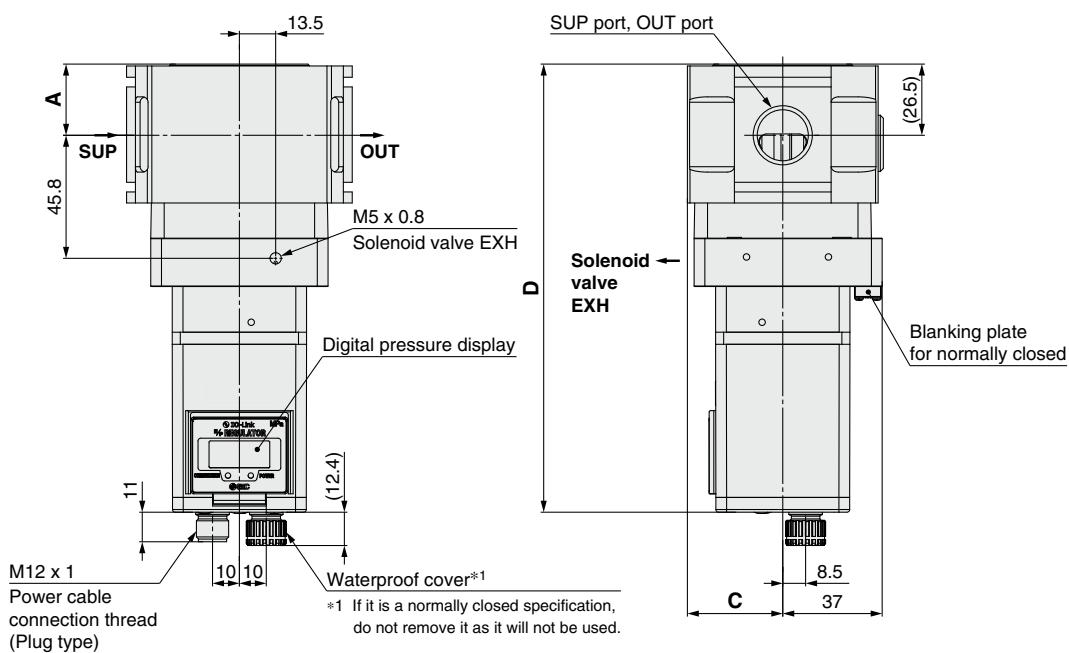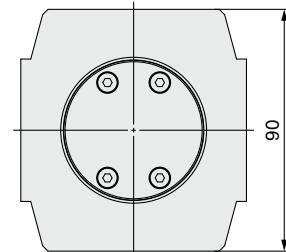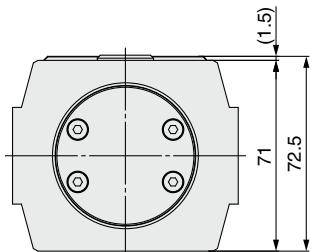

N.O. (Normally open)

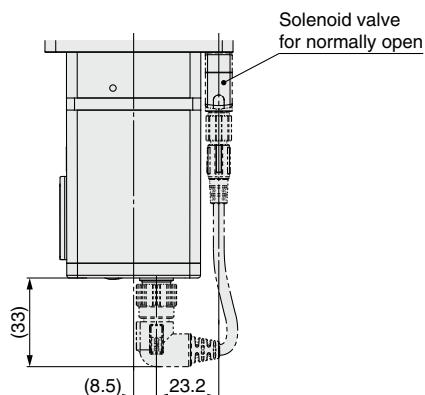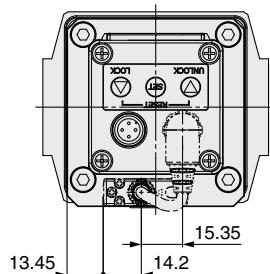


Model	A	B	C	D
ITV3050-40-□-X399	26.5	72.5	35.5	166.8
ITV3050-60-□-X399	33	90	45	173.6



Standby Regulator AR20S to 50S Series

Symbol

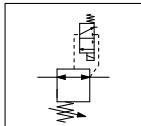

How to Order

AR **30**S-**03**E-Y-**15**V



		Symbol	Description						
②	Pipe thread type	Nil	Rc						
		N	NPT						
		F	G						
+		③ Port size (Screws are IN side only.)	02	1/4					
+			03	3/8					
+			04	1/2					
+			10	1					
+		④ Pressure gauge	Nil	Name plate and pressure gauge in SI units: MPa					
+			Z	Name plate: MPa, Pressure gauge: MPa/psi dual scale					
+		⑤ Pilot valve	Manual override	Nil	Non-locking push type				
+				E	Push-turn locking type (Manual)				

Specifications

Model	AR20S	AR30S	AR40S	AR50S
Port size	1/4	3/8	1/2	1
Fluid	Air			
Ambient and fluid temperatures	0 to 50°C			
Proof pressure	1.05 MPa			
Max. operating pressure	0.7 MPa			
Set pressure range	0.2 to 0.4 MPa			
Regulator exhaust construction	Non-relieving type			
Pilot valve exhaust method	Individual exhaust			
Lubrication	Not required			
Impact/Vibration resistance ^{*1}	150/30 m/s ²			
Enclosure	IP65 (Electrical equipment part only)			
Weight	0.30 kg	0.49 kg	0.77 kg	1.49 kg

*1 Impact resistance: No malfunction occurred when it is tested in the axial direction and at the right angles to the main valve and armature in both energized and de-energized states every once for each condition. (Values at the initial period)

Vibration resistance: No malfunction occurred in a one-sweep test between 45 and 2000 Hz. The test was performed at both energized and de-energized states in the axial direction and at the right angles to the main valve and armature. (Values at the initial period)

Pilot Valve Solenoid Specifications

Coil rated voltage	24 VDC
Allowable voltage fluctuation	±10% of the rated voltage
Power consumption	0.4 W
Surge voltage suppressor	Diode
Indicator light	LED
Electrical entry	M12 connector
Standards	CE/UKCA marking, UL (CSA)

 AMS20A/30A/
40A/60A

 AMS20B/30B/
40B/60B

EXA1

 ITV2050 to 3050
-X399

AR20S to 50S

 VP346E/546E/746E/
946E-X660/X661


Accessories

 Related
Products

 Specific Product
Precautions

AR20S to 50S Series


Dimensions

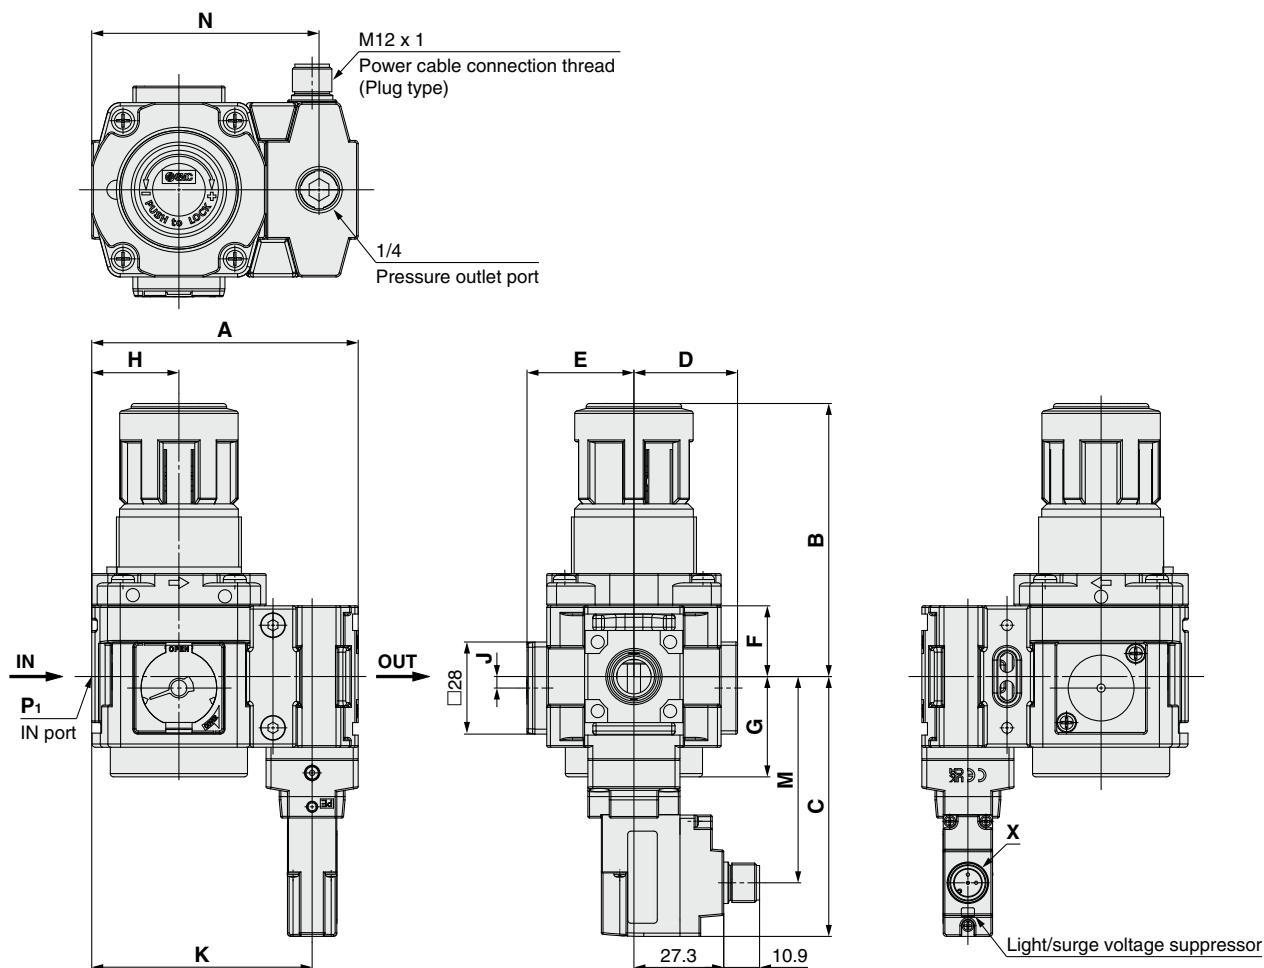

E: Push-turn locking type



**Detailed figure of X section
(M12 connector pin assignment)**




Model	P1	A	B ^{*1}	C	D	E	F	G	H	J	K	M	N
AR20S	1/4	68	66.8	73	26	27	17.5	26.5	20	2	54	56.7	55.6
AR30S	3/8	81	86.5	79	31.5	32.5	21.5	30.5	26.5	3.5	67	62.7	69.1
AR40S	1/2	98	91.5	83	40.5	41.5	25.5	35.5	35	—	84	66.7	86.6
AR50S	1	118	125	90.5	50	51	32	43	45	—	104	74.2	105

*1 The dimension of B is the length when the regulator knob is unlocked.


Residual Pressure Relief 3-Port Solenoid Valve

VP346E/546E/746E/946E-X660/X661

Symbol

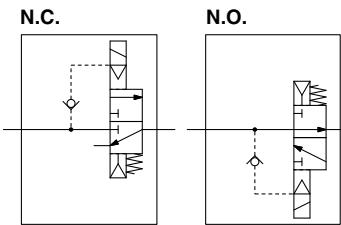

With soft start-up function

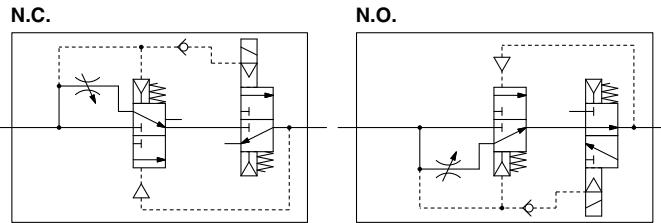

How to Order

VP **3** 46E-5 **KVO** **Z** **1** - - **X660**

With soft start-up function

① Series

3	For AMS20	VP300
5	For AMS30	VP500
7	For AMS40	VP700
9	For AMS60	VP900

② M12 connector

KO	Without connector	Pin assignment	Series			
			VP300	VP500	VP700	VP900
KO	Without connector		—	—	—	●
KVO	Without connector		●	●	●	—

③ Manual override

Nil	Non-locking push type
E	Push-turn locking type (Manual)

④ Soft start-up function

Nil	None
S	With soft start-up function

⑤ Type of actuation

X660	N.C. (Normally closed)
X661	N.O. (Normally open)

Specifications

Model	VP346E	VP546E	VP746E	VP946E			
Fluid	Air						
Type of actuation	N.C. (X660)/N.O. (X661)						
Operating pressure range	0.2 to 0.7 MPa						
Ambient and fluid temperatures	-10 to 50°C (No freezing)						
Max. operating frequency*1	VP(3,5,7)46E	5 Hz					
	VP946E	1 Hz					
Manual override	Non-locking push type Push-turn locking type (Manual)						
Pilot exhaust	Individual exhaust						
Lubrication	Not required						
Impact/Vibration resistance*2	150/30 m/s ²						
Enclosure	IP65 (Electrical equipment part only)						
Weight	None	210 g	340 g	710 g			
	With soft start-up function	310 g	600 g	1410 g			
		1260 g	2300 g				

*1 Excludes the type with a soft start-up function

*2 Impact resistance: No malfunction occurred when it is tested in the axial direction and at the right angles to the main valve and armature in both energized and de-energized states every once for each condition. (Values at the initial period)

Vibration resistance: No malfunction occurred in a one-sweep test between 45 and 2000 Hz. The test was performed at both energized and de-energized states in the axial direction and at the right angles to the main valve and armature. (Values at the initial period)

* This valve is a large flow rate pilot-operated solenoid valve. If the operating pressure falls below 0.2 MPa due to a pressure drop caused by insufficient air supply, it may not be able to switch properly.

Solenoid Specifications

Coil rated voltage	24 VDC
Allowable voltage fluctuation	±10% of the rated voltage
Power consumption	0.4 W
Surge voltage suppressor	Diode
Indicator light	LED
Electrical entry	M12 connector

AMS20A/30B/
40A/60B

AMS20B/30B/
40B/60B

EXA1

ITV2050 to 3050
-X399

AR20S to 50S

VP346E/546E/746E/
946E-X660/X661

Accessories


Related
Products

Specific Product
Precautions

VP346E/546E/746E/946E-X660/X661






Dimensions

**N.C. (Normally closed)
VP346E-X660**

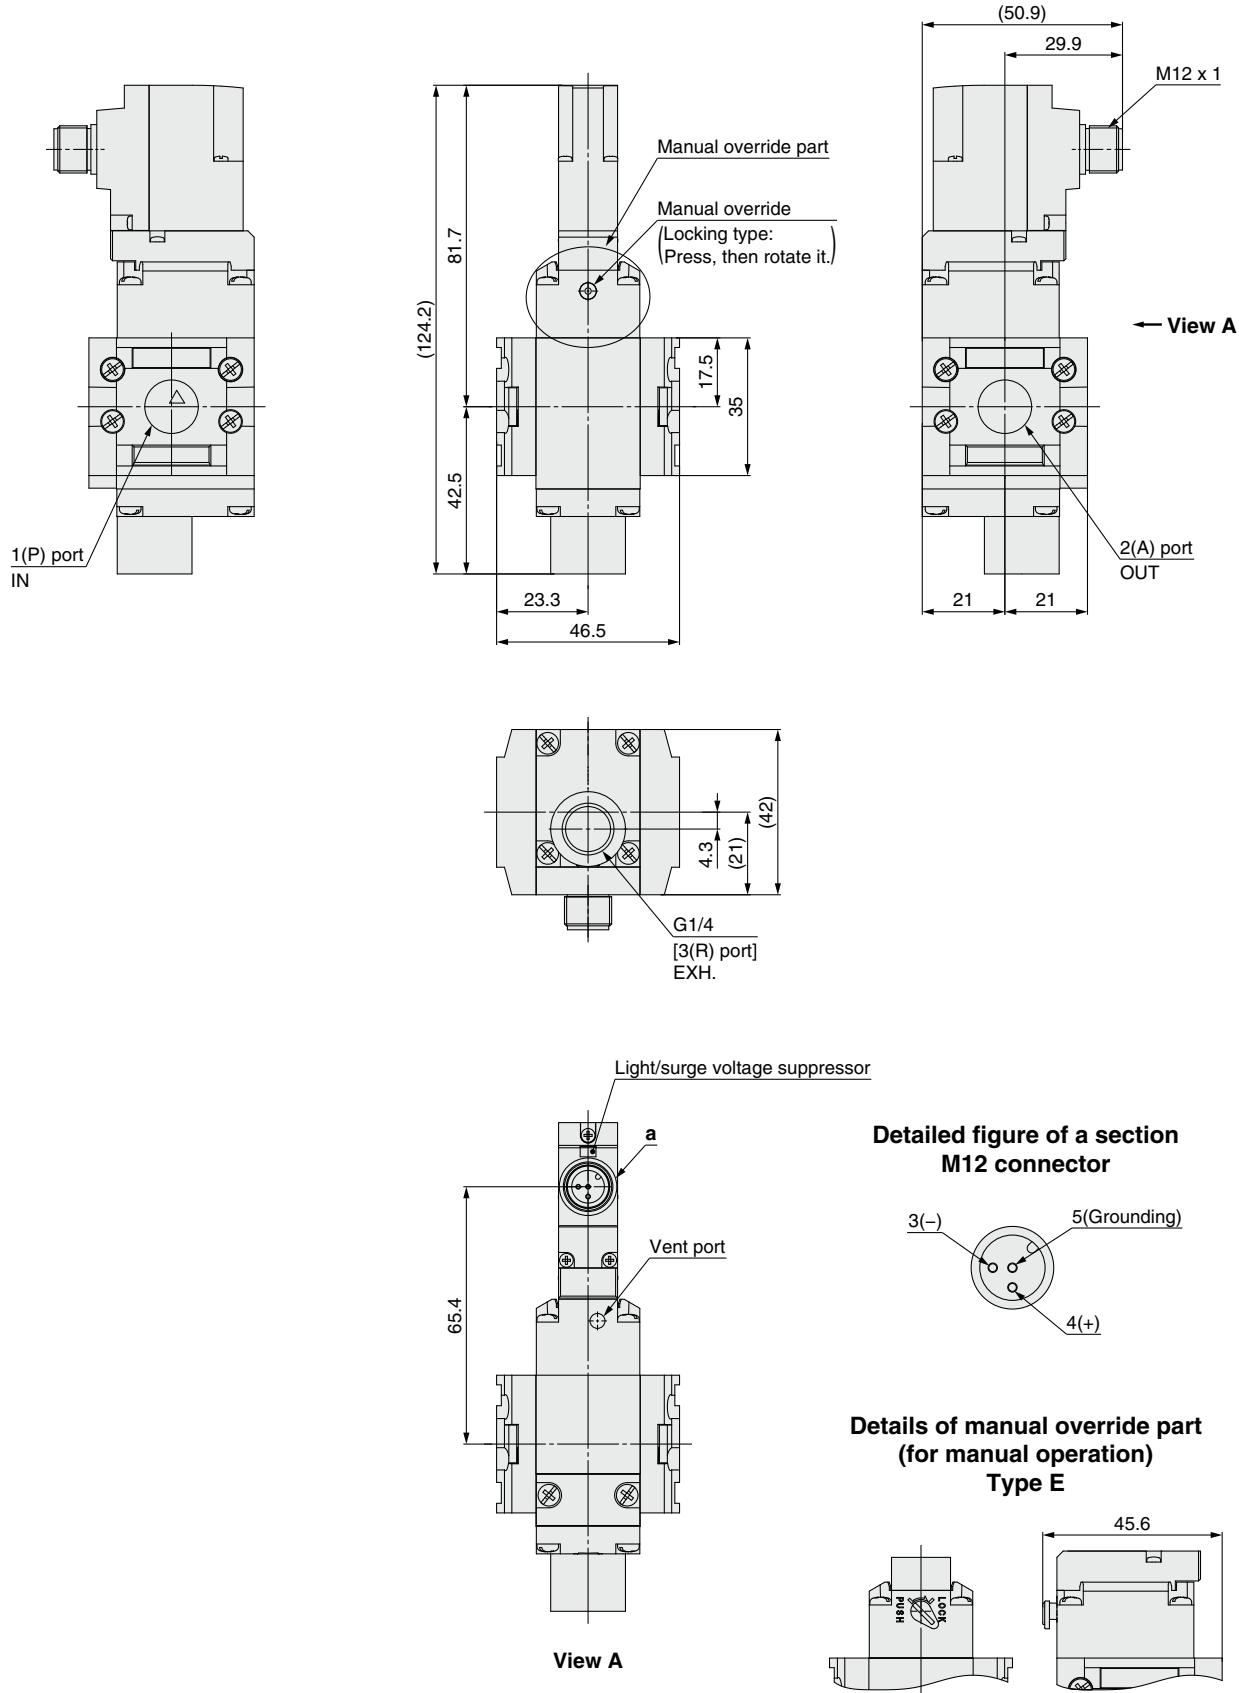


Dimensions

N.O. (Normally open)
VP346E-X661

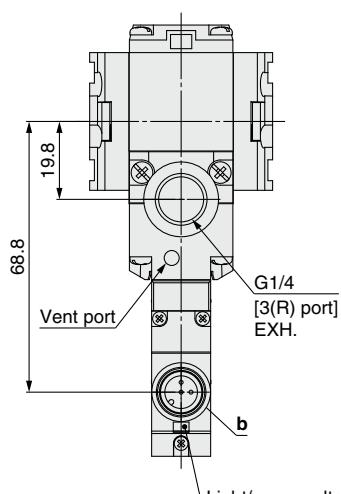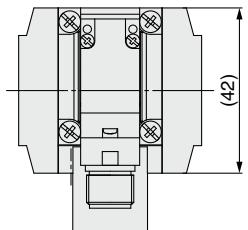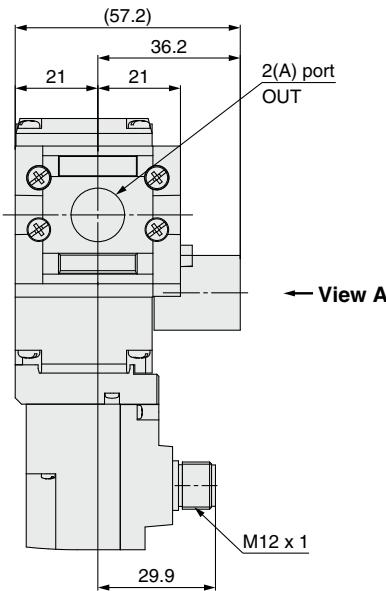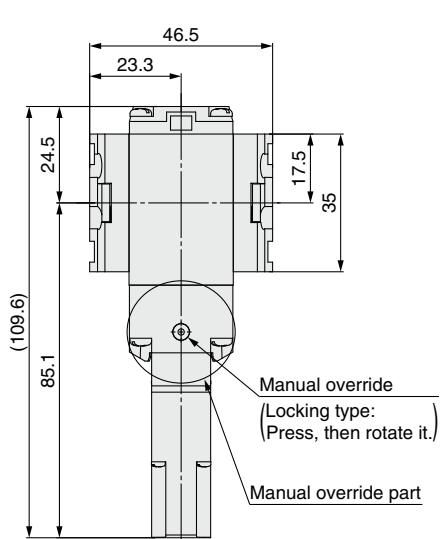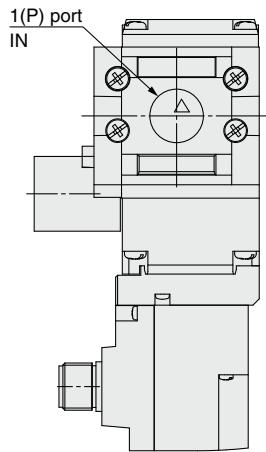


View A

**Detailed figure of b section
M12 connector**

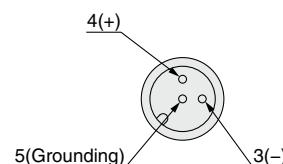

**Details of manual override part
(for manual operation)
Type E**

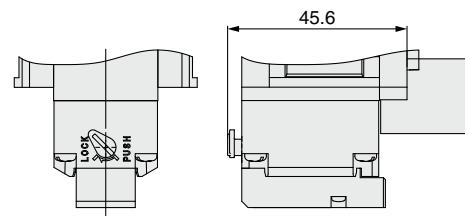

AMS20A/30A/
40A/60A

AMS20B/30B/
40B/60B

EXA1

ITV2050 to 3050
-X399

AR20S to 50S

VP346E/546E/746E/
946E-X660/X661

Accessories

Related
Products

Specific Product
Precautions






VP346E/546E/746E/946E-X660/X661

Dimensions


With soft start-up function

N.C. (Normally closed)


VP346E-S-X660

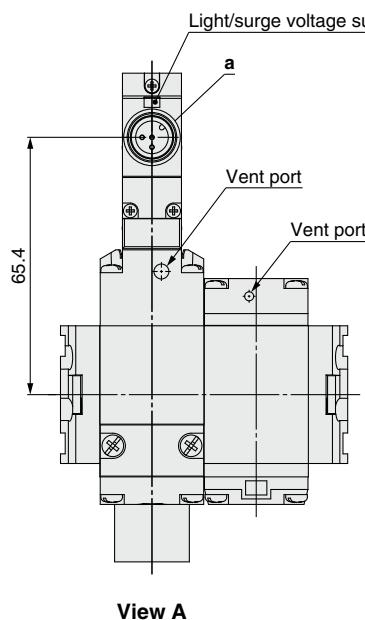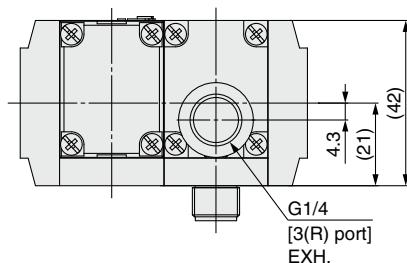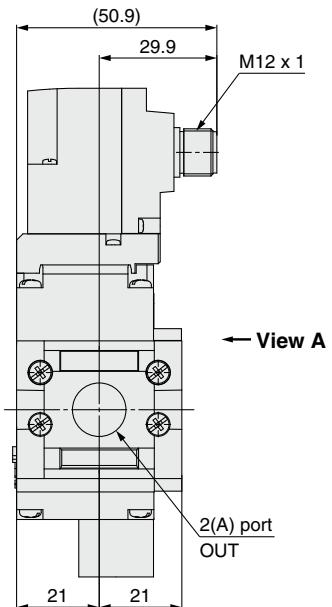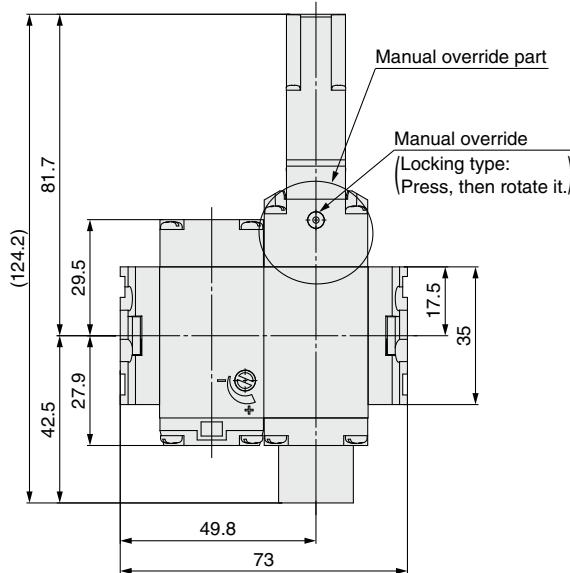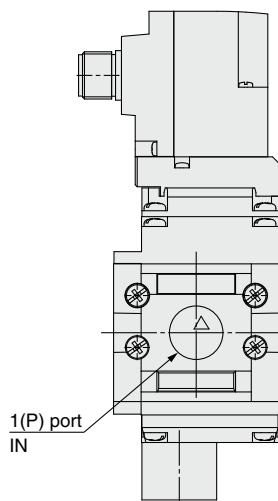

Detailed figure of a section M12 connector





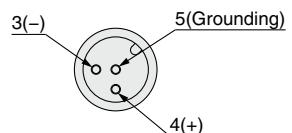


**Details of manual override part
(for manual operation)
Type E**

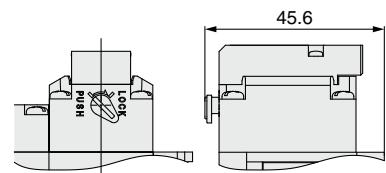


Dimensions

With soft start-up function
N.O. (Normally open)
VP346E-S-X661

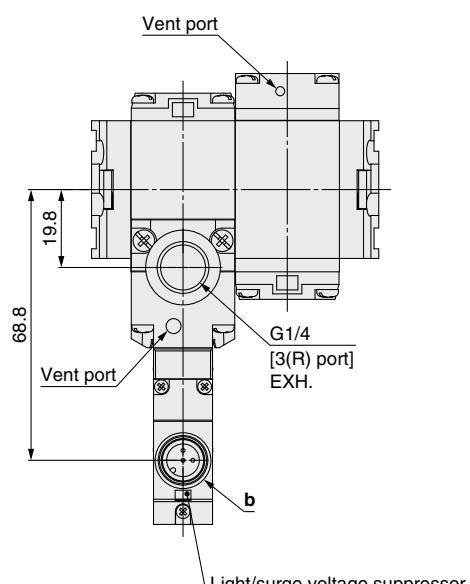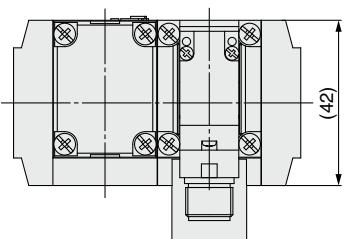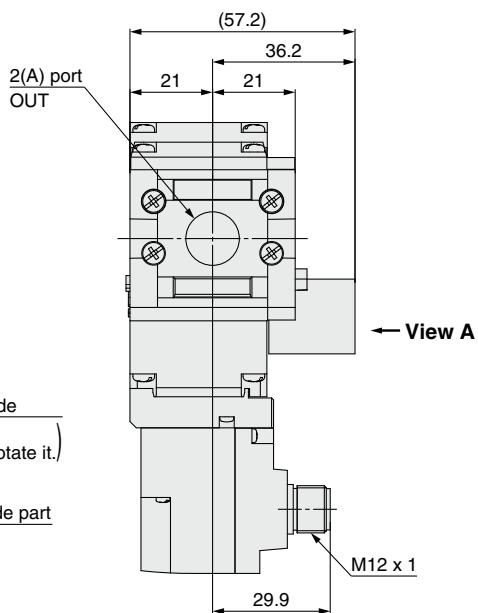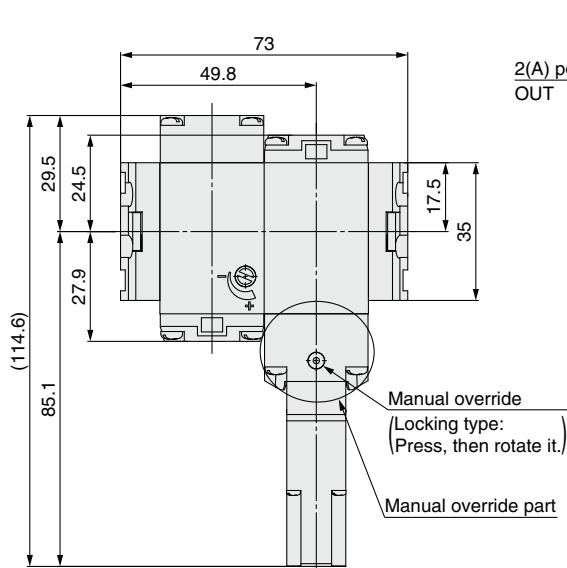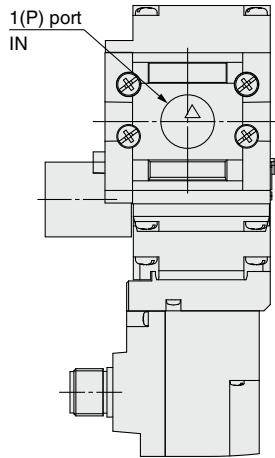


View A

**Detailed figure of b section
M12 connector**

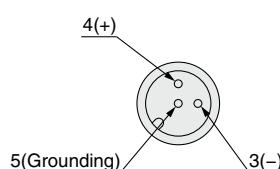

**Details of manual override part
(for manual operation)
Type E**

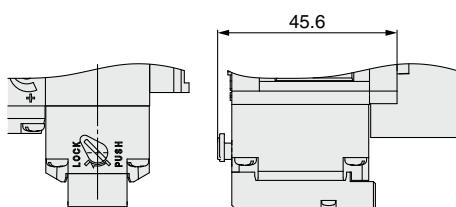

AMS20A/30A/
40A/60A

AMS20B/30B/
40B/60B

EXA1

ITV2050 to 3050
-X399

AR20S to 50S

VP346E/546E/746E/
946E-X660/X661

Accessories

Related
Products


Specific Product
Precautions

VP346E/546E/746E/946E-X660/X661

Dimensions






N.C. (Normally closed)

VP546E-X660

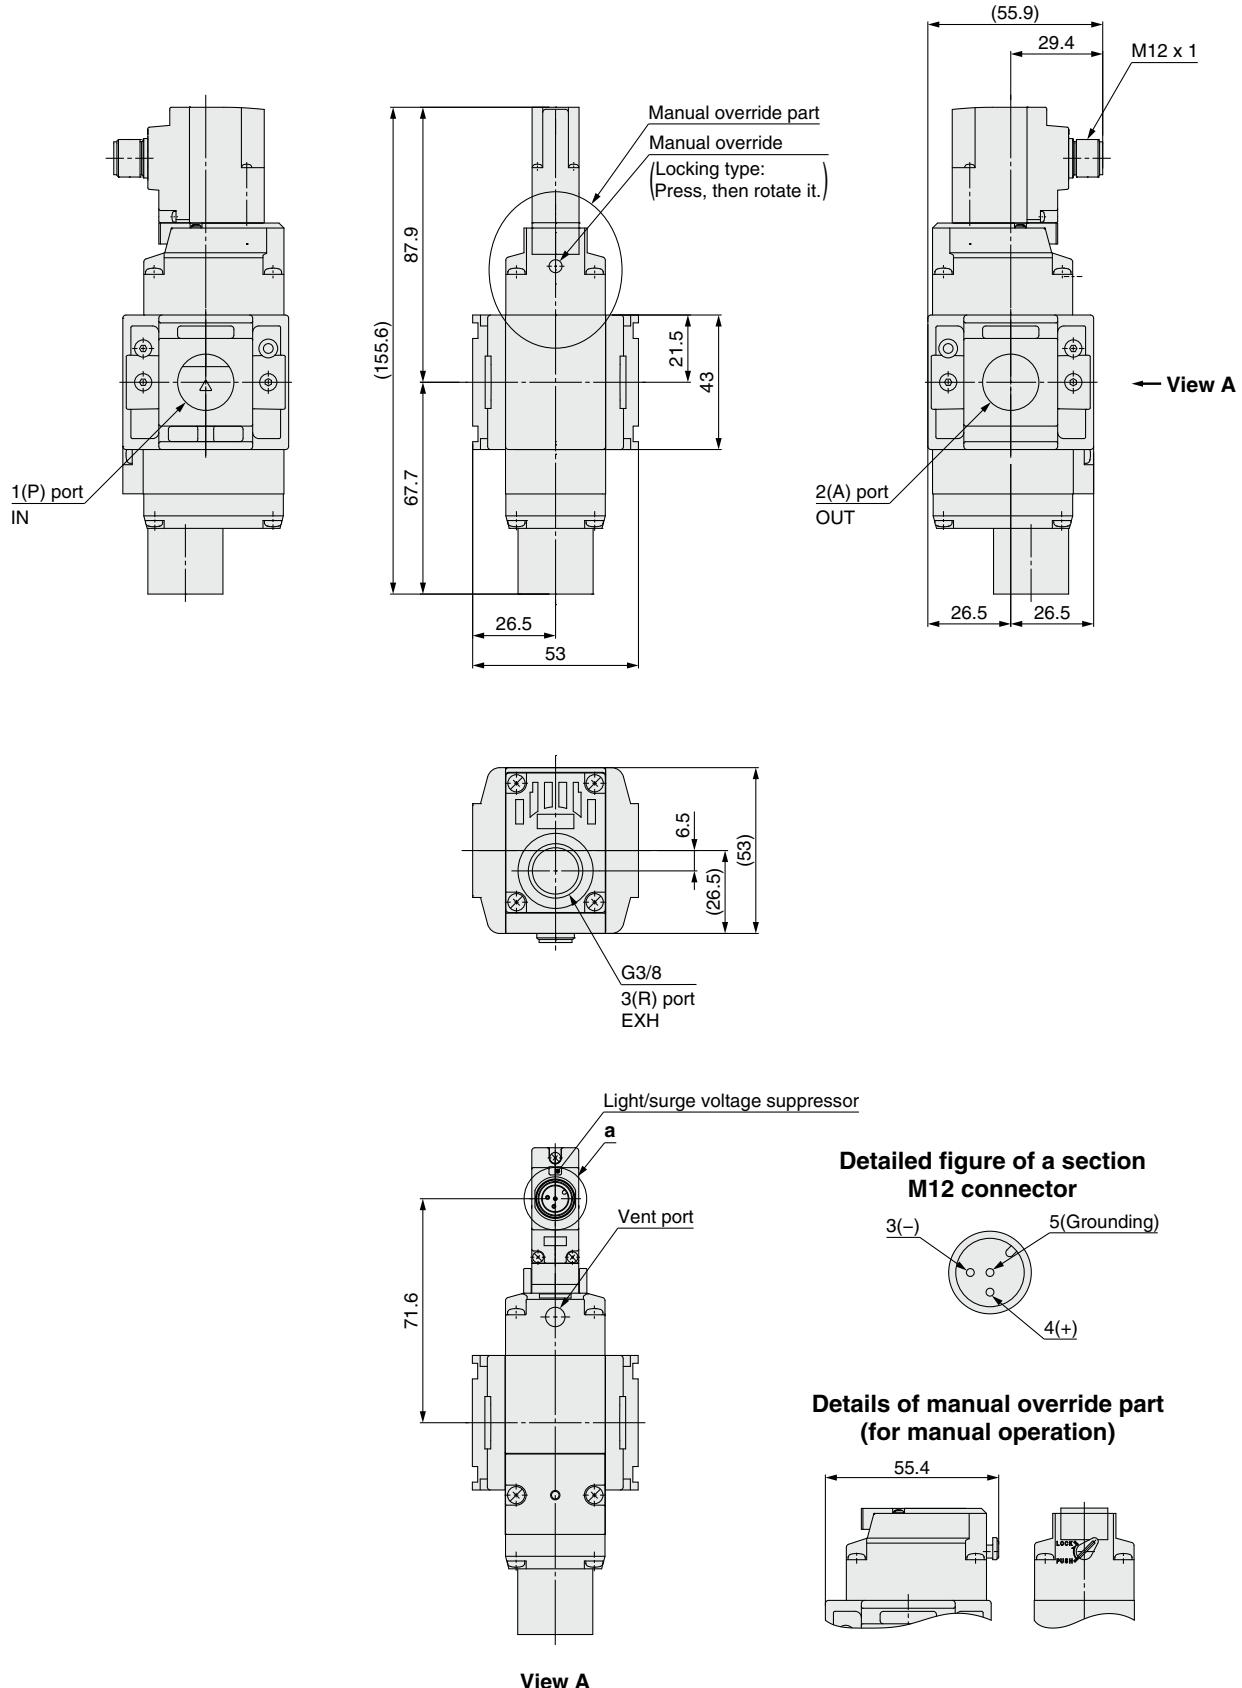


Dimensions


N.O. (Normally open)
VP546E-X661

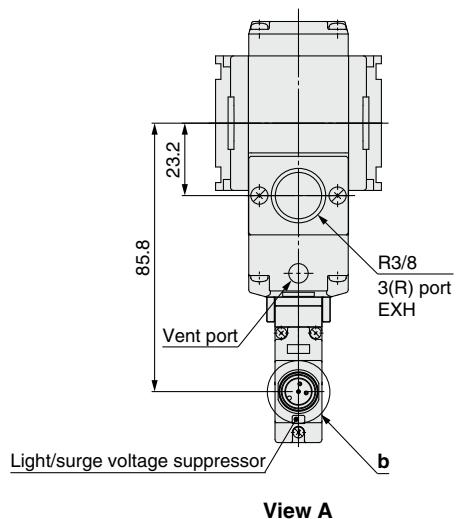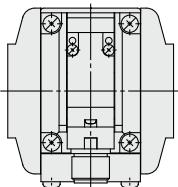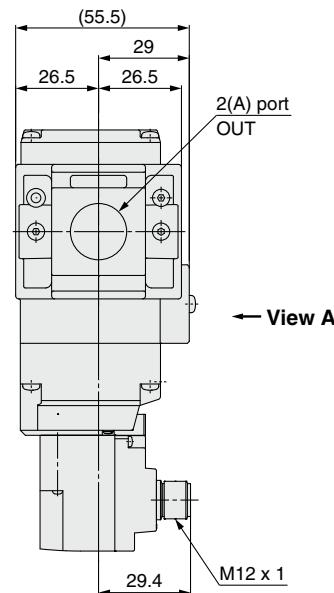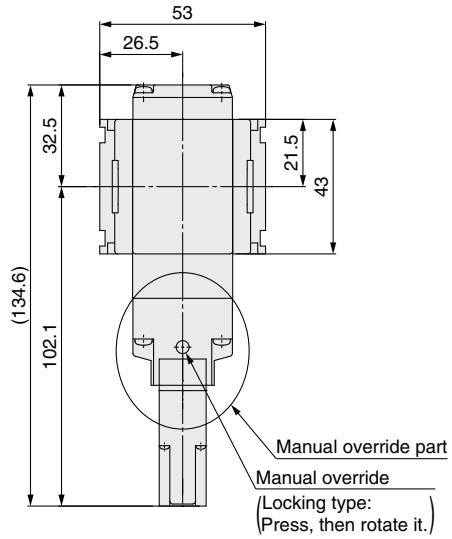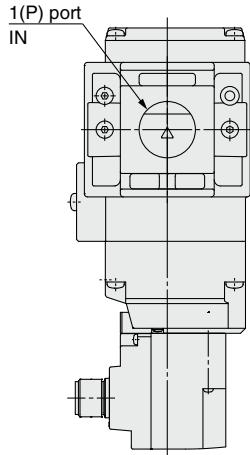

**Detailed figure of b section
M12 connector**

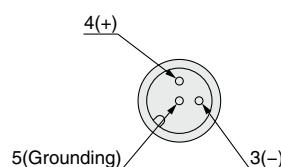

**Details of manual override part
(for manual operation)**

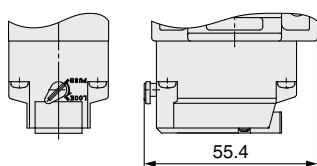

AMS20A/30A/
40A/60A

AMS20B/30B/
40B/60B

EXA1

ITV2050 to 3050
-X399

AR20S to 50S

VP346E/546E/746E/
946E-X660/X661

Accessories

Related
Products

Specific Product
Precautions






VP346E/546E/746E/946E-X660/X661

Dimensions

With soft start-up function


N.C. (Normally closed)

VP546E-S-X660

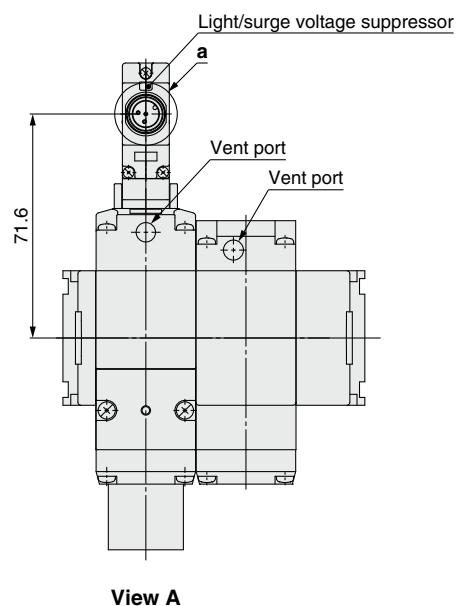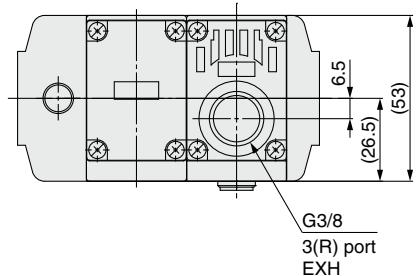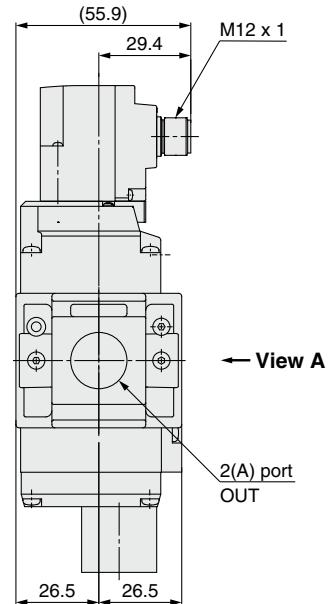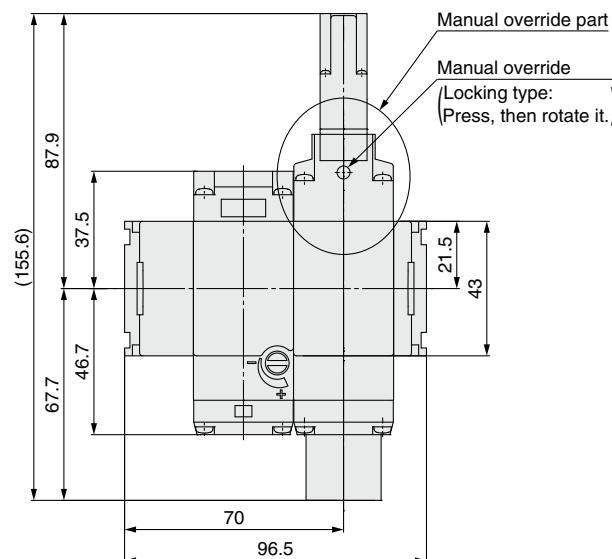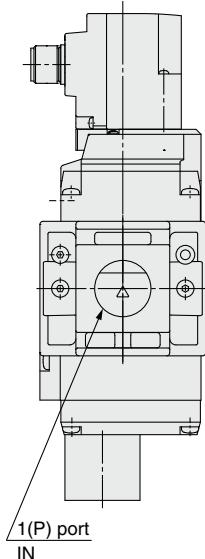


View A

**Detailed figure of a section
M12 connector**





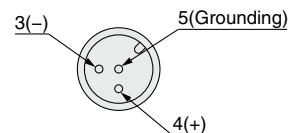


**Details of manual override part
(for manual operation)**

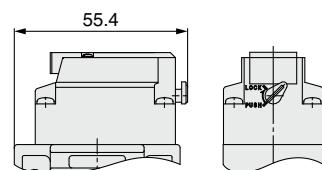


Dimensions


With soft start-up function
N.O. (Normally open)
VP546E-S-X661

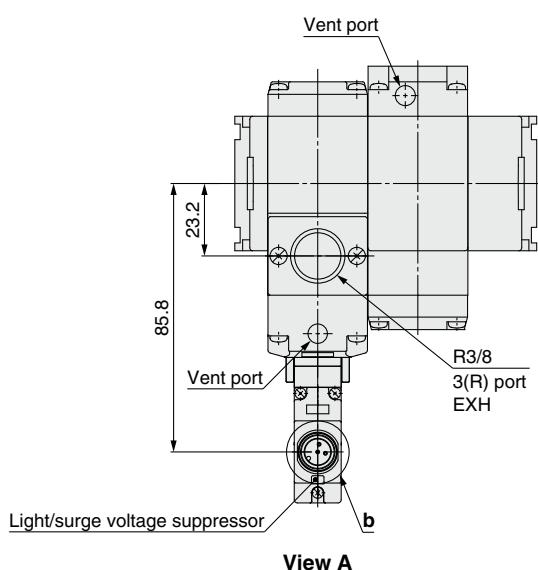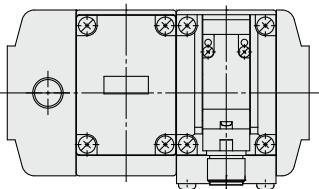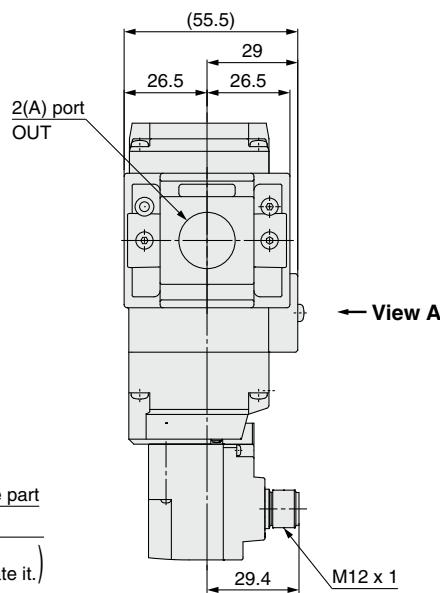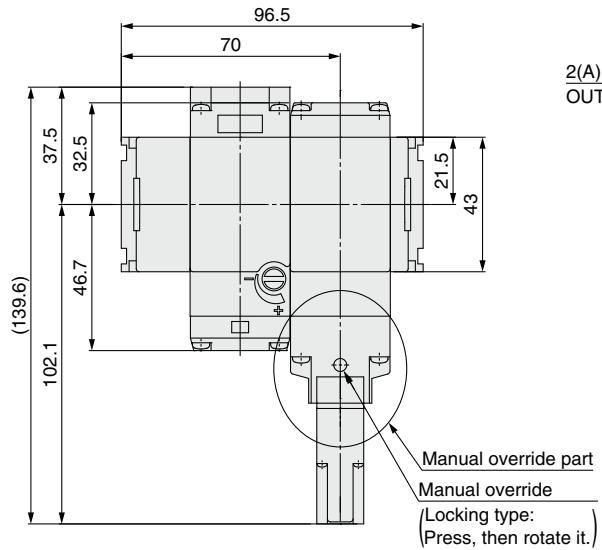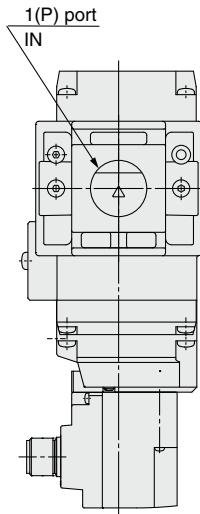

**Detailed figure of b section
M12 connector**

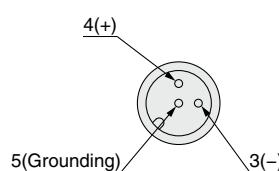

**Details of manual override part
(for manual operation)**

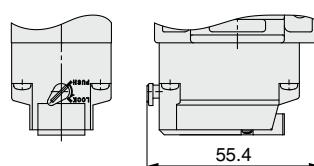

AMS20A/30A/
40A/60A

AMS20B/30B/
40B/60B

EXA1

ITV2050 to 3050
-X399

AR20S to 50S

VP346E/546E/746E/
946E-X660/X661

Accessories

Related
Products


Specific Product
Precautions

VP346E/546E/746E/946E-X660/X661

Dimensions

N.C. (Normally closed)






VP746E-X660

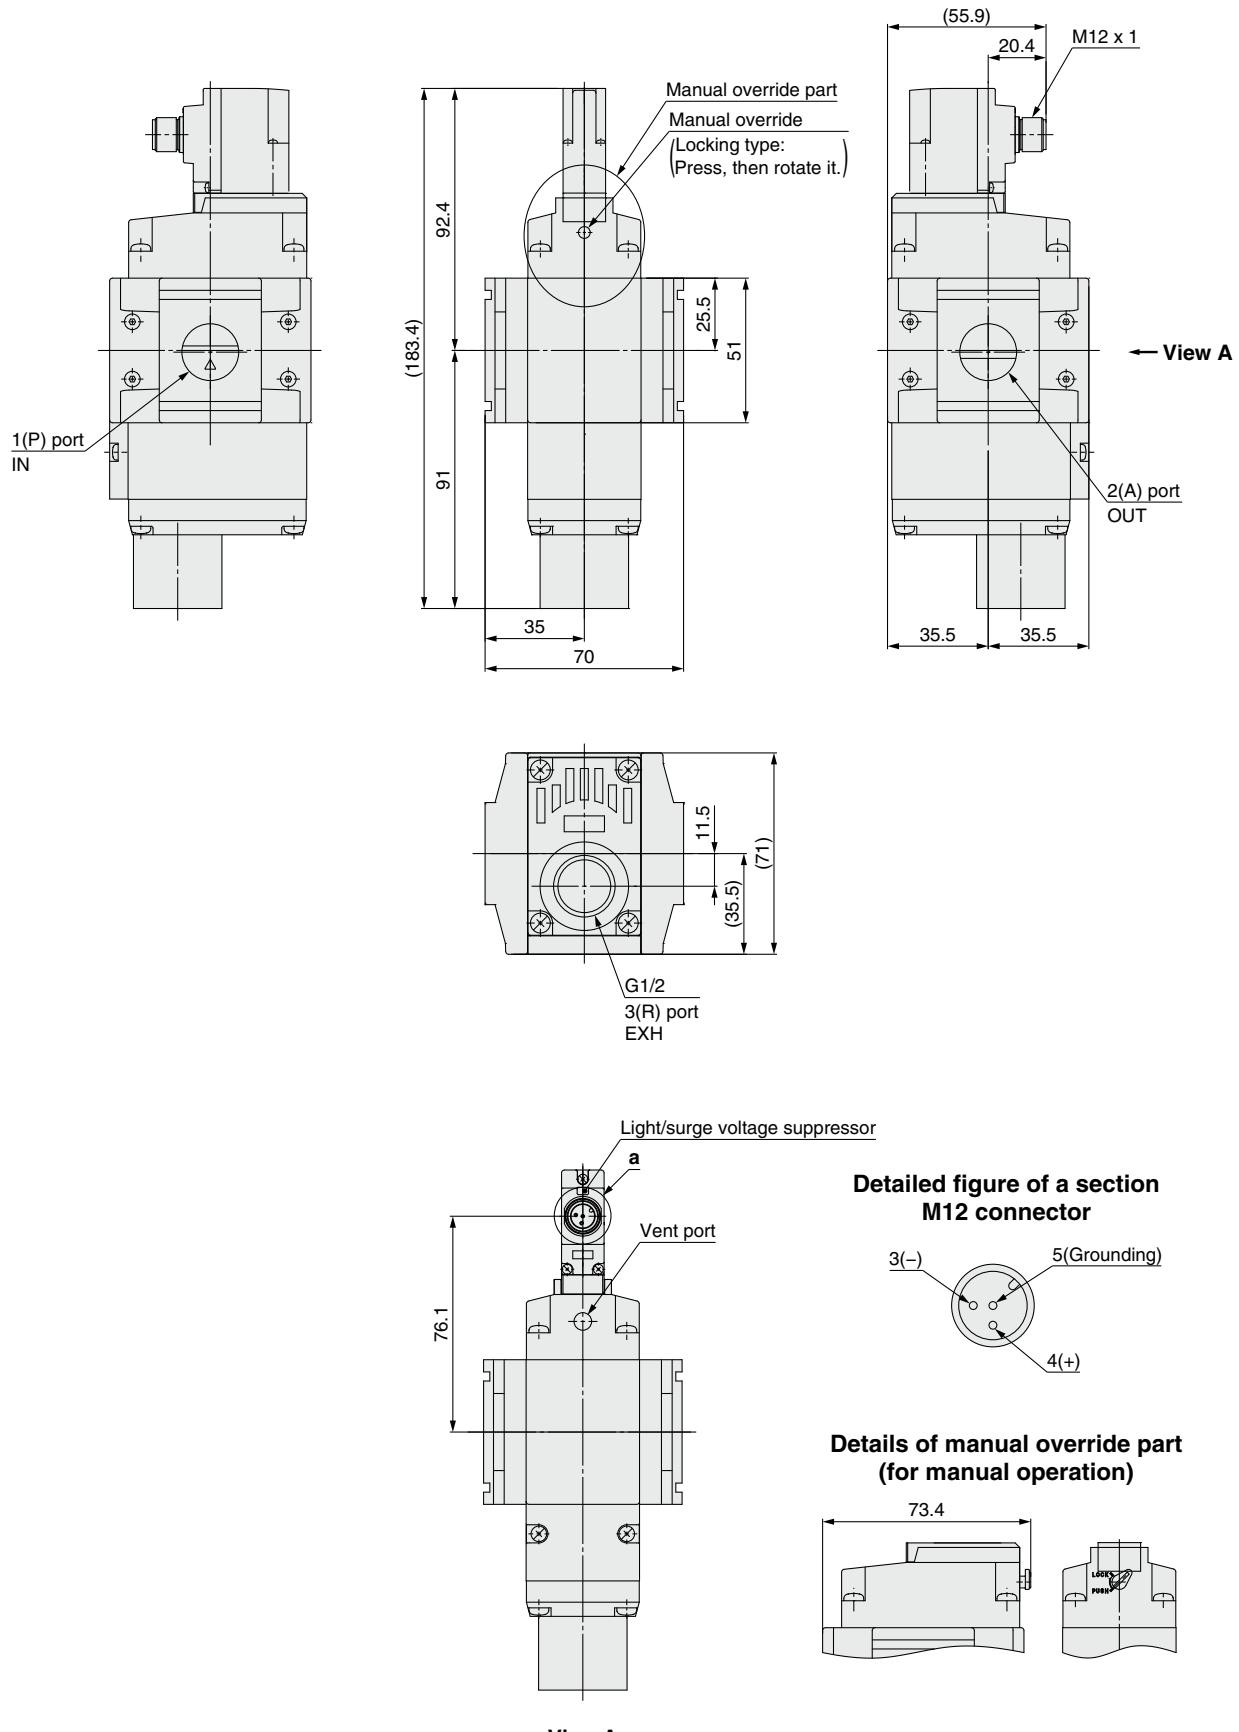


Dimensions

N.O. (Normally open)


VP746E-X661

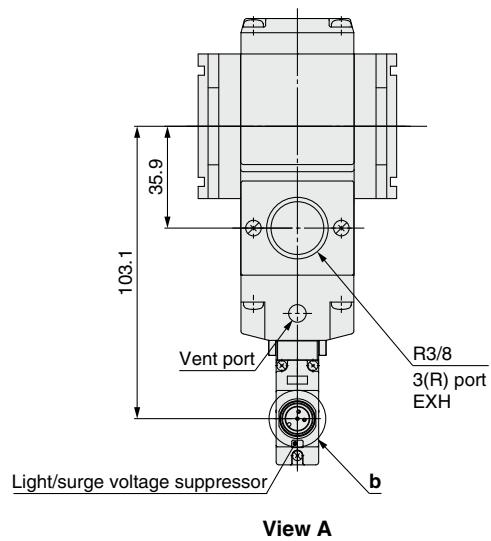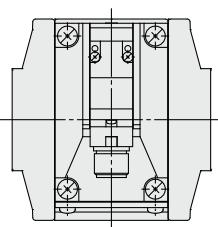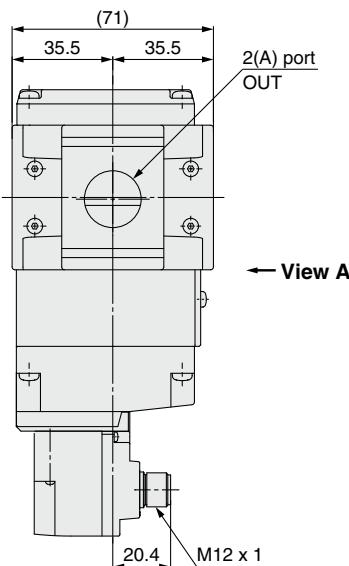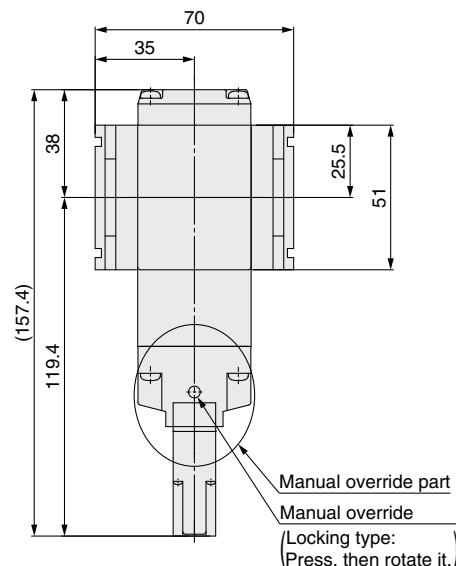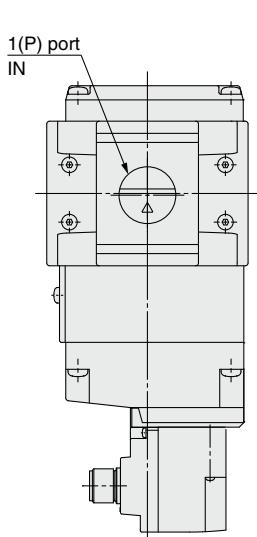

**Detailed figure of b section
M12 connector**

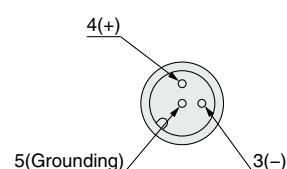

**Details of manual override part
(for manual operation)**

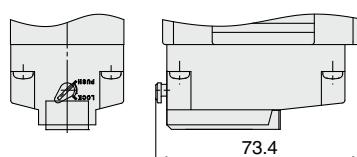

AMS20A/30A/
40A/60A

AMS20B/30B/
40B/60B

EXA1

ITV2050 to 3050
-X399

AR20S to 50S

VP346E/546E/746E/
946E-X660/X661

Accessories

Related
Products

Specific Product
Precautions






VP346E/546E/746E/946E-X660/X661

Dimensions


With soft start-up function

N.C. (Normally closed)


VP746E-S-X660

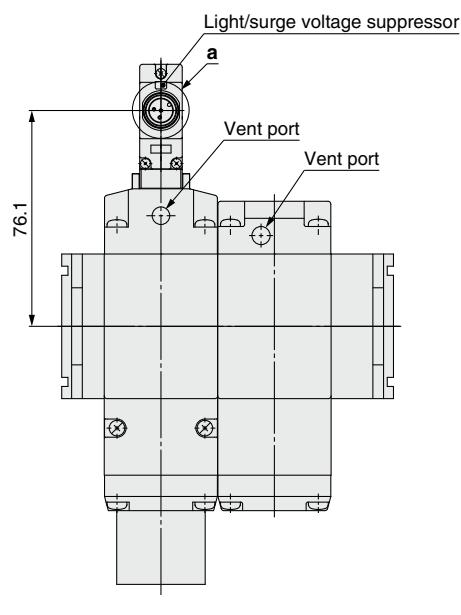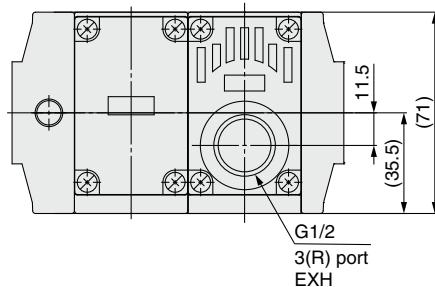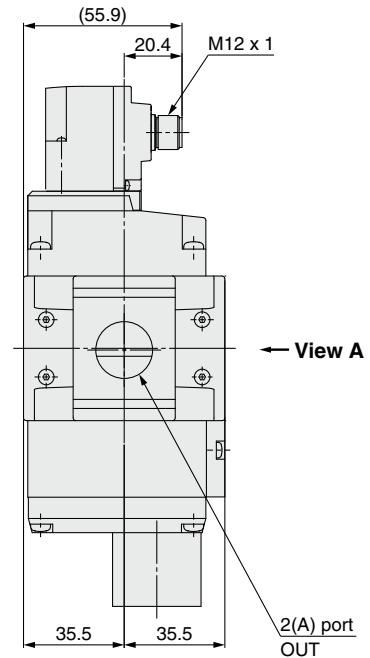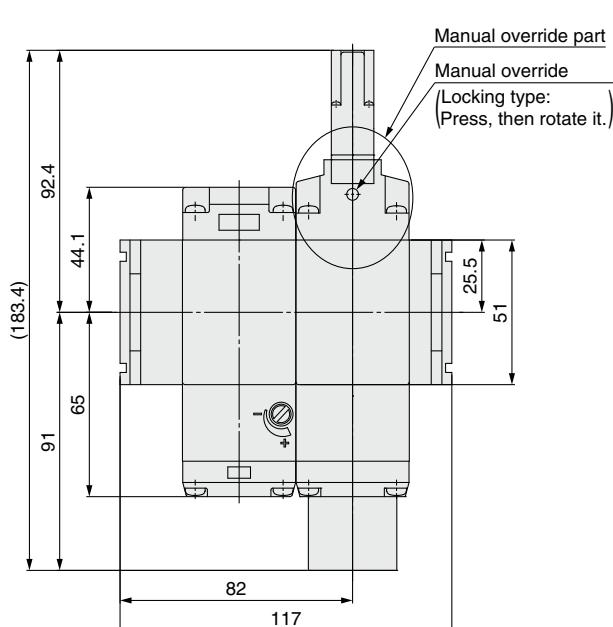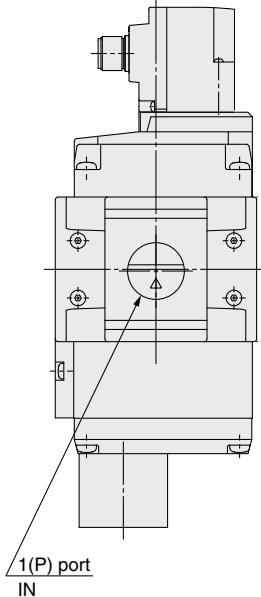

**Detailed figure of a section
M12 connector**



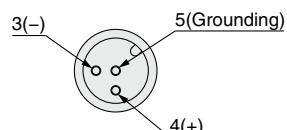


**Details of manual override part
(for manual operation)**

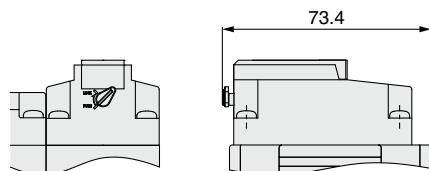


Dimensions


With soft start-up function
N.O. (Normally open)
VP746E-S-X661

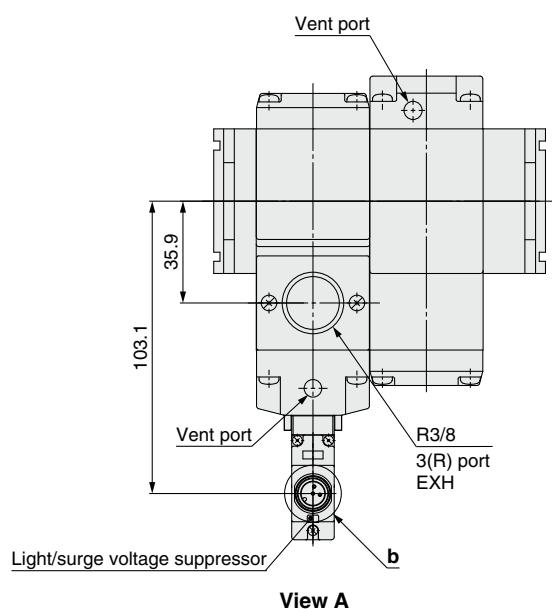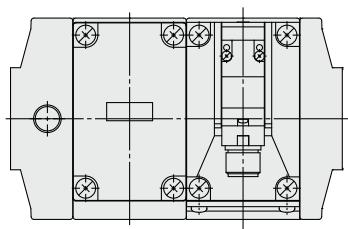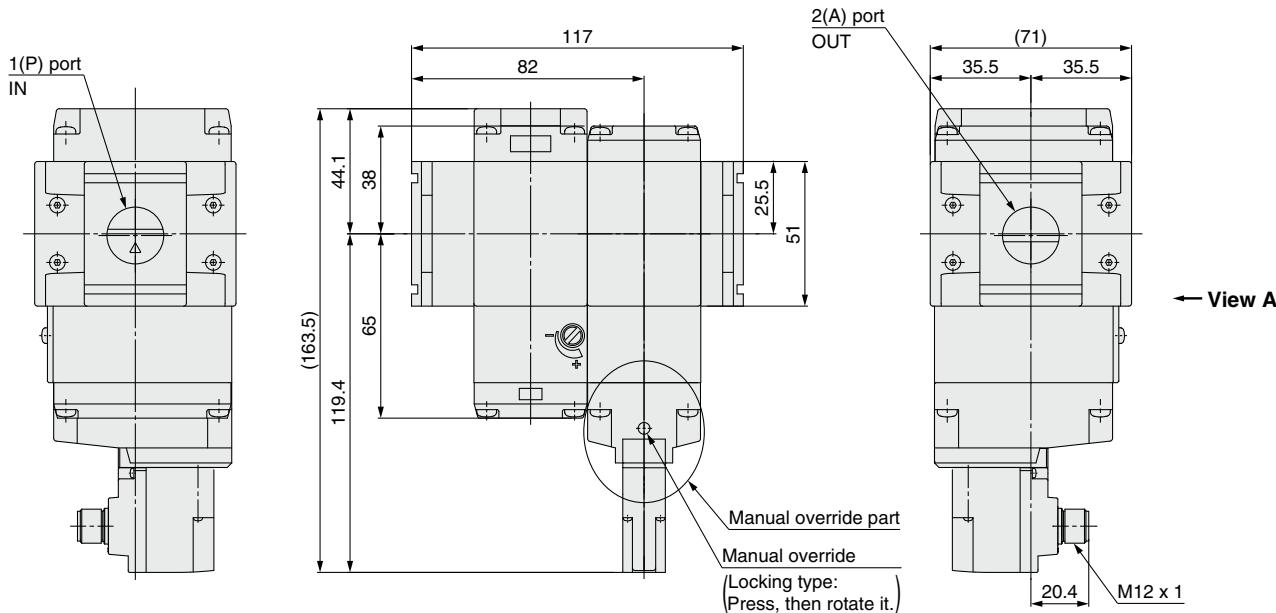

**Detailed figure of b section
M12 connector**

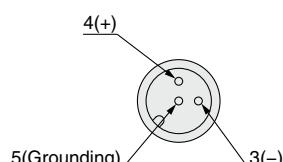

**Details of manual override part
(for manual operation)**

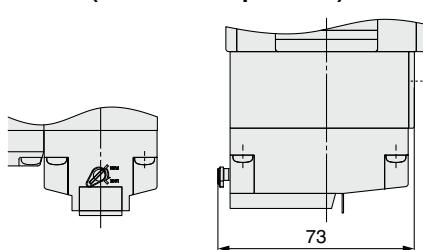

AMS20A/30A/
40A/60A

AMS20B/30B/
40B/60B

EXA1

ITV2050 to 3050
-X399

AR20S to 50S

VP346E/546E/746E/
946E-X660/X661

Accessories


Related
Products

Specific Product
Precautions

VP346E/546E/746E/946E-X660/X661





Dimensions

N.C. (Normally closed)
VP946E-X660


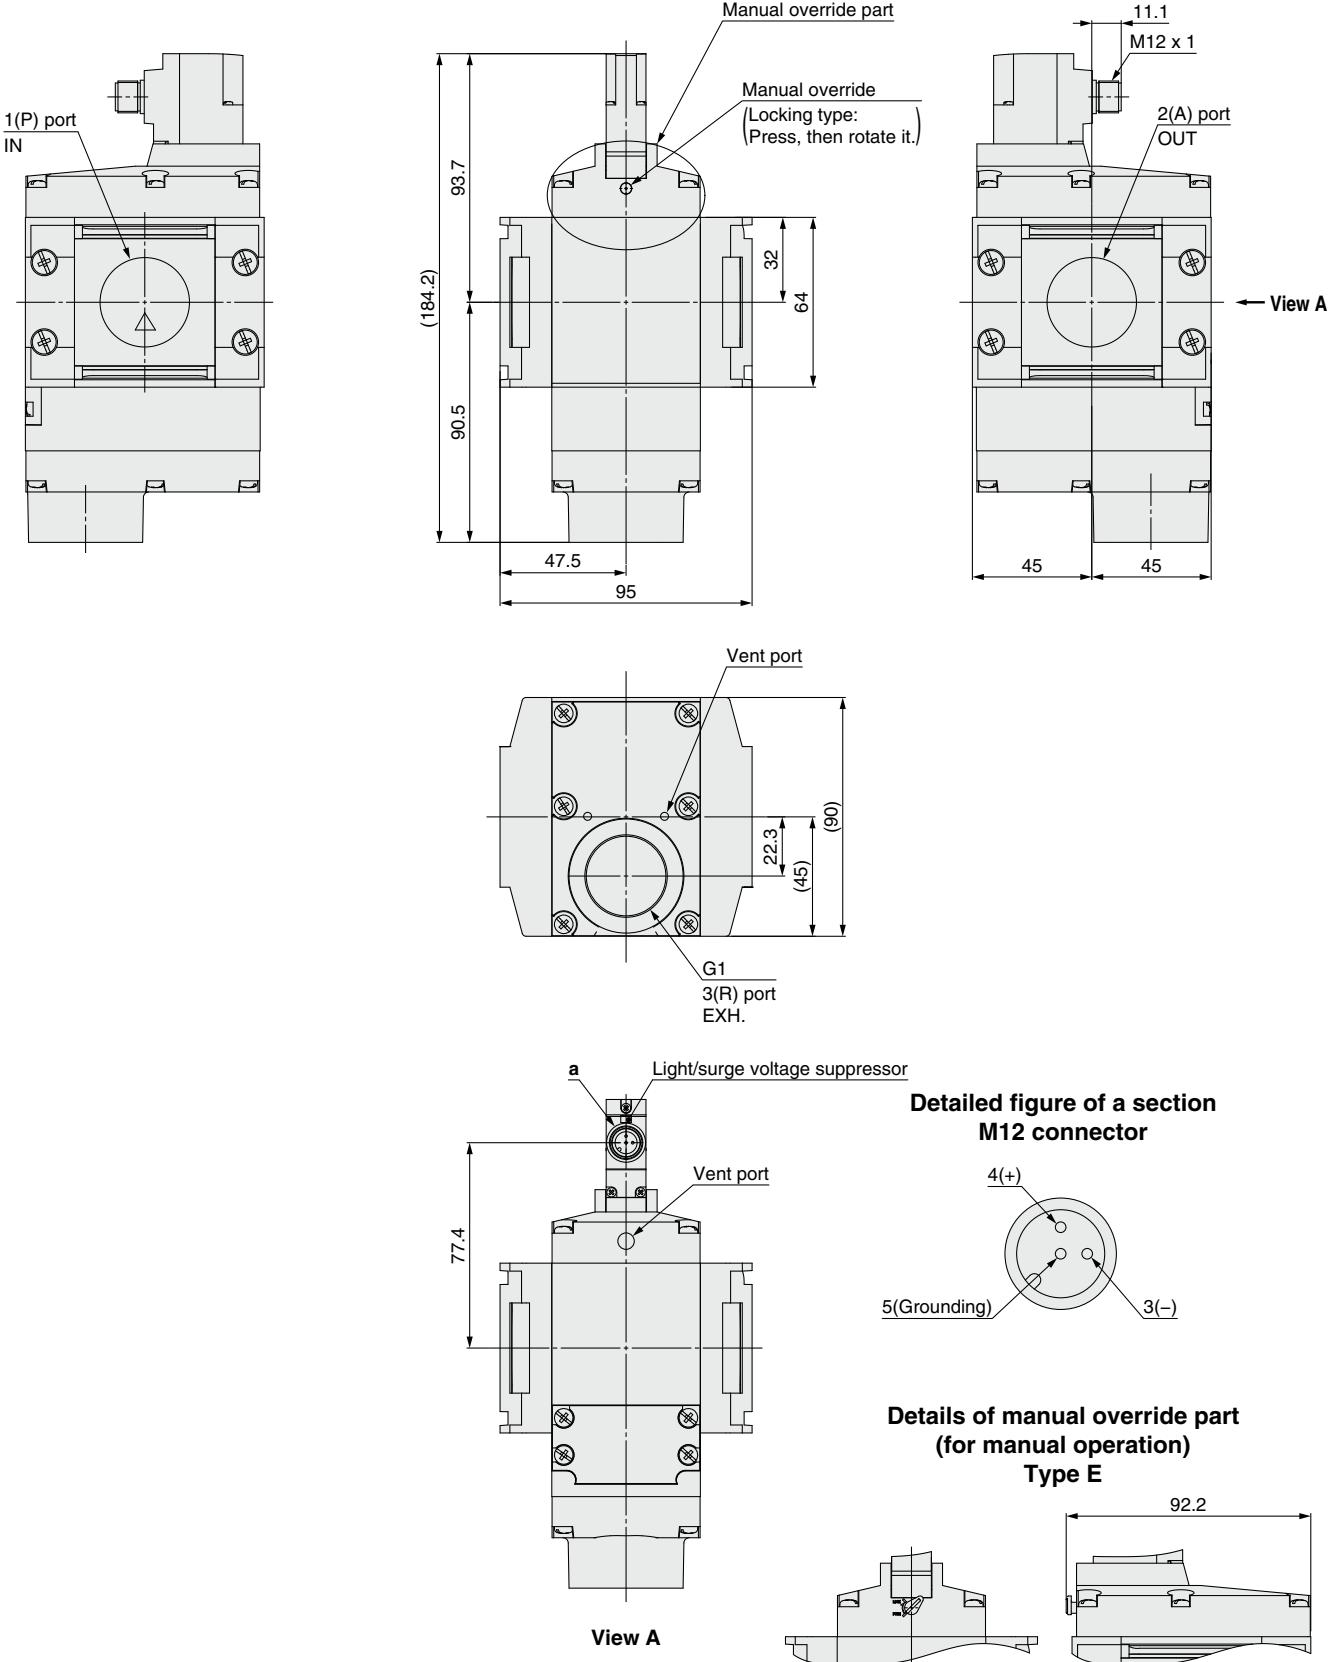


Dimensions


N.O. (Normally open)
VP946E-X661

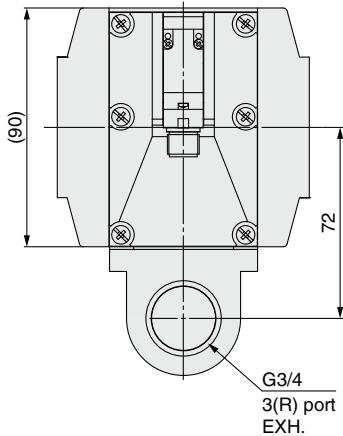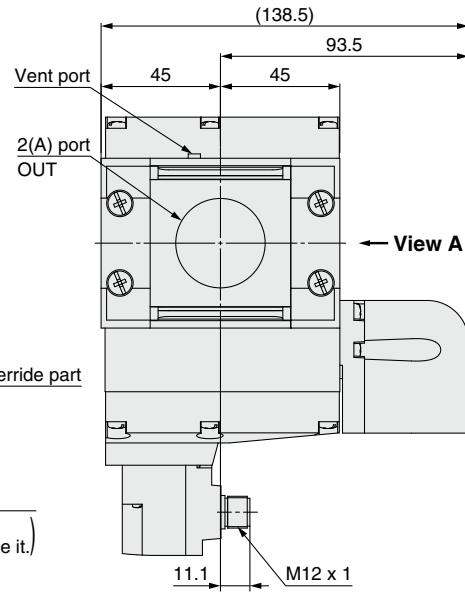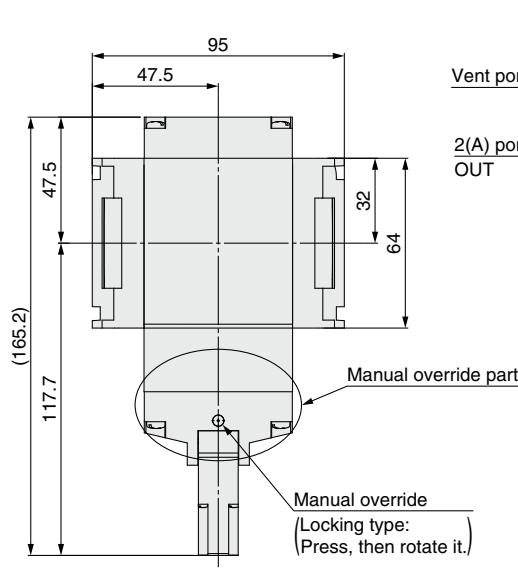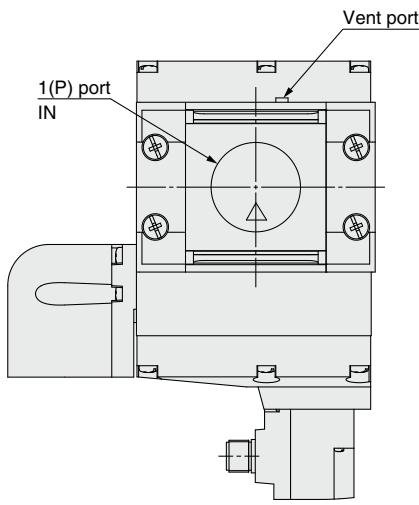

**Detailed figure of b section
M12 connector**

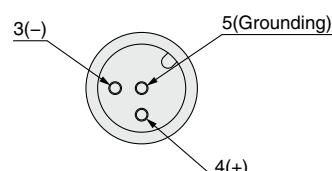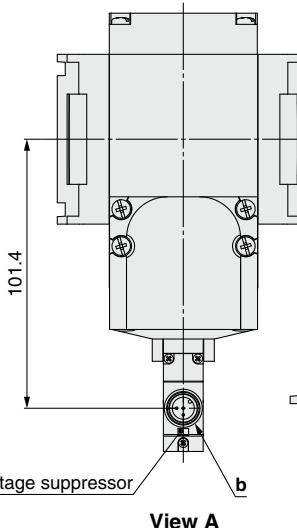

**Details of manual override part
(for manual operation)
Type E**

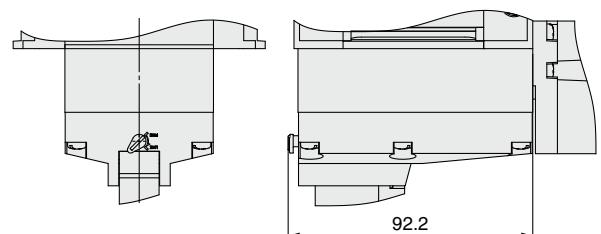

**AMS20A/30A/
40A/60A**

**AMS20B/30B/
40B/60B**

EXA1

**ITV2050 to 3050
-X399**

AR20S to 50S

**VP346E/546E/746E/
946E-X660/X661**

Accessories

**Related
Products**

**Specific Product
Precautions**






VP346E/546E/746E/946E-X660/X661

Dimensions


With soft start-up function

N.C. (Normally closed)


VP946E-S-X660

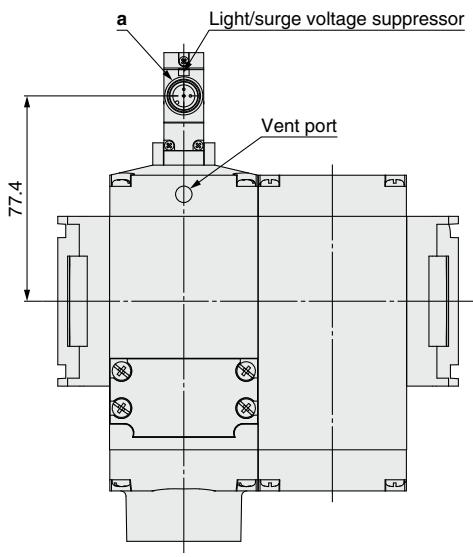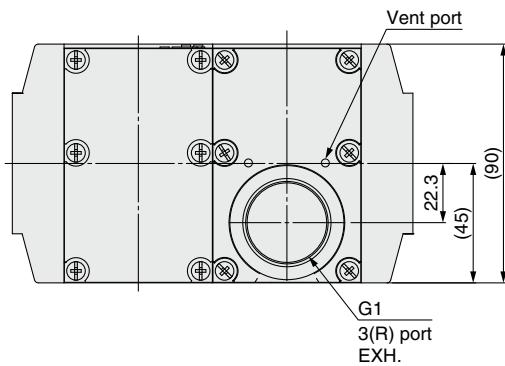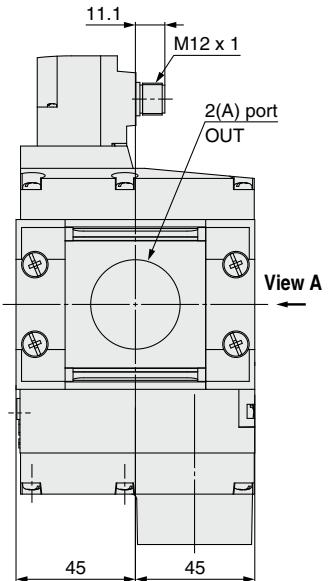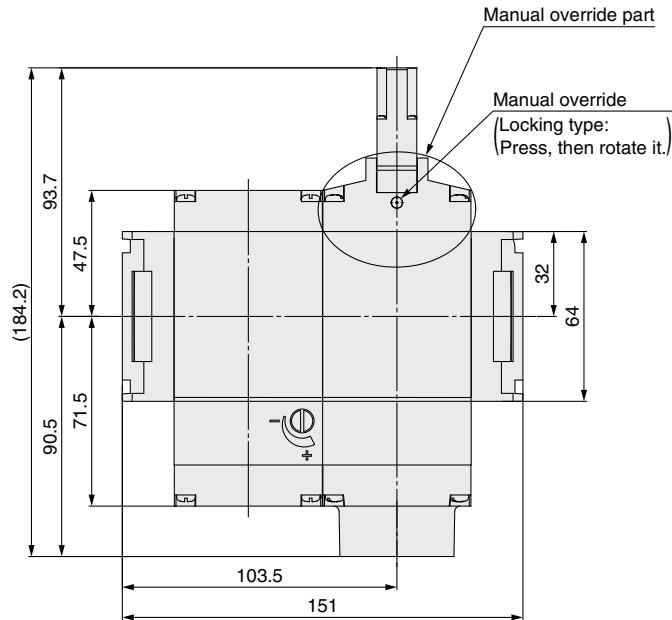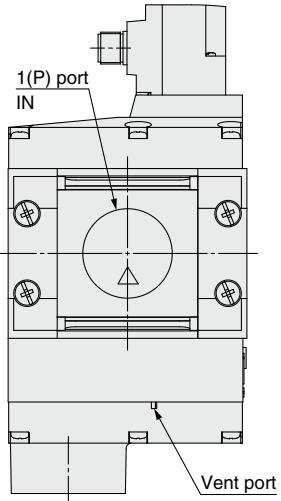

**Detailed figure of a section
M12 connector**

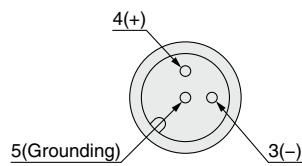

**Details of manual override part
(for manual operation)
Type E**




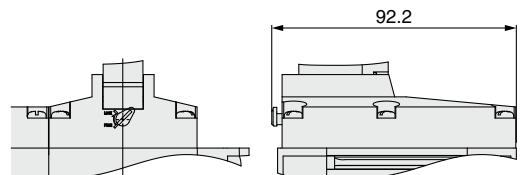


Dimensions


With soft start-up function

N.O. (Normally open)


VP946E-S-X661

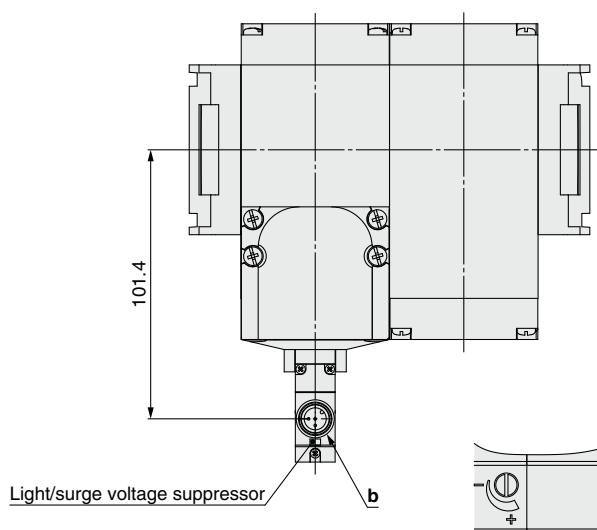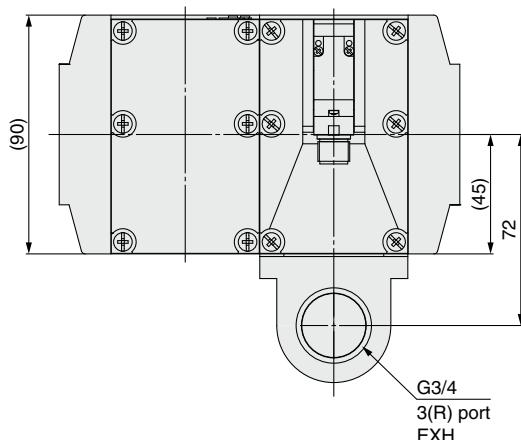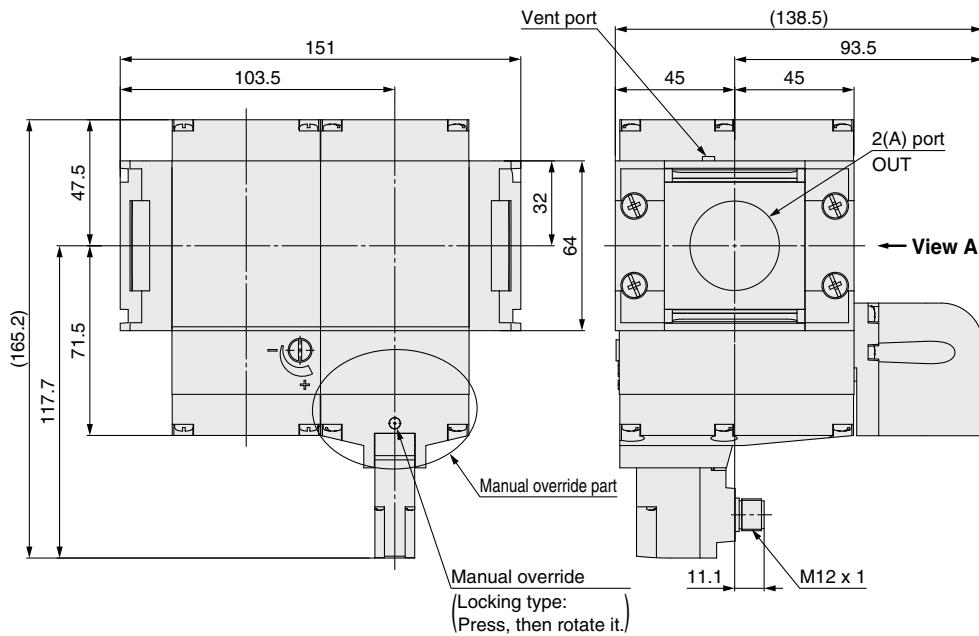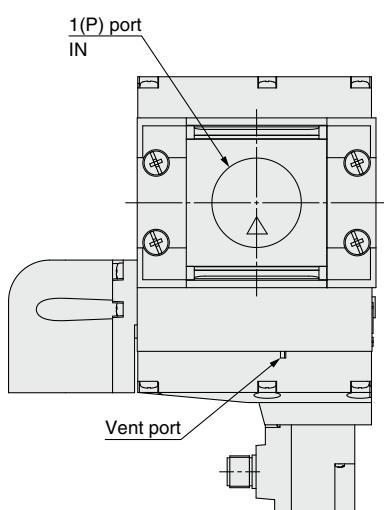

**Detailed figure of b section
M12 connector**

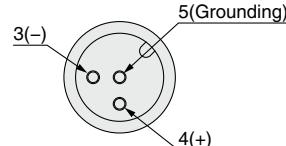

**Details of manual override part
(for manual operation)
Type E**

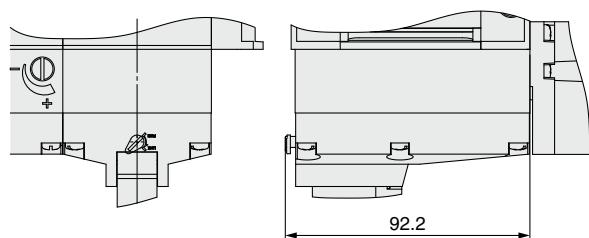

AMS20A/30A/
40A/60A

AMS20B/30B/
40B/60B

EXA1

ITV2050 to 3050
-X399

AR20S to 50S

VP346E/546E/746E/
946E-X660/X661


Accessories

Related
Products

Specific Product
Precautions

AMS20/30/40/60 Series Accessories

List of Accessories

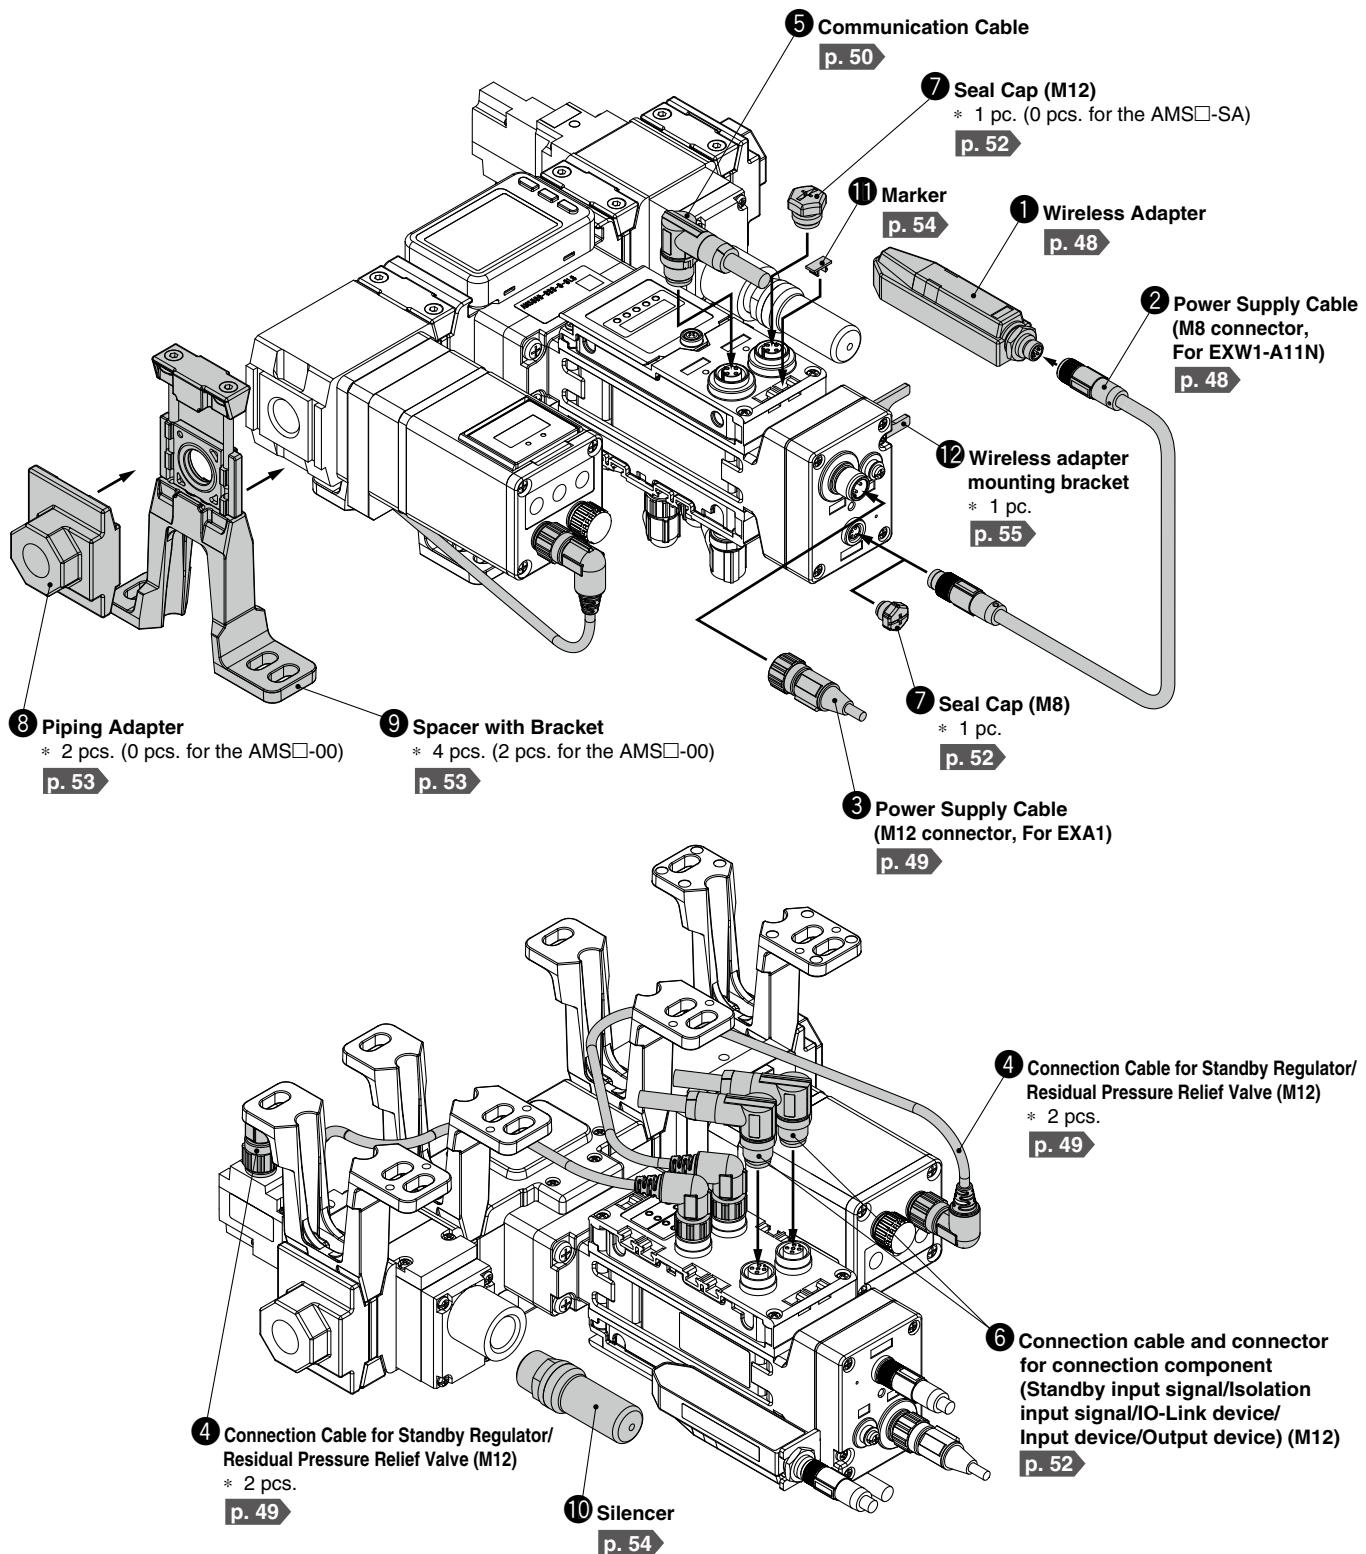

* The number of pieces included for the AMS model

① Wireless Adapter

Wireless adapter for air management hub EXA1

A wireless adapter needs to be connected to both the wireless base and the wireless remote.


EXW1-A11N

Specifications

Item	Specifications
Wireless communication	Protocol SMC original protocol (SMC encryption)
	Radio wave type (spread) Frequency Hopping Spread Spectrum (FHSS)
	Frequency 2.4 GHz (2403 to 2481 MHz)
	Number of frequency channels 79 ch
	Channel bandwidth 1.0 MHz
	Communication speed 1 Mbps
	Communication distance Approx. 100 m (Depending on the operating environment)
Electrical	Radio Law certificate Refer to the SMC website for the latest information regarding in which countries the product is certified.
	Power supply voltage range 24 VDC +10%
General	Current consumption 50 mA or less
	Enclosure IP67
	Ambient temperature (Operating temperature) 0 to 50°C
	Ambient temperature (Storage temperature) -10 to 60°C
	Ambient humidity 35 to 85%RH (No condensation)
	Withstand voltage 500 VAC, 1 min
	Insulation resistance 500 VDC, 10 MΩ or more
	Vibration resistance Conforms to EN 61131-2 5 <= f < 8.4 Hz 3.5 mm 8.4 <= f < 150 Hz 9.8 m/s ²
	Impact resistance Conforms to EN 61131-2 147 m/s ² , 11 ms
	Standards CE/UKCA marking, UL (CSA)*1
	Weight 40 g


*1 UL (CSA) compliance applies only when connected to an EXA1 air management hub.

*2 Please purchase an EXW1-AC-X1 connection cable separately.

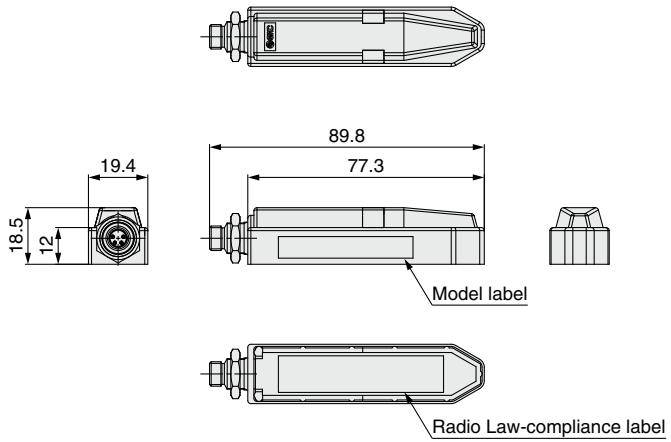

Connector


M8, 4-pin, plug	Terminal no.	Description
3	1	24V (US1)
4	2	Internal bus B
1	3	0V (US1)
2	4	Internal bus A

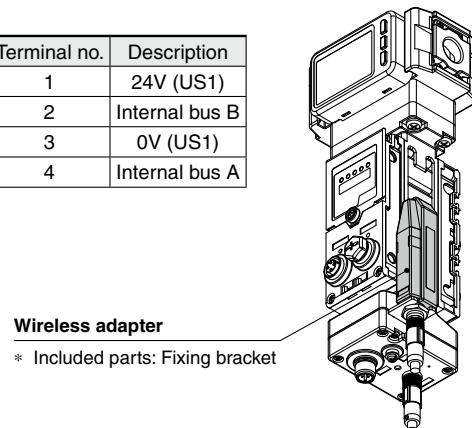


② Power Supply Cable [M8 connector, For EXW1-A11N, With connectors on both sides (socket/plug)]

EXW1-AC1-X1 Straight 0.3 m


* This product must be used in a fixed position.

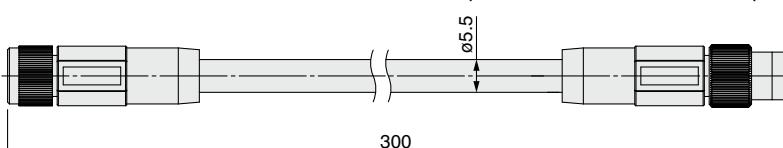

Socket connector pin arrangement




Terminal no.

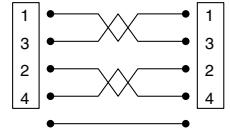

Connections

Plug connector pin arrangement



Item	Specifications
Cable O.D.	Ø5.5 mm
Conductor nominal cross section	AWG24
Wire O.D. (Including insulator)	1.12 mm
Min. bending radius	22 mm

AMS20A/30A/
40A/60A

AMS20B/30B/
40B/60B

EXA1

ITV2050 to 3050
-X399

AR20S to 50S

VP346E/546E/746E/
946E-X660/X661

Accessories

Related
Products

Specific Product
Precautions

AMS20/30/40/60 Series

③ Power Supply Cable (M12 connector, For EXA1)

* The shape of the M12 connector is A-coded (Normal key).

EX500-AP 050 - S

Cable length (L)

010	1000 mm
050	5000 mm


Connector specification

S	Straight
A	Angled




Straight connector type

Socket connector pin arrangement
A-coded (Normal key)

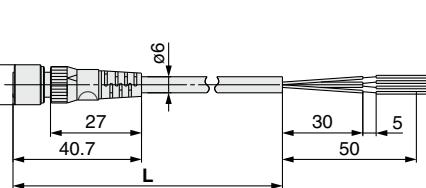


Item	Specifications
Cable O.D.	Φ6 mm
Nominal cross section	0.3 mm²/AWG22
Wire diameter (Including insulator)	1.5 mm
Min. bending radius	40 mm (Fixed)

Angled connector type

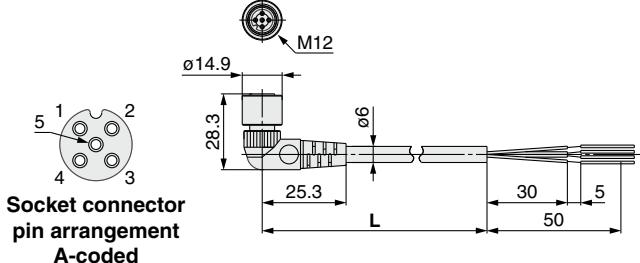

Socket connector pin arrangement
A-coded (Normal key)

Item	Specifications
Cable O.D.	Φ6 mm
Nominal cross section	0.3 mm²/AWG22
Wire diameter (Including insulator)	1.5 mm
Min. bending radius	40 mm (Fixed)

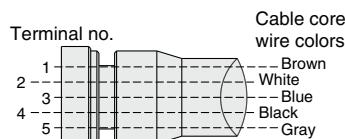


Connections

ZS-37-A

Lead wire with M12 connector

Pin no.	Pin name	Wire color
1	DC(+)	Brown
2	N.C.	White
3	DC(-)	Blue
4	N.C.	Black

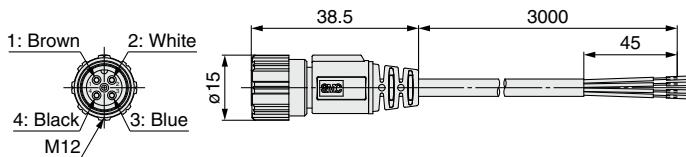


Cable Specifications

Item	Specifications
Conductor	Nominal cross section AWG23
Insulator	Outside diameter Approx. 1.1 mm
	Color Brown, Blue, Black, White
Sheath	Finished outside diameter Φ4



④ Connection Cable for Standby Regulator/Residual Pressure Relief Valve [With M12 angle connectors on both sides (male/female)]

EXA1-AC1 Cable length L: 320 mm

EXA1-AC2 Cable length L: 220 mm

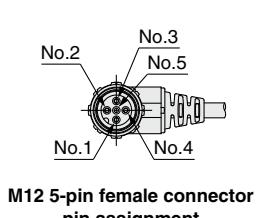

M12 5-pin female connector (Right angle)

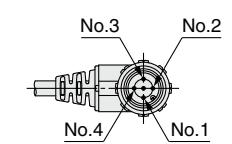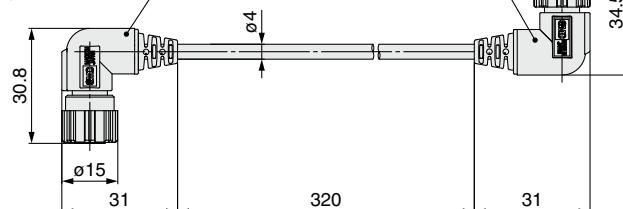

M12 4-pin male connector pin assignment

* Included with AMS□A/B air management systems

Terminal no. Terminal no.

1	○	○	1
2	○	○	2
3	○	○	3
4	○	○	4
5	○	○	5

Connections

Component and Connection Cable Suitable Table


Body size	Standby electro-pneumatic regulator	Standby regulator	Residual pressure relief valve
20			
30	EXA1-AC1	EXA1-AC2	EXA1-AC2
40			
60			EXA1-AC1

⑤ Communication Cable


For EtherCAT® **For PROFINET** **For EtherNet/IP™**

EX9-AC 005 EN-PSPS (With connector on both sides (Plug/Plug))

● Cable length (L)	
005	500 mm
010	1000 mm
020	2000 mm
030	3000 mm
050	5000 mm
100	10000 mm

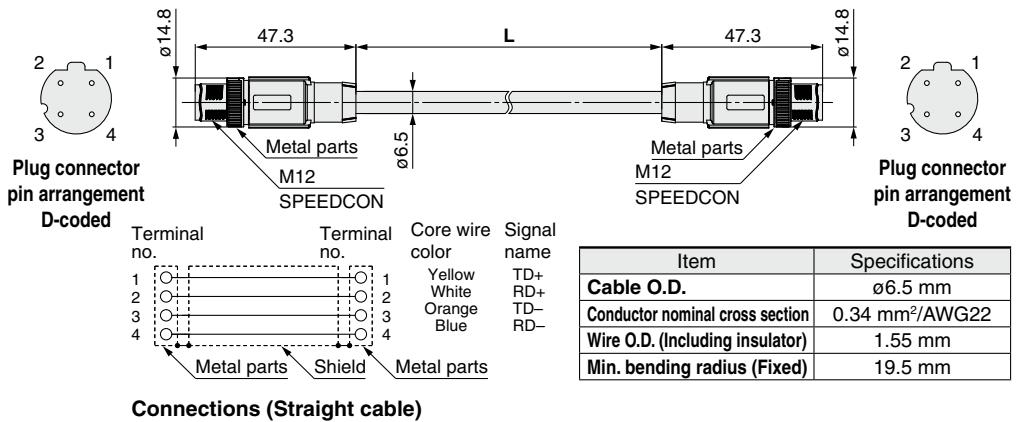**EX9-AC 005 EN-PAPA (With angled connector on both sides (Plug/Plug))**

● Cable length (L)	
005	500 mm
010	1000 mm
020	2000 mm
030	3000 mm
050	5000 mm
100	10000 mm

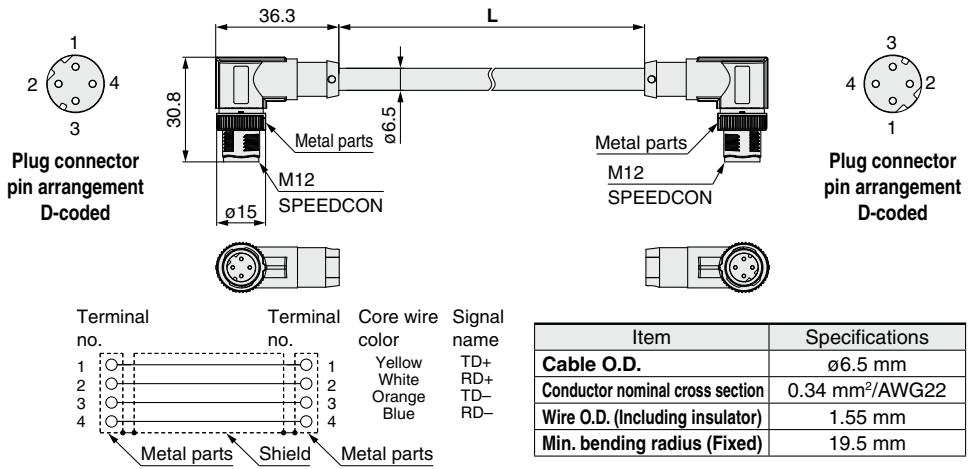

Connections (Straight cable)

AMS20A/30A/
40A/60A

AMS20B/30B/
40B/60B

EXA1

ITV2050 to 3050
-X399

AR20S to 50S

VP346E/546E/746E/
946E-X660/X661

Accessories

Related
Products

Specific Product
Precautions


AMS20/30/40/60 Series

⑤ Communication Cable

For EtherCAT® For PROFINET For EtherNet/IP™


EX9-AC 020 EN-PSRJ (Plug/RJ-45 connector)

• Cable length (L)	
010	1000 mm
020	2000 mm
030	3000 mm
050	5000 mm
100	10000 mm

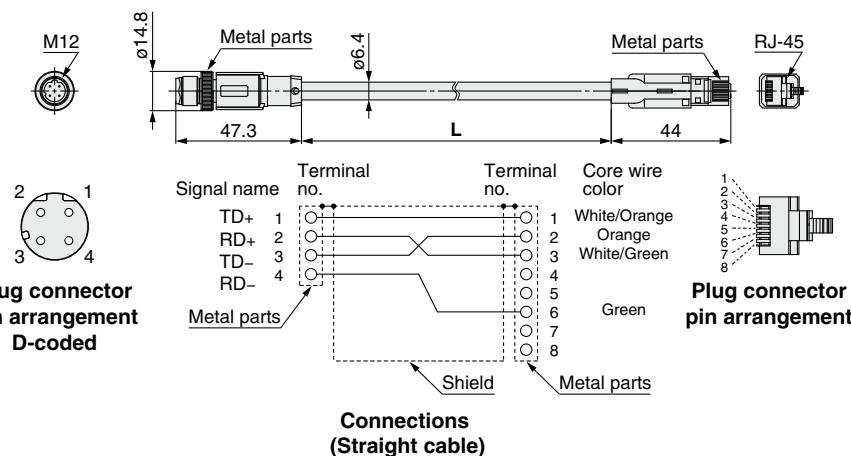

Item	Specifications
Cable O.D.	ø6.4 mm
Conductor nominal cross section	0.14 mm ² /AWG26
Wire O.D. (Including insulator)	0.98 mm
Min. bending radius (Fixed)	26 mm

PCA-1446566 (Plug)

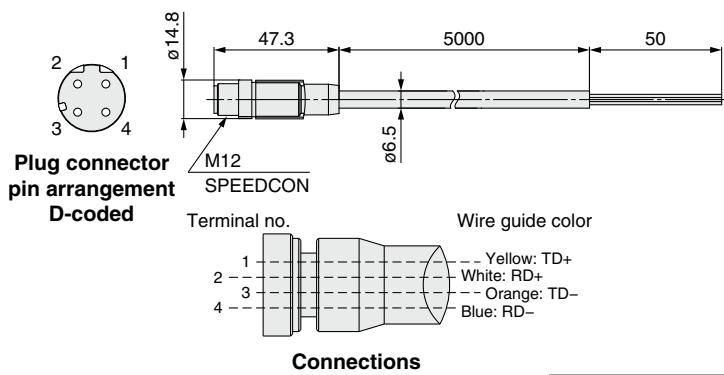

Item	Specifications
Cable O.D.	ø6.5 mm
Conductor nominal cross section	AWG22
Wire O.D. (Including insulator)	1.55 mm
Min. bending radius (Fixed)	45.5 mm


⑥ Connection cable and connector for connection component

(Standby input signal/Isolation input signal/IO-Link device/Input device/Output device) (M12)

IO-Link Device Cable

EX9-AC 005 -SSPS (With connector on both sides (Socket/Plug))

• Cable length (L)	
005	500 mm
010	1000 mm
020	2000 mm
030	3000 mm
050	5000 mm
100	10000 mm

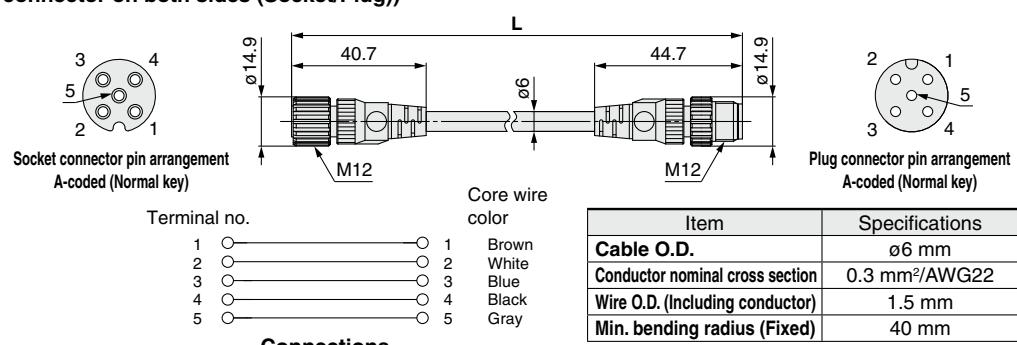

Item	Specifications
Cable O.D.	ø6 mm
Conductor nominal cross section	0.3 mm ² /AWG22
Wire O.D. (Including conductor)	1.5 mm
Min. bending radius (Fixed)	40 mm


⑥ Connection cable and connector for connection component (Standby input signal/Isolation input signal/IO-Link device/Input device/Output device) (M12)

IO-Link Device Cable

EX9-AC 005-SAPA (With connector on both sides (Socket/Plug))

• Cable length (L)


005	500 mm
010	1000 mm
020	2000 mm
030	3000 mm
050	5000 mm
100	10000 mm

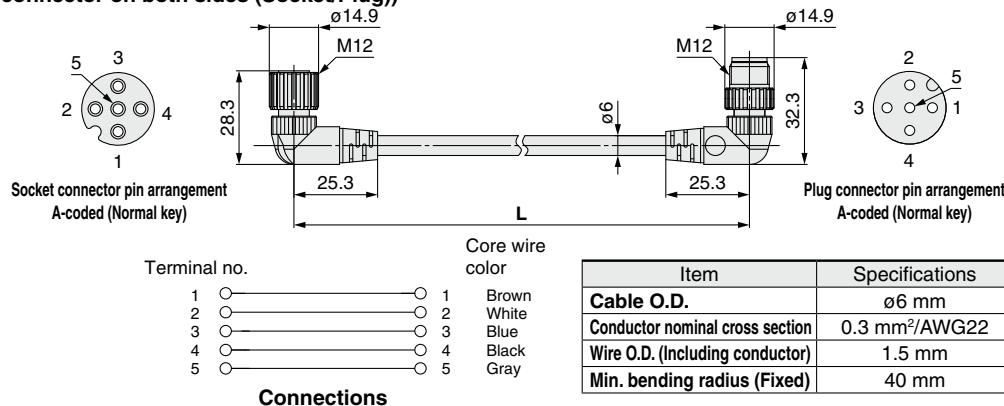


EX9-AC 030-7

• Cable length (L)

010	1000 [mm]
030	3000 [mm]

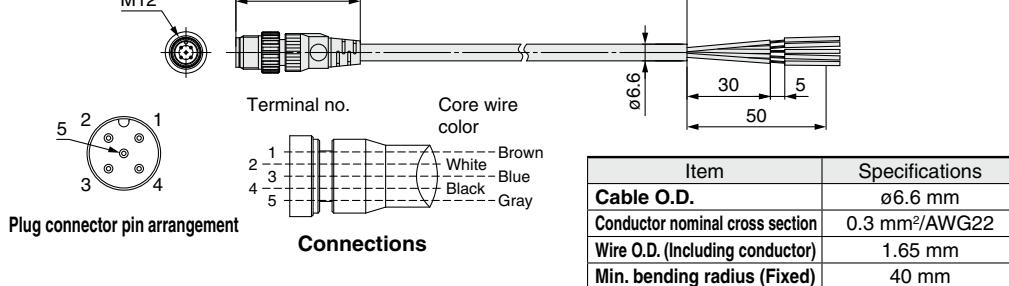

Standby input signal/Isolation input signal/Input device/Output device

Name	Use	Part no.	Description
Cable with connector	For sensor	 PCA-1557769	Cable with M12 connector (4 pins/3 m)
Field-wireable connector	For sensor	 PCA-1557743	Field-wireable connector (M12/4 pins/Plug/QUICKON-ONE connection/SPEEDCON)
		 PCA-1557756	
Y connector	For sensor	 PCA-1557785	Y connector (2 x M12 (5 pins)-M12 (5 pins)/SPEEDCON)
		 PCA-1557798	Y connector (2 x M8 (3 pins)-M12 (4 pins)/SPEEDCON)

* When using the Y connector, connect it to the connector on the I/O unit through the sensor cable (PCA-1557769) with the M12 connector.

⑦ Seal Cap (10 pcs.)

Be sure to mount a seal cap on any unused I/O connectors. Otherwise, the specified enclosure cannot be maintained.



EX9-AWES
For M8




EX9-AWTS
For M12

AMS20/30/40/60 Series

⑧ Piping Adapter

A piping adapter allows for the installation/removal of the component without removing the piping and thus makes maintenance easier.

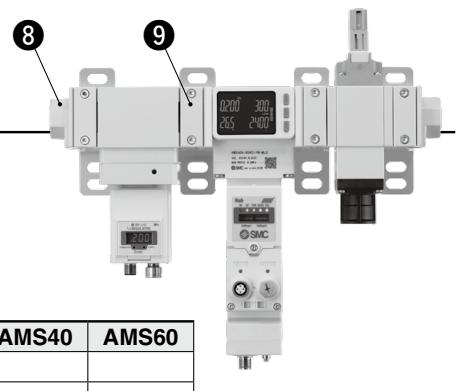


E 200 - □ 01 - D

Applicable size	
200	AMS20
300	AMS30
400	AMS40
600	AMS60

Thread type	
Symbol	Thread type
Nil	Rc
F	G
N	NPT


Symbol	Port size	AMS20	AMS30	AMS40	AMS60
01	1/8	●			
02	1/4	●	●		
03	3/8		●	●	
04	1/2			●	
06	3/4				●
10	1				●

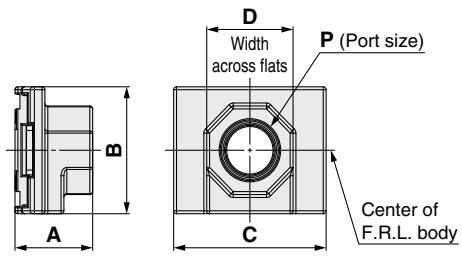



Model	P	A	B	C	D
E200-□01-D	1/8	24	35	42	24
E200-□02-D	1/4	24	35	42	24
E300-□02-D	1/4	27	43	53	30
E300-□03-D	3/8	27	43	53	30
E400-□03-D	3/8	30	51	71	36
E400-□04-D	1/2	30	51	71	36
E600-□06-D	3/4	39	64	90	46
E600-□10-D	1	39	64	90	46

* A spacer with bracket is required for modular unit.


⑨ Spacer with Bracket

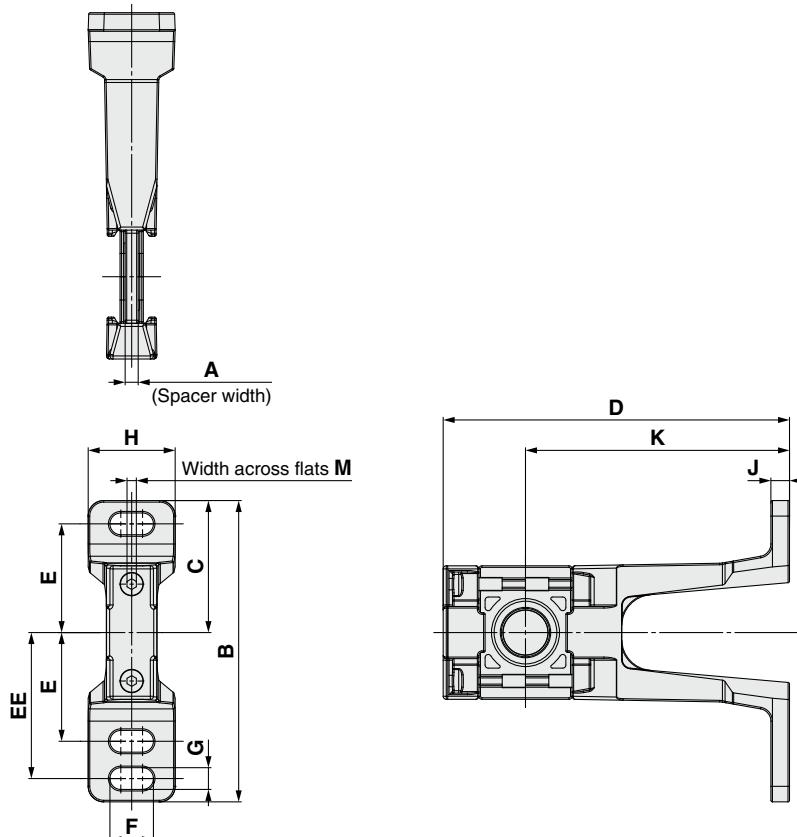


Model	A	B	C	D	E	EE	F	G	H	J	K	M	Applicable size
Y200T-2-D	3.2	97	42.5	106	35	47	14	7	28	6	85	2	AMS20
Y300T-2-D	4.2	97	42.5	111.5	35	47	14	7	28	6	85	3	AMS30
Y400T-1-D	5.2	115	50	120.5	40	55	18	9	32	7	85	3	AMS40
Y600T-2-D	6.2	140	60	145	50	70	20	11	37	8	100	4	AMS60

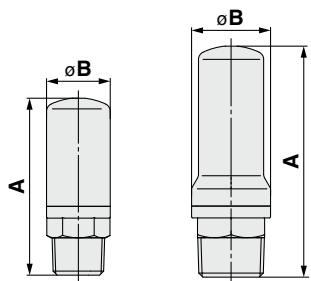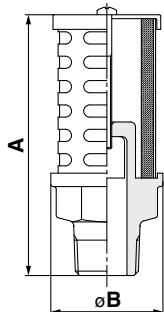⑩ Silencer**Compact Resin Type****AN20****AN30, AN40****Metal Body Type****AN500, 600****Dimensions**

Model	Port size R	A	B
AN20-02	1/4	45	16.5
AN30-03	3/8	58.5	20
AN40-04	1/2	68	24

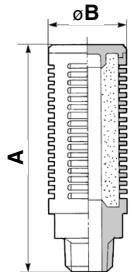High Noise Reduction Type**AN202 to 402****Dimensions**

Model	Port size R	A	B
AN202-02	1/4	64	22
AN302-03	3/8	84	28
AN402-04	1/2	95	34

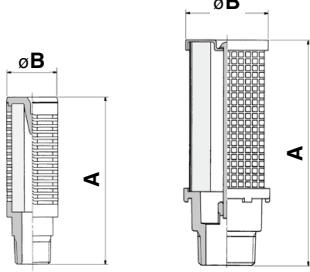High Noise Reduction Type**ANA1-06****ANA1-10****Dimensions**


Model	Port size R	A	B
ANA1-06	3/4	111	46
ANA1-10	1	132	50

Compatibility Chart for Residual Pressure Relief Valve and Silencers

	Silencer	Compact resin type			Metal type		High noise reduction type					
		Model	AN20-02	AN30-03	AN40-04	AN500-06	AN600-10	AN202-02	AN302-03	AN402-04	ANA1-06	ANA1-10
	Port size	1/4	3/8	1/2	3/4	1	1/4	3/8	1/2	3/4	1	
VP346E	X660 (N.C.)	○	—	—	—	—	○	—	—	—	—	—
	X661 (N.O.)	○	—	—	—	—	—	—	—	—	—	—
VP546E	X660 (N.C.)	—	○	—	—	—	—	○	—	—	—	—
	X661 (N.O.)	—	○	—	—	—	—	—	—	—	—	—
VP746E	X660 (N.C.)	—	—	○	—	—	—	—	○	—	—	—
	X661 (N.O.)	—	○	—	—	—	—	—	—	—	—	—
VP946E	X660 (N.C.)	—	—	—	—	○	—	—	—	—	—	○
	X661 (N.O.)	—	—	—	○	—	—	—	—	—	○	—

⑨ Marker (1 sheet, 88 pcs.)

The signal name of I/O device and each unit address can be entered and mounted on each unit.

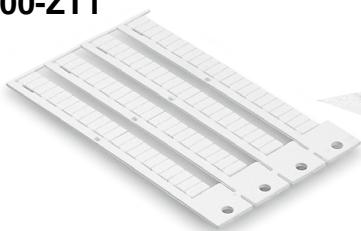
EX600-ZT1

AMS20/30/40/60 Series

⑫ Wireless Adapter Mounting Bracket


1 round head combination screw (M3 x 10) is included.

EXA-AB1

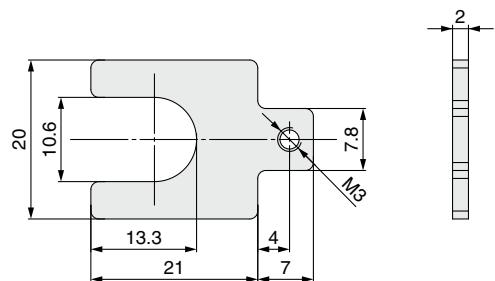

⑬ IO-Link Device Tool License Key

**USB dongle
EX9-ZSW-LDT1**

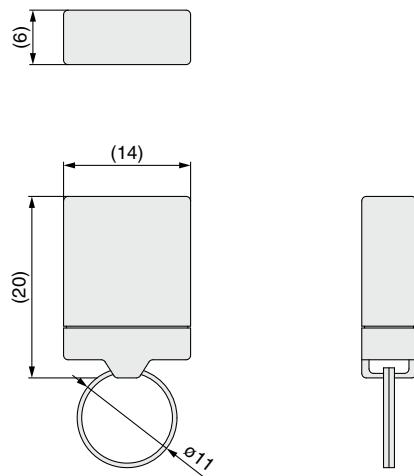

AMS20/30/40/60 Series Related Products

Compressed Air Preparation Filter Line Filter AFF-D



Series	Port size	Nominal filtration rating [μm]
AFF20 to 60-D	1/8, 1/4, 3/8, 1/2, 3/4, 1	1.0 [Filtration efficiency: 99%]

Air Filter AF-D



Series	Port size	Nominal filtration rating [μm]
AF20 to 60-D	1/8, 1/4, 3/8, 1/2, 3/4, 1	5

Filter Regulator AW-D



Series	Port size	Nominal filtration rating [μm]
AW20 to 60-D	1/8, 1/4, 3/8, 1/2, 3/4, 1	5

AMS20A/30A/
40A/60A

AMS20B/30B/
40B/60B

EXA1

ITV2050 to 3050
-X399

AR20S to 50S

VP346E/546E/746E/
946E-X660/X661

Accessories

Related
Products

Specific Product
Precautions

AMS20/30/40/60 Series

Made to order

Please contact SMC for detailed dimensions, specifications, and lead times.



Symbol
X101

1 Without Residual Pressure Relief 3-Port Solenoid Valve Specification

Combination of a standby electro-pneumatic regulator and an air management hub

AMS A - - - L G - X101

For "How to Order," refer to page 7.

Combination of a standby regulator and an air management hub

AMS B - D - - L - X101

For "How to Order," refer to page 13.

Symbol
X102

2 Without Standby (Electro-Pneumatic) Regulator Specification

Combination of an air management hub and a residual pressure relief 3-port solenoid valve

AMS A - - - L - X102

For "How to Order," refer to page 7.

Combination of an air management hub and a residual pressure relief 3-port solenoid valve (with soft start-up function)

AMS B - - - L - X102

* Port size: For the "00" type without attachments, the pipe thread type is fixed as "R."

For "How to Order," refer to page 13.



AMS20/30/40/60 Series

Specific Product Precautions 1

Be sure to read this before handling the products. Refer to the back cover for safety instructions. For common precautions, refer to the "Operation Manual" on the SMC website: <https://www.smeworld.com>

Design / Selection

⚠ Warning

1. Confirm the specifications.

Products represented in this catalog are designed only for use in compressed air systems.

Do not operate at flow rates, pressures, temperatures, etc., beyond the range of specifications, as this can cause damage or malfunction. (Refer to the specifications.)

Please contact SMC when using a fluid other than compressed air. We do not guarantee against any damage if the product is used outside of the specification range.

2. Do not disassemble the product or make any modifications, including additional machining.

Doing so may cause human injury and/or an accident.

⚠ Caution

1. Do not install in places where it can be used as a foothold.

Applying any excessive load such as stepping on the product by mistake or placing a foot on it will cause it to break.

2. If excessive carbon dust is generated by the compressor, it may adhere to the inside of this product and cause it to malfunction.

3. Slight scratches or dirt on the display or the product body will not cause any problems. Please continue to use the product.

Mounting

⚠ Warning

1. Operation manual

Install the products and operate them only after reading the operation manual carefully and understanding its contents. Also, keep the manual where it can be referred to as necessary.

2. Ensure sufficient space for maintenance activities.

When installing the products, allow access for maintenance and inspection.

3. Tighten threads with the proper tightening torque.

When installing the products, follow the listed torque specifications.

4. If air leakage increases or equipment does not operate normally, stop operation.

Check mounting conditions when air and power supplies are connected. Initial function and leakage tests should be performed after installation.

⚠ Caution

1. Do not use a lubricator on the supply side of this product, as doing so may result in a malfunction. When lubrication of terminal equipment is necessary, connect a lubricator on the output side of this equipment.

Piping

⚠ Warning

1. To screw piping material into a component, tighten with the recommended tightening torque while holding the female thread side.

If the tightening torque is insufficient, looseness or seal failure may occur. On the other hand, excess tightening torque can cause damage to the threads. Furthermore, tightening without holding the female thread side can cause damage due to the excess force that is applied directly to the piping bracket.

Recommended Tightening Torque

Unit: N·m

Connection thread	1/8	1/4	3/8	1/2	3/4	1
Torque	3 to 5	8 to 12	15 to 20	20 to 25	28 to 30	36 to 38

2. Avoid excessive torsional moment or bending moment other than those caused by the equipment's own weight, as this can cause damage.

Support external piping separately.

3. Piping materials without flexibility, such as steel tube piping, are prone to be affected by excess moment loads and vibrations from the piping side. Use flexible tubing in between to avoid such effects.


⚠ Caution

1. Preparation before piping

Before piping is connected, it should be thoroughly blown out with air (flushing) or washed to remove chips, cutting oil, and other debris from inside the pipe.

2. Winding of sealant tape

When screwing piping or fittings into ports, ensure that chips from the pipe threads or sealing material do not enter the piping. Also, if sealant tape is used, leave 1.5 to 2 thread ridges exposed at the end of the threads.

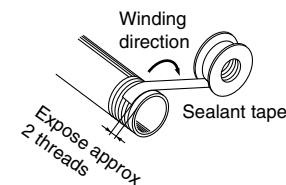



AMS20/30/40/60 Series

Specific Product Precautions 2

Be sure to read this before handling the products. Refer to the back cover for safety instructions. For common precautions, refer to the “Operation Manual” on the SMC website: <https://www.smeworld.com>

Air Supply

⚠ Warning

1. Type of fluids

Please consult with SMC when using the product in applications other than compressed air.

2. Take measures to ensure air quality, such as by installing an aftercooler, air dryer, or water separator.

Compressed air that contains a large amount of drainage can result in the malfunction of this product and other pneumatic equipment. Therefore, take appropriate measures to ensure air quality, such as by providing an aftercooler, air dryer, or water separator.

For compressed air quality, refer to the Air Preparation Equipment Selection Guide ([Web Catalog](#)).

3. Use clean compressed air.

Do not use compressed air that contains chemicals, synthetic oils that include organic solvents, salt, corrosive gases, etc., as it can cause damage or malfunction.

When synthetic oil is used for the compressor oil, depending on the type of synthetic oil used or on the conditions of use, there may be adverse effects on the resin of the pneumatic equipment or on the seals if the oil is flowed out to the outlet side. The mounting of a main line filter is recommended in such cases.

⚠ Caution

1. Ensure that the fluid and ambient temperatures are within the specified range.

When using at low temperatures, drain or moisture could solidify or freeze, causing damage to the seals or equipment malfunction. Therefore, take appropriate measures to prevent freezing.

For compressed air quality, refer to the Air Preparation Equipment Selection Guide ([Web Catalog](#)).

Operating Environment

⚠ Warning

6. If the product to be returned is contaminated or is possibly contaminated with substances that are harmful to humans, for safety reasons, please contact SMC beforehand and then employ a specialist cleaning company to decontaminate the product. After the decontamination prescribed above has been carried out, submit a Product Return Request Sheet or the Detoxification/Decontamination Certificate to SMC and await SMC's approval and further instructions before attempting to return the item.

Please refer to the International Chemical Safety Cards (ICSC) for a list of harmful substances.

If you have any further questions, please don't hesitate to contact your SMC sales representative.

Maintenance

⚠ Warning

1. Maintenance work

If handled improperly, compressed air can be dangerous. Maintenance of pneumatic systems should be performed by a knowledgeable and experienced person.

2. Removal of equipment, and supply/exhaust of compressed air

Before components are removed, first confirm that measures are in place to prevent workpieces from dropping, run-away equipment, etc. Then, cut off the supply pressure and electric power, and exhaust all compressed air from the system using the residual pressure release function.

Operating Environment

⚠ Warning

1. Do not use in an atmosphere containing corrosive gases, chemicals, sea water, water, water steam, or where there is direct contact with any of these.

2. Do not expose the product to direct sunlight for an extended period of time.

3. Do not use in a place subject to heavy vibration and/or shock.

4. Do not mount the product in locations where it is exposed to radiant heat.

5. Products compliant with IP65 satisfy the product specifications when mounted properly. Be sure to read the precautions for each product.

AMS20A/30A/
40A/60A

AMS20B/30B/
40B/60B

EXA1

ITV2050 to 3050
-X399

AR20S to 50S

VP346E/546E/746E/
946E-X660/X661

Accessories

Related
Products

Specific Product
Precautions



EXA1 Series

Specific Product Precautions 1

Be sure to read this before handling the products. Refer to the back cover for safety instructions. For common precautions, refer to the “Operation Manual” on the SMC website: <https://www.smeworld.com>

Design / Selection

⚠ Warning

1. Do not use beyond the specification range.

Using beyond the specification range may result in a fire, malfunction, or damage to the system.

Check the specifications before operation.

⚠ Caution

1. When applicable to UL, use a Class 2 power supply unit which is UL1310 compliant for direct current power supply.

2. Use within the specified voltage range.

Using beyond the specified voltage range is likely to cause damage product or malfunction.

3. Do not remove the name plate.

Improper maintenance or incorrect use of the Operation Manual may lead to equipment failure or malfunction. Also, there is a risk of losing conformity with safety standards.

4. Beware of inrush currents when the power supply is turned on.

Some connected loads can apply an initial charge current which will trigger the over current protection function, causing the product to malfunction.

Wiring

⚠ Caution

1. Provide grounding to improve noise immunity.

Perform the dedicated grounding separate from the inverter of the drive system and minimize the grounding distance from the product.

2. Avoid repeatedly bending or stretching the cable and applying heavy objects or force to it.

Wiring where repeated bending and tensile stress are applied to the cable may result in circuit breakage.

3. Avoid miswiring.

If miswired, there is a danger of malfunction or damage to the product.

4. Do not wire while energizing the product.

There is a danger of malfunction or damage to the product or input/output device.

5. Avoid wiring the power line and high-voltage line in parallel.

Signal line noise or surge from the power line or high-pressure line could cause a malfunction.

Wiring of the product or input/output device and the power line or high-voltage line should be separated from each other.

6. Check the wiring insulation.

Defective insulation (contact with other circuits, improper insulation between terminals, etc.) may cause damage to the product or input/output device due to excessive voltage or current.

7. When the product is installed in machinery/equipment, provide adequate protection against noise by using noise filters, etc.

Noise in signal lines may cause a malfunction.

8. When connecting wires, prevent the entry of water, solvent, or oil from the connector section.

Failure to do so may result in damage, equipment failure, or malfunction.

9. Avoid wiring patterns in which excessive stress is applied to the connector.

Failure to do so may result in equipment failure or malfunction due to contact failure.

Mounting

⚠ Warning

1. When handling and assembling products:

- Do not apply excessive force to the product when disassembling.

The connecting parts of the product are firmly joined with seals.

- When joining units, take care not to get your fingers caught between the products.

Injury may result.

2. Do not drop, bump, or apply excessive impact to the product.

Doing so may result in damage, equipment failure, or malfunction.



EXA1 Series

Specific Product Precautions 2

Be sure to read this before handling the products. Refer to the back cover for safety instructions. For common precautions, refer to the "Operation Manual" on the SMC website: <https://www.smeworld.com>

Operating Environment

⚠ Warning

1. Do not use in atmospheres containing inflammable or explosive gases.

Use in such atmospheres is likely to cause a fire or explosion. This product is not explosion proof.

⚠ Caution

1. Provide adequate protection when operating in locations such as the following.

Failure to do so may cause a malfunction or equipment failure. The effect of countermeasures should be checked in individual equipment and machines.

- 1) Where noise is generated by static electricity, etc.
- 2) Where there is a strong electric field
- 3) Where there is a danger of exposure to radiation
- 4) When in close proximity to power lines or high-voltage lines

2. Do not use in environments where oil and chemicals are used.

Operating in environments where coolants, cleaning solvents, various oils, or chemicals are present may cause adverse effects (damage, malfunction, etc.) to the product even within a short period of time.

3. Do not use in environments where the product could be exposed to corrosive gases or liquids.

Use in such environments may cause product damage or malfunction.

4. Do not use in locations with sources of surge generation.

Installation of the product in an area around equipment (electromagnetic lifters, high-frequency induction furnaces, welding machines, motors, etc.) which generates large surge voltages could cause an internal circuitry element of the product to deteriorate or result in damage. Implement countermeasures against the surge from the generating source, and avoid contact between the lines.

5. The product is CE/UKCA marked but not immune to lightning strikes. Take measures against lightning strikes in your system.

6. Keep dust, wire scraps, and other foreign matter from entering the product.

Such materials may cause equipment failure or malfunction.

7. Do not use in places where there are cyclic temperature changes.

When the cyclic temperature exceeds normal temperature changes, the internal product is likely to be adversely affected.

Adjustment / Operation

⚠ Warning

1. Do not perform operation or setting with wet hands.

There is a risk of electrical shock.

⚠ Caution

1. Use a watchmaker's screwdriver with a thin blade for the setting switch.

When setting the switch, do not touch any unrelated parts. This may cause parts damage or malfunction due to a short circuit.

2. Perform appropriate setting for the operating conditions.

Failure to do so could result in malfunction. Refer to the Operation Manual for details on setting each switch.

3. For details on programming and address setting, refer to the manual from the PLC manufacturer.

The programming content related to the protocol is designed by the manufacturer of the PLC used.

AMS20A/30A/
40A/60A

AMS20B/30B/
40B/60B

EXA1

ITV2050 to 3050
-X399

AR20S to 50S

VP346E/546E/746E/
946E-X660/X661

Accessories

Related Products

Specific Product
Precautions



ITV2050 to 3050-X399

Specific Product Precautions

Be sure to read this before handling the products. Refer to the back cover for safety instructions. For common precautions, refer to the "Operation Manual" on the SMC website: <https://www.smeworld.com>

Handling

⚠ Caution

- 1. If the power supply to this product is turned off due to a power failure during operation, the output on the secondary side depends on the specifications.**

Normally closed specification:
The output pressure is held.

Normally open specification:
Supply pressure minus 0.1 MPa or more pressure continues to flow out.
- 2. If supply pressure to this product is interrupted or shut off, while the power is still on, the internal solenoid valve will continue to operate and a humming noise will be generated.**

Since it may greatly affect the life of the built-in solenoid valve, when shutting off the supply pressure, turn off the power of this product or set the solenoid valve stop time.
- 3. This product is adjusted for each specification at the time of shipment from the factory. Avoid careless disassembly or removal of parts, as failure to do so may result in a malfunction.**
- 4. When connecting the cable to this product, turn the lock ring of the cable. If a portion other than the lock ring of the cable is turned, it may damage the connector on the body. Turn the lock ring by hand without using a tool.**
- 5. The right angle cable does not rotate and is limited to only one entry direction. If the right angle cable is rotated forcibly, the cable may be broken or damaged, or may damage the connector on the body.**
- 6. Specifications on page 25 are in case of static environment. Pressure may fluctuate when air is consumed at the output side.**



AR20S to 50S Series Specific Product Precautions 1

Be sure to read this before handling the products. Refer to the back cover for safety instructions. For common precautions, refer to the "Operation Manual" on the SMC website: <https://www.smeworld.com>


Design / Selection

⚠ Warning

- Provide ventilation when using this product in a confined area, such as in a closed control panel. For example, install a ventilation opening, etc., in order to prevent pressure from increasing inside of the confined area and to release the heat generated by this product.
- Polyacetal resin parts are used for the exterior. Organic solvents including thinner, acetone, alcohol and ethylene chloride; chemicals including sulphuric acid, nitric acid and hydrochloric acid; cutting oil, synthetic oils, ester-based compressor oil, alkali, kerosene, gasoline, lock material of screw are harmful. Do not use the product where these are present.

⚠ Caution

- Pay attention to the leakage voltage. Particularly when using a C-R element (surge voltage suppressor) to protect the switching element, take note that leakage current will flow through the C-R element, thus increasing leakage voltage.

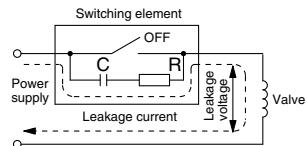

AC coil is 8% or less of the rated voltage.

DC coil is 3% or less of the rated voltage.

- Use caution when operating at low temperatures. Although this product can be operated at temperature as low as 0°C, measures should be taken to avoid solidifying or freezing drainage or moisture, etc.

3. Surge voltage suppressor

The surge voltage suppressor built into the valve is intended to protect the output contacts so that the surge generated inside valve does not adversely affect the output contacts. Therefore, if an overvoltage or overcurrent is received from an external peripheral device, the surge voltage protection element inside the valve is overloaded, causing the element to break. In the worst case, the breakage causes the electric circuit to enter short-circuit status. If energizing continues while in this state, a large current flows. This may cause secondary damage to the output circuit, external peripheral device, or valve, and may also cause a fire. So, take appropriate protective measures, such as the installation of an overcurrent protection circuit in the power supply or a drive circuit to maintain a sufficient level of safety.


Adjustment

⚠ Warning

- Set the regulator while verifying the displayed values of the inlet and outlet pressure gauges. Turning the regulator knob excessively can cause damage to the internal parts.
- Do not use tools on the pressure regulator knob as this may cause damage. It must be operated manually.

⚠ Caution

- When setting the pressure, the inlet pressure must be supplied after the pilot valve is powered.
- Be sure to unlock the knob before adjusting the pressure and lock it after setting the pressure. Failure to follow this procedure can cause damage to the knob and the outlet pressure may fluctuate.
 - Pull the pressure regulator knob to unlock. (You can visually verify this with the "orange mark" that appears in the gap.)
 - Push the pressure regulator knob to lock. When the knob is not easily locked, turn it left and right a little and then push it (when the knob is locked, the "orange mark", i.e., the gap will disappear).

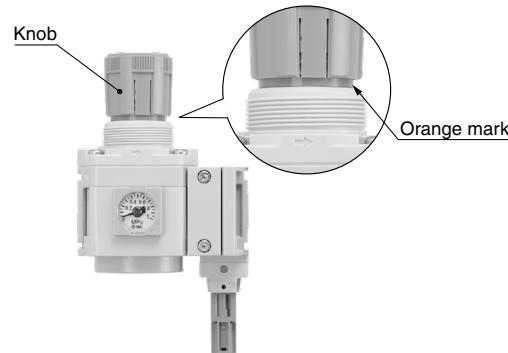

AMS20A/30A/
40A/60A

AMS20B/30B/
40B/60B

EXA1

ITV2050 to 3050
-X399

AR20S to 50S

VP346E/546E/746E/
946E-X660/X661

Accessories

Related
Products

Specific Product
Precautions



AR20S to 50S Series Specific Product Precautions 2

Be sure to read this before handling the products. Refer to the back cover for safety instructions. For common precautions, refer to the “Operation Manual” on the SMC website: <https://www.smeworld.com>

Wiring

⚠ Warning

1. The solenoid valve is an electrical product. For safety, install an appropriate fuse and circuit breaker before use.

Operating Environment

⚠ Warning

1. When the solenoid valve is mounted in a control panel or it's energized for a long period of time, make sure the ambient temperature is within the specifications of the valve.

Maintenance

⚠ Warning

1. Low-frequency operation

Valves should be operated at least once every 30 days to prevent malfunction. (Use caution regarding the air supply.)

2. Manual override

When a manual override is operated, connected equipment will be actuated. Operate only after safety is confirmed.

• Non-locking push type

Push down on the manual override with a small screwdriver, etc., until it stops. Release the screwdriver and the manual override will return.

• Push-turn locking lever type

When locking the manual override, be sure to push it down before turning. Do not apply excessive torque as turning without first pushing it down can cause damage to the manual override and trouble such as air leakage. (0.1 N·m)



Specific Product Precautions 1

Be sure to read this before handling the products. Refer to the back cover for safety instructions. For common precautions, refer to the "Operation Manual" on the SMC website: <https://www.smeworld.com>

Design / Selection

⚠ Warning

1. Resumption after a long period of holding time

When resuming operation after a long period of holding time, there are cases in which, regardless of whether the product is in an ON or OFF state, there is a delay in the initial response time due to adhesion. Conducting several cycles of running-in operation will solve this problem. Please consider implementing this before resumption.

⚠ Caution

1. Surge voltage suppressor

1) The surge voltage suppressor built into the valve is intended to protect the output contacts so that the surge generated inside valve does not adversely affect the output contacts. Therefore, if an overvoltage or overcurrent is received from an external peripheral device, the surge voltage protection element inside the valve is overloaded, causing the element to break. In the worst case, the breakage causes the electric circuit to enter short-circuit status. If energizing continues while in this state, a large current flows. This may cause secondary damage to the output circuit, external peripheral device, or valve, and may also cause a fire. So, take appropriate protective measures, such as the installation of an overcurrent protection circuit in the power supply or a drive circuit to maintain a sufficient level of safety.

2) If a surge protection circuit contains nonstandard diodes, such as Zener diodes or varistor, a residual voltage that is in proportion to the protective circuit and the rated voltage will remain. Therefore, take into consideration the surge voltage protection of the controller.

2. For the pilot EXH port (breathing hole)

If the valve pilot EXH port (breathing hole) is restricted extremely or blocked, abnormal operation of the valve may occur.

Piping

⚠ Caution

1. Silencer mounting

For handling of silencers, refer to the AN series/specific product precautions.

Handling

⚠ Warning

1. Built-in check valve


A check valve is built into the pilot flow path to suppress the pilot pressure drop due to pressure fluctuation on the inlet side. When replacing pilot valve, please be careful for residual pressure between check valve and pilot valve.

Adjustment


⚠ Caution

1. Soft start-up function


When the soft start-up function is selected, the initial pressure of the pneumatic system can be increased gradually.

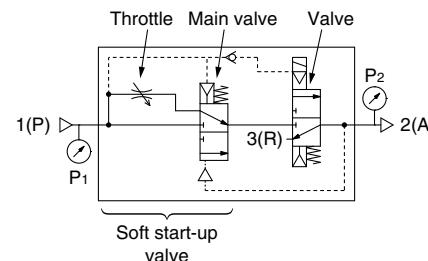

Output Pressure (P2) vs Time Graph

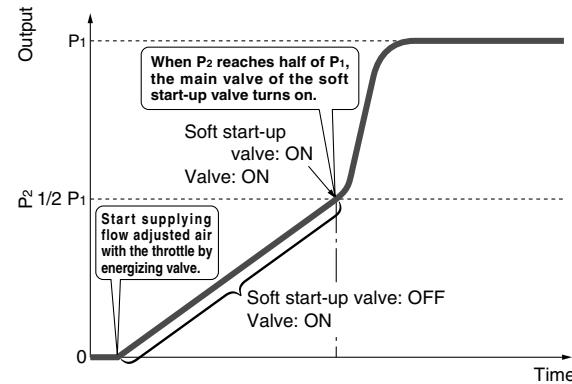

Turn the needle of the throttle valve to the left from fully closed (as shipped) to adjust the initial speed of the drive equipment on the outlet side.

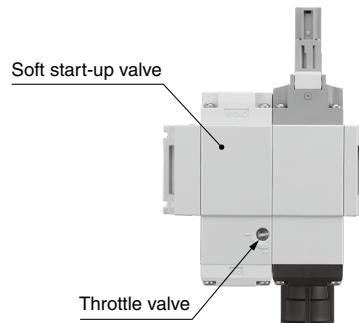

AMS20A/30A/
40A/60A

AMS20B/30B/
40B/60B

EXA1

ITV2050 to 3050
-X399

AR20S to 50S

VP346E/546E/746E/
946E-X660/X661

Accessories

Related
Products

Specific Product
Precautions

VP346E/546E/746E/946E-X660/X661

Specific Product Precautions 2



Be sure to read this before handling the products. Refer to the back cover for safety instructions. For common precautions, refer to the “Operation Manual” on the SMC website: <https://www.smeworld.com>

Wiring

⚠ Warning

1. The solenoid valve is an electrical product. For safety, install an appropriate fuse and circuit breaker before use.

Operating Environment

⚠ Warning

1. When the solenoid valve is mounted in a control panel or it's energized for a long period of time, make sure the ambient temperature is within the specifications of the valve.

Maintenance

⚠ Warning

1. Low-frequency operation

Valves should be operated at least once every 30 days to prevent malfunction. (Use caution regarding the air supply.)

2. Manual override

When a manual override is operated, connected equipment will be actuated. Operate only after safety is confirmed.

Safety Instructions

These safety instructions are intended to prevent hazardous situations and/or equipment damage. These instructions indicate the level of potential hazard with the labels of “Caution,” “Warning” or “Danger.” They are all important notes for safety and must be followed in addition to International Standards (ISO/IEC)*1, and other safety regulations.

Caution: Caution indicates a hazard with a low level of risk which, if not avoided, could result in minor or moderate injury.

Warning: Warning indicates a hazard with a medium level of risk which, if not avoided, could result in death or serious injury.

Danger : Danger indicates a hazard with a high level of risk which, if not avoided, will result in death or serious injury.

*1) ISO 4414: Pneumatic fluid power – General rules relating to systems.
ISO 4413: Hydraulic fluid power – General rules relating to systems.
IEC 60204-1: Safety of machinery – Electrical equipment of machines.
(Part 1: General requirements)
ISO 10218-1: Manipulating industrial robots – Safety.
etc.

Warning

1. The compatibility of the product is the responsibility of the person who designs the equipment or decides its specifications.

Since the product specified here is used under various operating conditions, its compatibility with specific equipment must be decided by the person who designs the equipment or decides its specifications based on necessary analysis and test results. The expected performance and safety assurance of the equipment will be the responsibility of the person who has determined its compatibility with the product. This person should also continuously review all specifications of the product referring to its latest catalog information, with a view to giving due consideration to any possibility of equipment failure when configuring the equipment.

2. Only personnel with appropriate training should operate machinery and equipment.

The product specified here may become unsafe if handled incorrectly. The assembly, operation and maintenance of machines or equipment including our products must be performed by an operator who is appropriately trained and experienced.

3. Do not service or attempt to remove product and machinery/equipment until safety is confirmed.

1. The inspection and maintenance of machinery/equipment should only be performed after measures to prevent falling or runaway of the driven objects have been confirmed.
2. When the product is to be removed, confirm that the safety measures as mentioned above are implemented and the power from any appropriate source is cut, and read and understand the specific product precautions of all relevant products carefully.
3. Before machinery/equipment is restarted, take measures to prevent unexpected operation and malfunction.

4. Contact SMC beforehand and take special consideration of safety measures if the product is to be used in any of the following conditions.

1. Conditions and environments outside of the given specifications, or use outdoors or in a place exposed to direct sunlight.
2. Installation on equipment in conjunction with atomic energy, railways, air navigation, space, shipping, vehicles, military, medical treatment, combustion and recreation, or equipment in contact with food and beverages, emergency stop circuits, clutch and brake circuits in press applications, safety equipment or other applications unsuitable for the standard specifications described in the product catalog.
3. An application which could have negative effects on people, property, or animals requiring special safety analysis.
4. Use in an interlock circuit, which requires the provision of double interlock for possible failure by using a mechanical protective function, and periodical checks to confirm proper operation.

Caution

1. The product is provided for use in manufacturing industries.

The product herein described is basically provided for peaceful use in manufacturing industries.
If considering using the product in other industries, consult SMC beforehand and exchange specifications or a contract if necessary.
If anything is unclear, contact your nearest sales branch.

Limited warranty and Disclaimer/Compliance Requirements

The product used is subject to the following “Limited warranty and Disclaimer” and “Compliance Requirements”.

Read and accept them before using the product.

Limited warranty and Disclaimer

1. The warranty period of the product is 1 year in service or 1.5 years after the product is delivered, whichever is first.*2
Also, the product may have specified durability, running distance or replacement parts. Please consult your nearest sales branch.
2. For any failure or damage reported within the warranty period which is clearly our responsibility, a replacement product or necessary parts will be provided.
This limited warranty applies only to our product independently, and not to any other damage incurred due to the failure of the product.
3. Prior to using SMC products, please read and understand the warranty terms and disclaimers noted in the specified catalog for the particular products.

*2) Vacuum pads are excluded from this 1 year warranty.

A vacuum pad is a consumable part, so it is warranted for a year after it is delivered.
Also, even within the warranty period, the wear of a product due to the use of the vacuum pad or failure due to the deterioration of rubber material are not covered by the limited warranty.

Compliance Requirements

1. The use of SMC products with production equipment for the manufacture of weapons of mass destruction (WMD) or any other weapon is strictly prohibited.
2. The exports of SMC products or technology from one country to another are governed by the relevant security laws and regulations of the countries involved in the transaction. Prior to the shipment of a SMC product to another country, assure that all local rules governing that export are known and followed.

Caution

SMC products are not intended for use as instruments for legal metrology.

Measurement instruments that SMC manufactures or sells have not been qualified by type approval tests relevant to the metrology (measurement) laws of each country. Therefore, SMC products cannot be used for business or certification ordained by the metrology (measurement) laws of each country.

Revision History

Edition B * EtherCAT has been added as a communication protocol.
* The number of pages has been increased from 64 to 48.

Safety Instructions Be sure to read the “Handling Precautions for SMC Products” (M-E03-3) and “Operation Manual” before use.

SMC Corporation

Akihabara UDX 15F,
4-14-1, Sotokanda, Chiyoda-ku, Tokyo 101-0021, JAPAN
Phone: 03-5207-8249 Fax: 03-5298-5362
<https://www.smcwORLD.com>
© 2023 SMC Corporation All Rights Reserved

Specifications are subject to change without prior notice
and any obligation on the part of the manufacturer.